

PROBLEM SYMPTOMS TABLE

HINT:

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none"> When the power switch is on (IG), the SRS warning light sometimes comes on after approximately 6 seconds. The SRS warning light remains on when DTC is not output. 	<ul style="list-style-type: none"> SRS Warning Light Circuit Malfunction (Remains on when DTC is not output) 	05-1648
<ul style="list-style-type: none"> The SRS warning light does not come on with the power switch on (IG). 	<ul style="list-style-type: none"> SRS Warning Light Circuit Malfunction (Does not come on when the power switch is turned on (IG)). 	05-1653
<ul style="list-style-type: none"> SRS warning light is blink. DTC cannot read. 	<ul style="list-style-type: none"> TC Terminal Circuit 	05-1655