



- \* 1 : A/T
- \* 3 : w/ Entry & Start System
- \* 7 : w/o Entry & Start System

- \*11 : Korea
- \*13 : w/ Fuel Pump Control ECU Assembly
- \*15 : w/ Mirror Heater




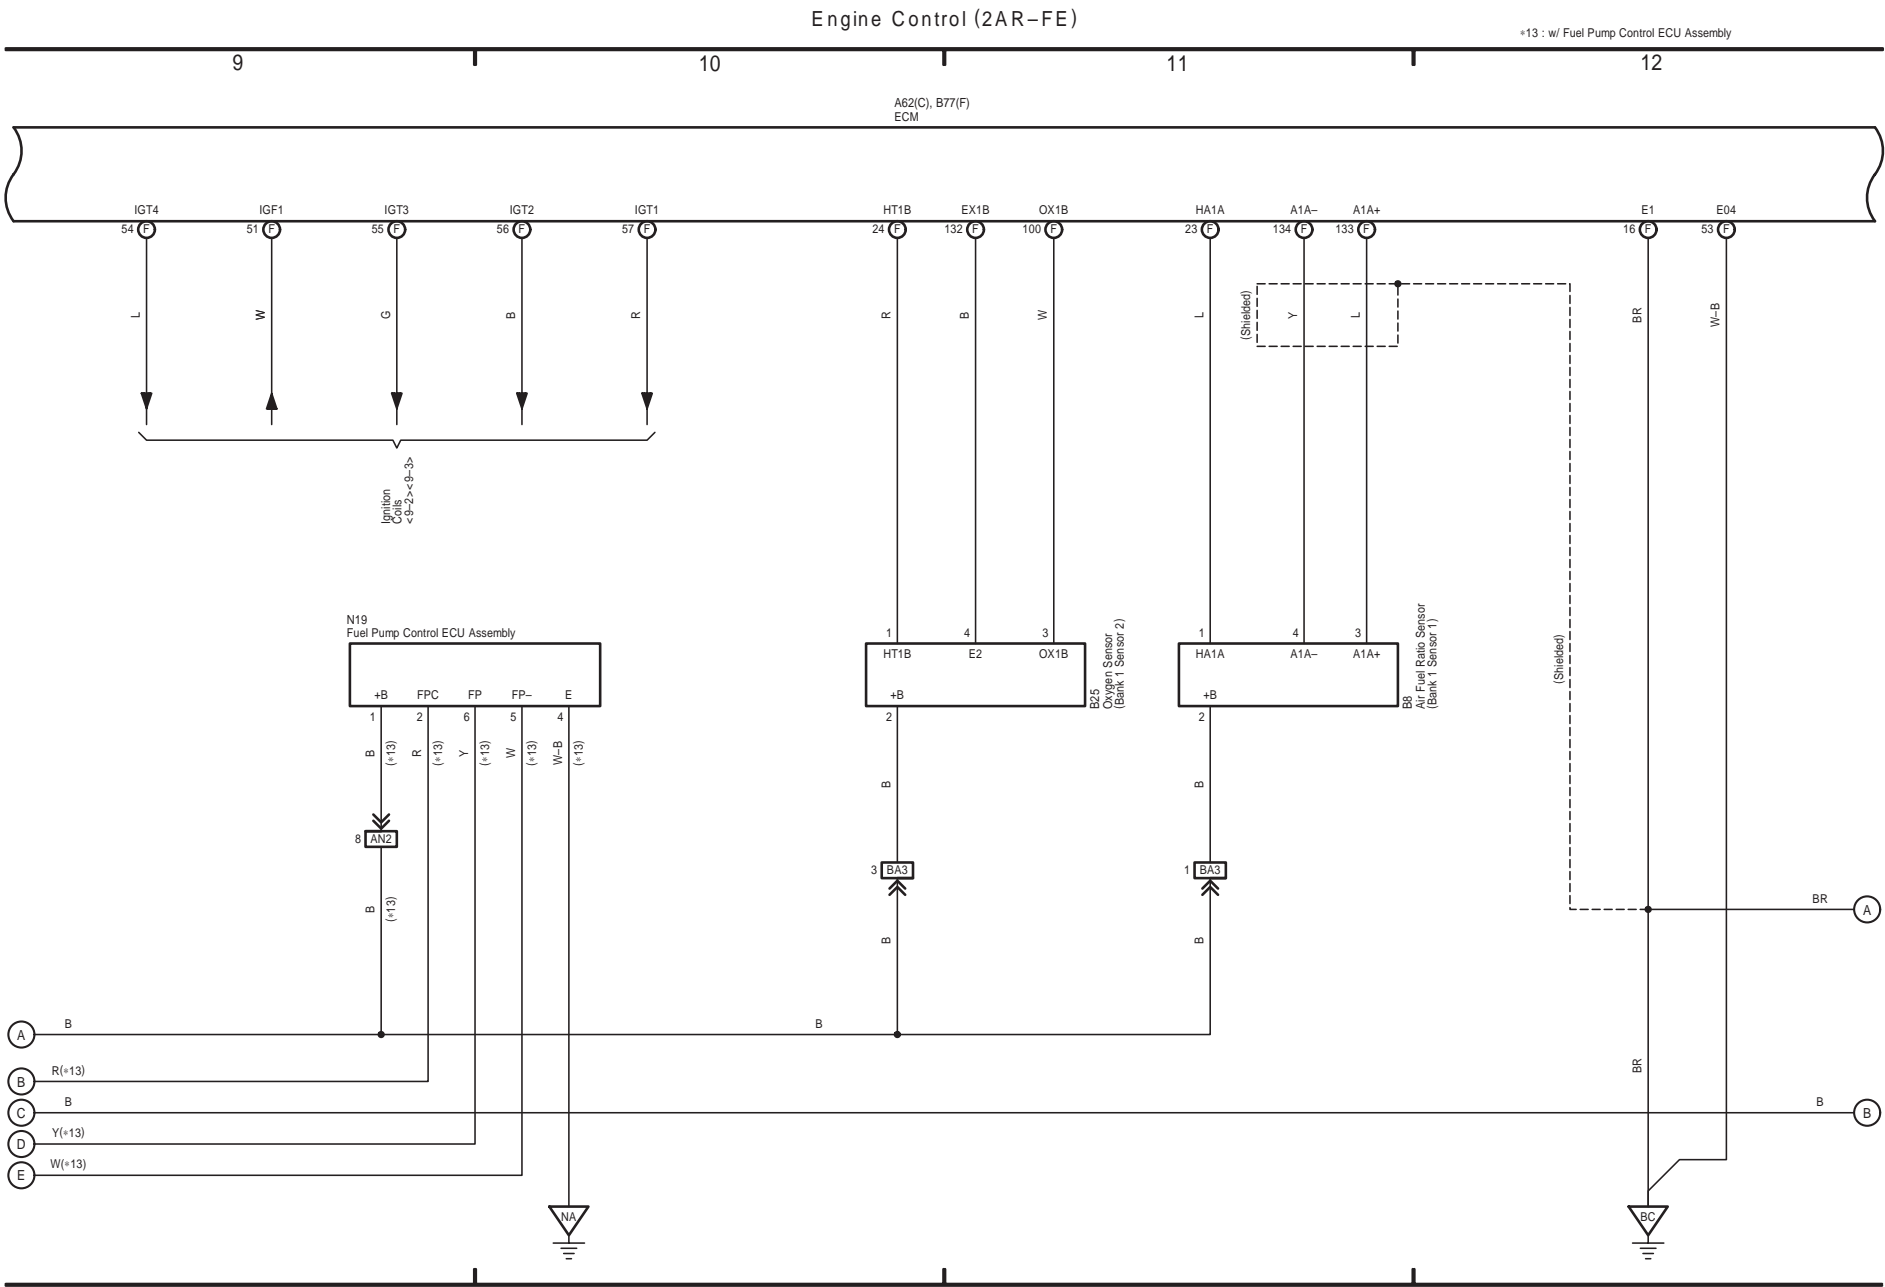



Engine Control (2AR-FE)

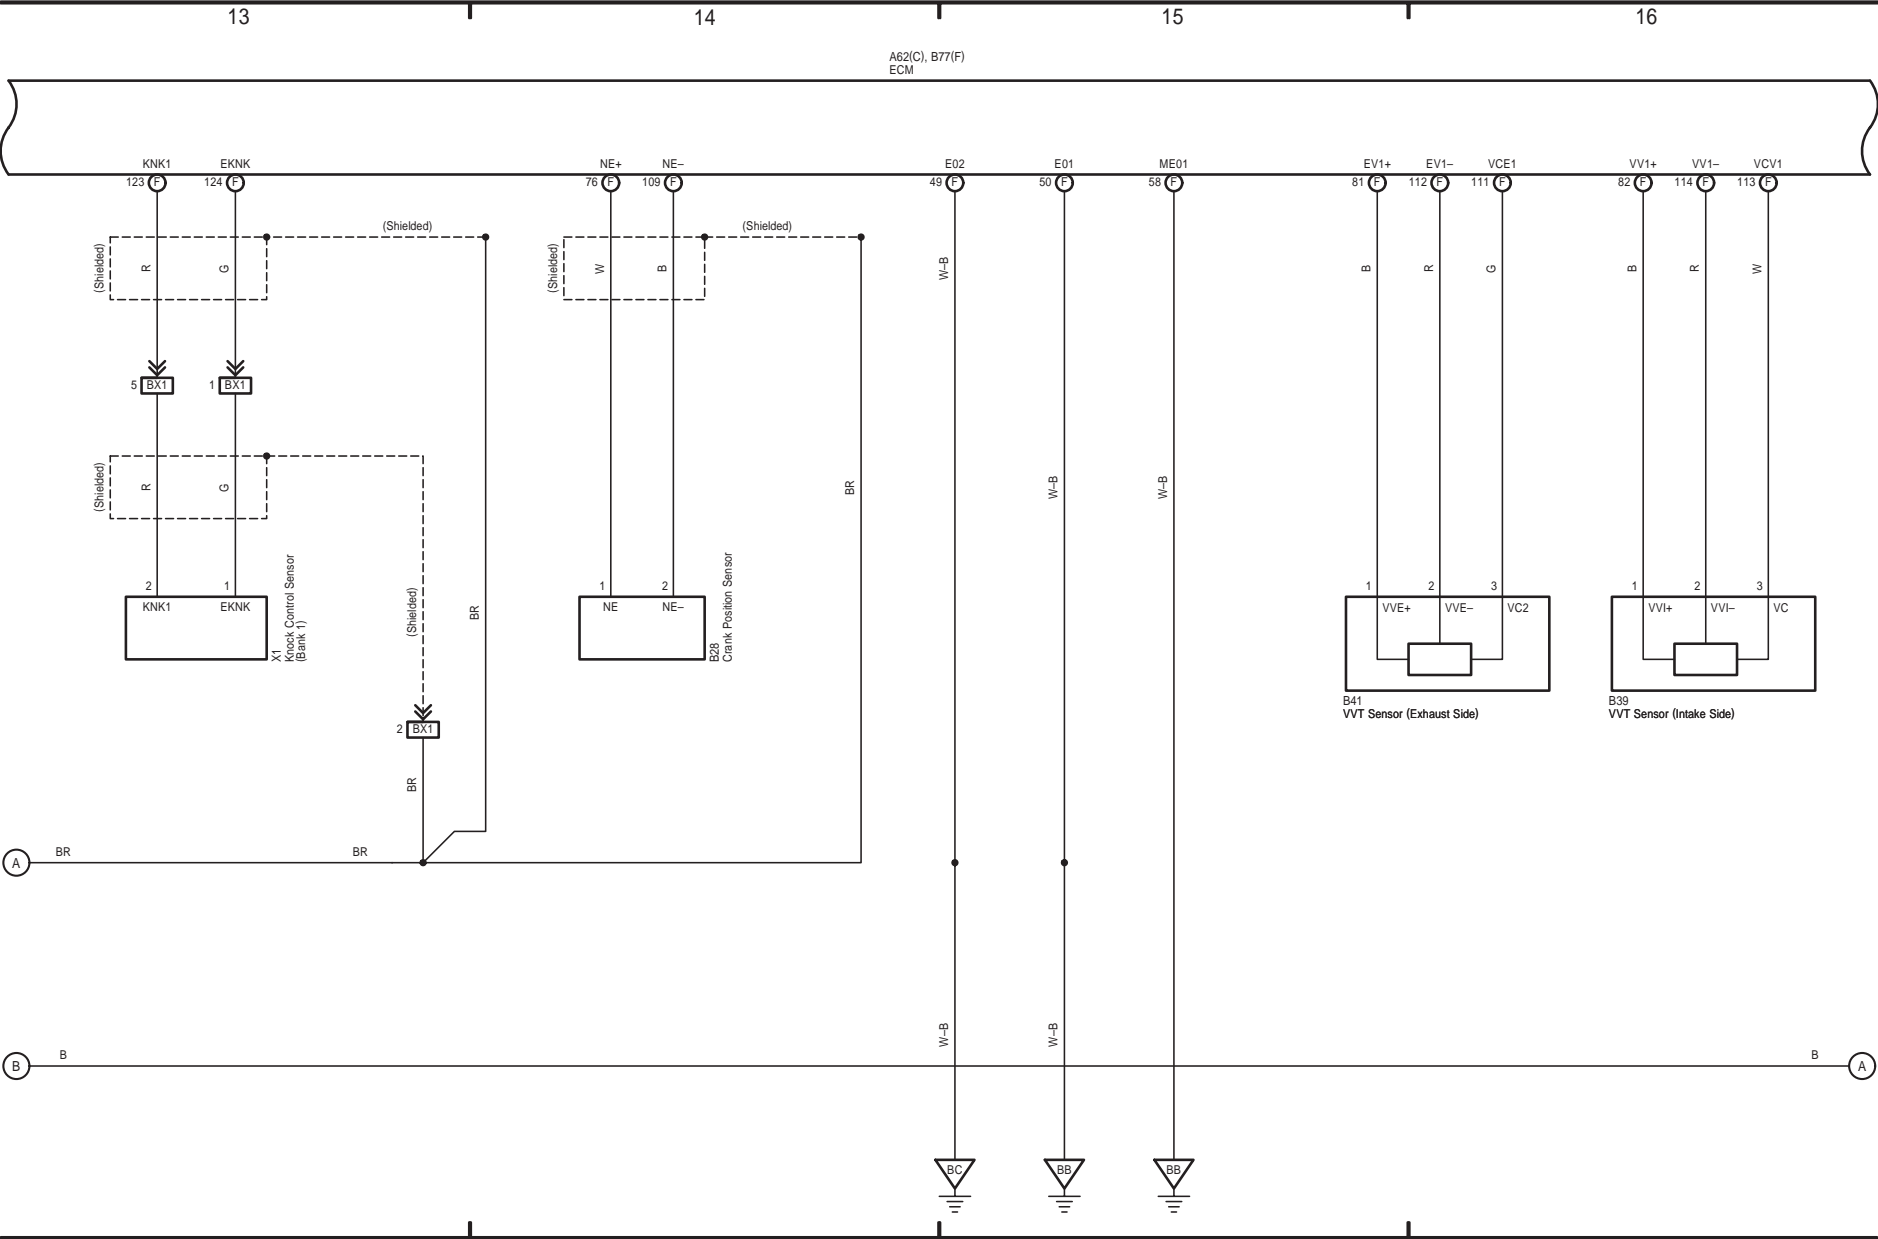

TOYOTA RAV4 (EM3090E)

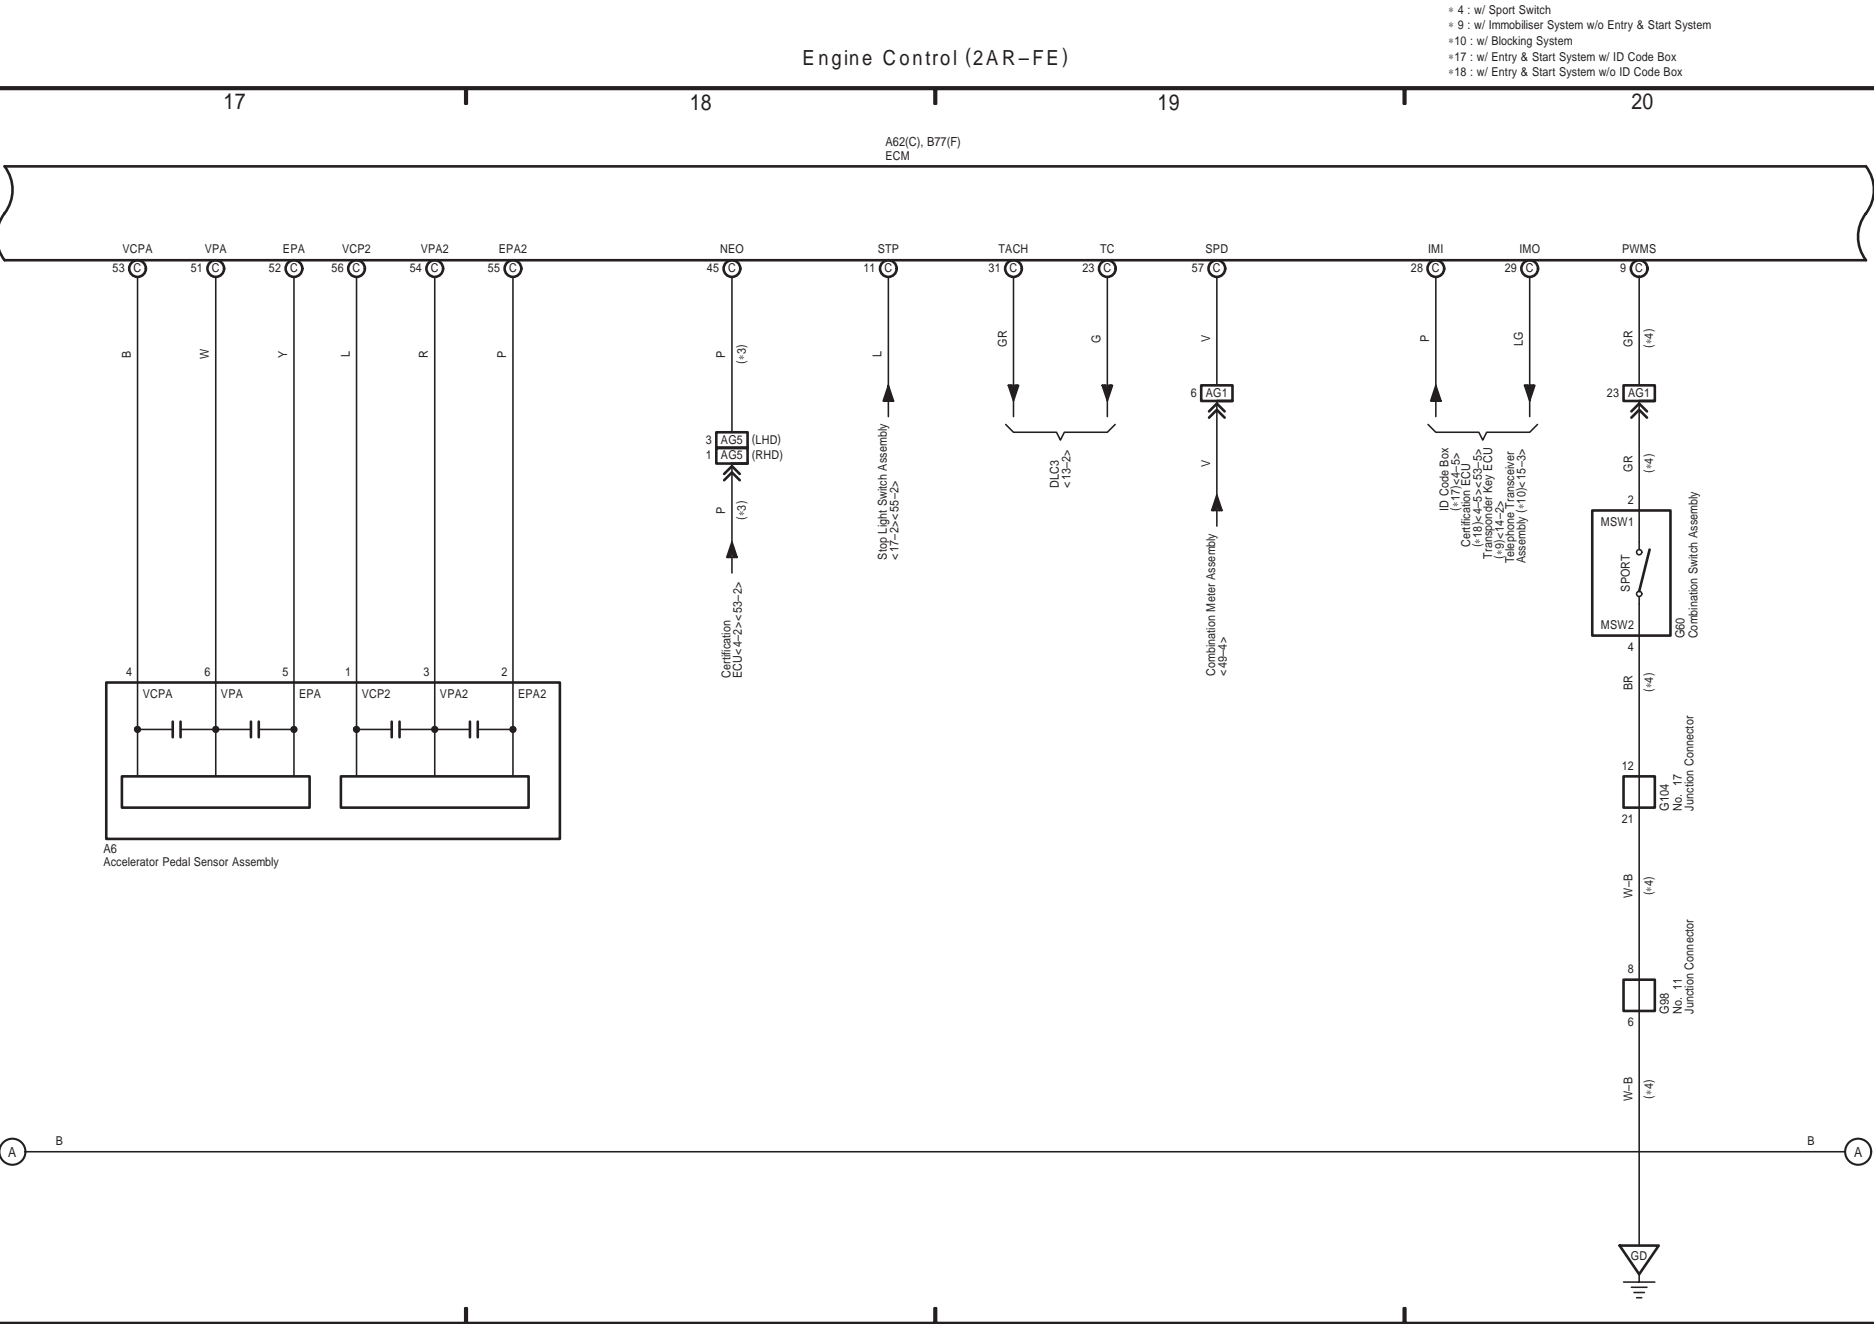

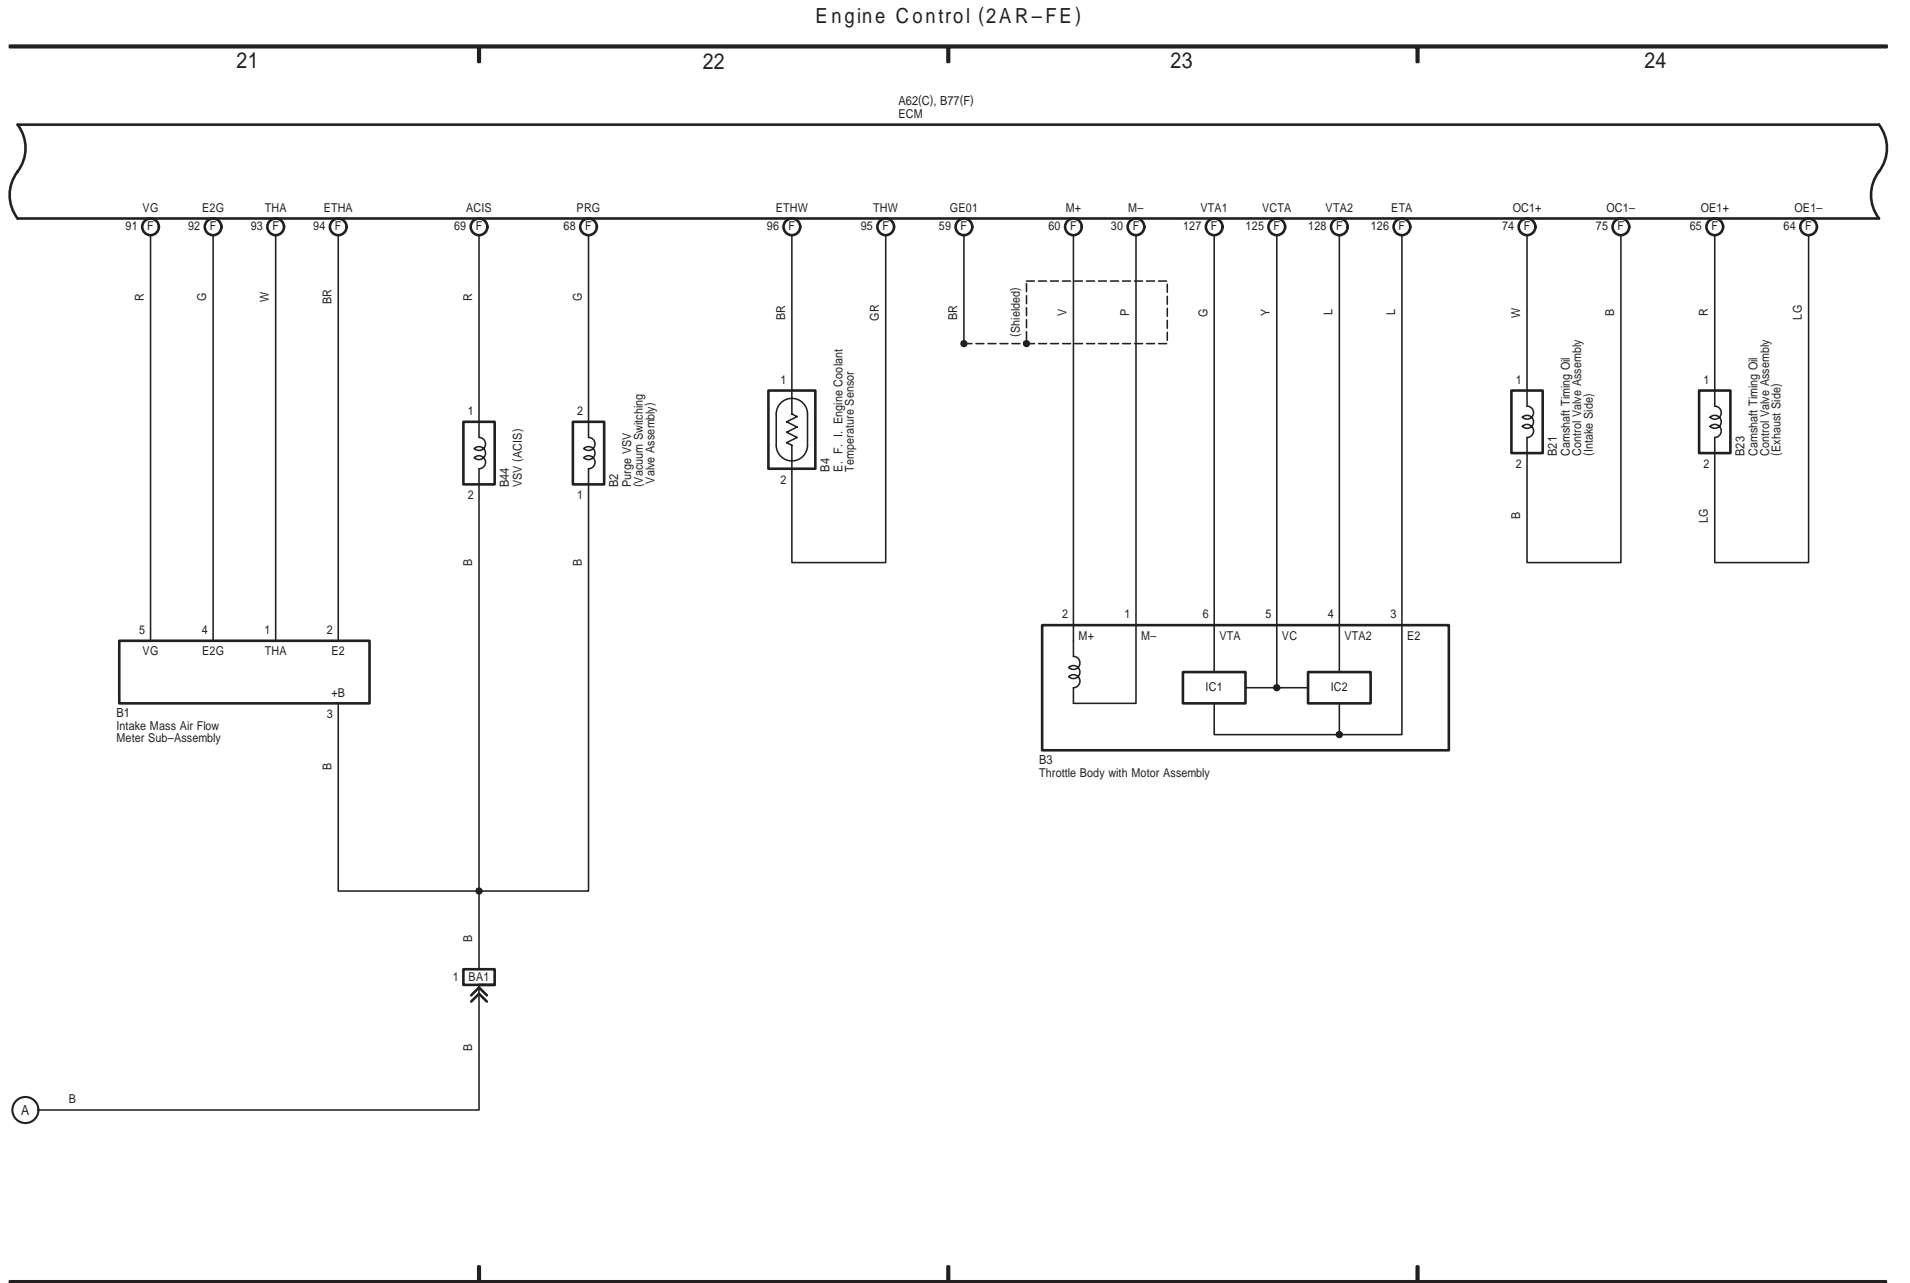

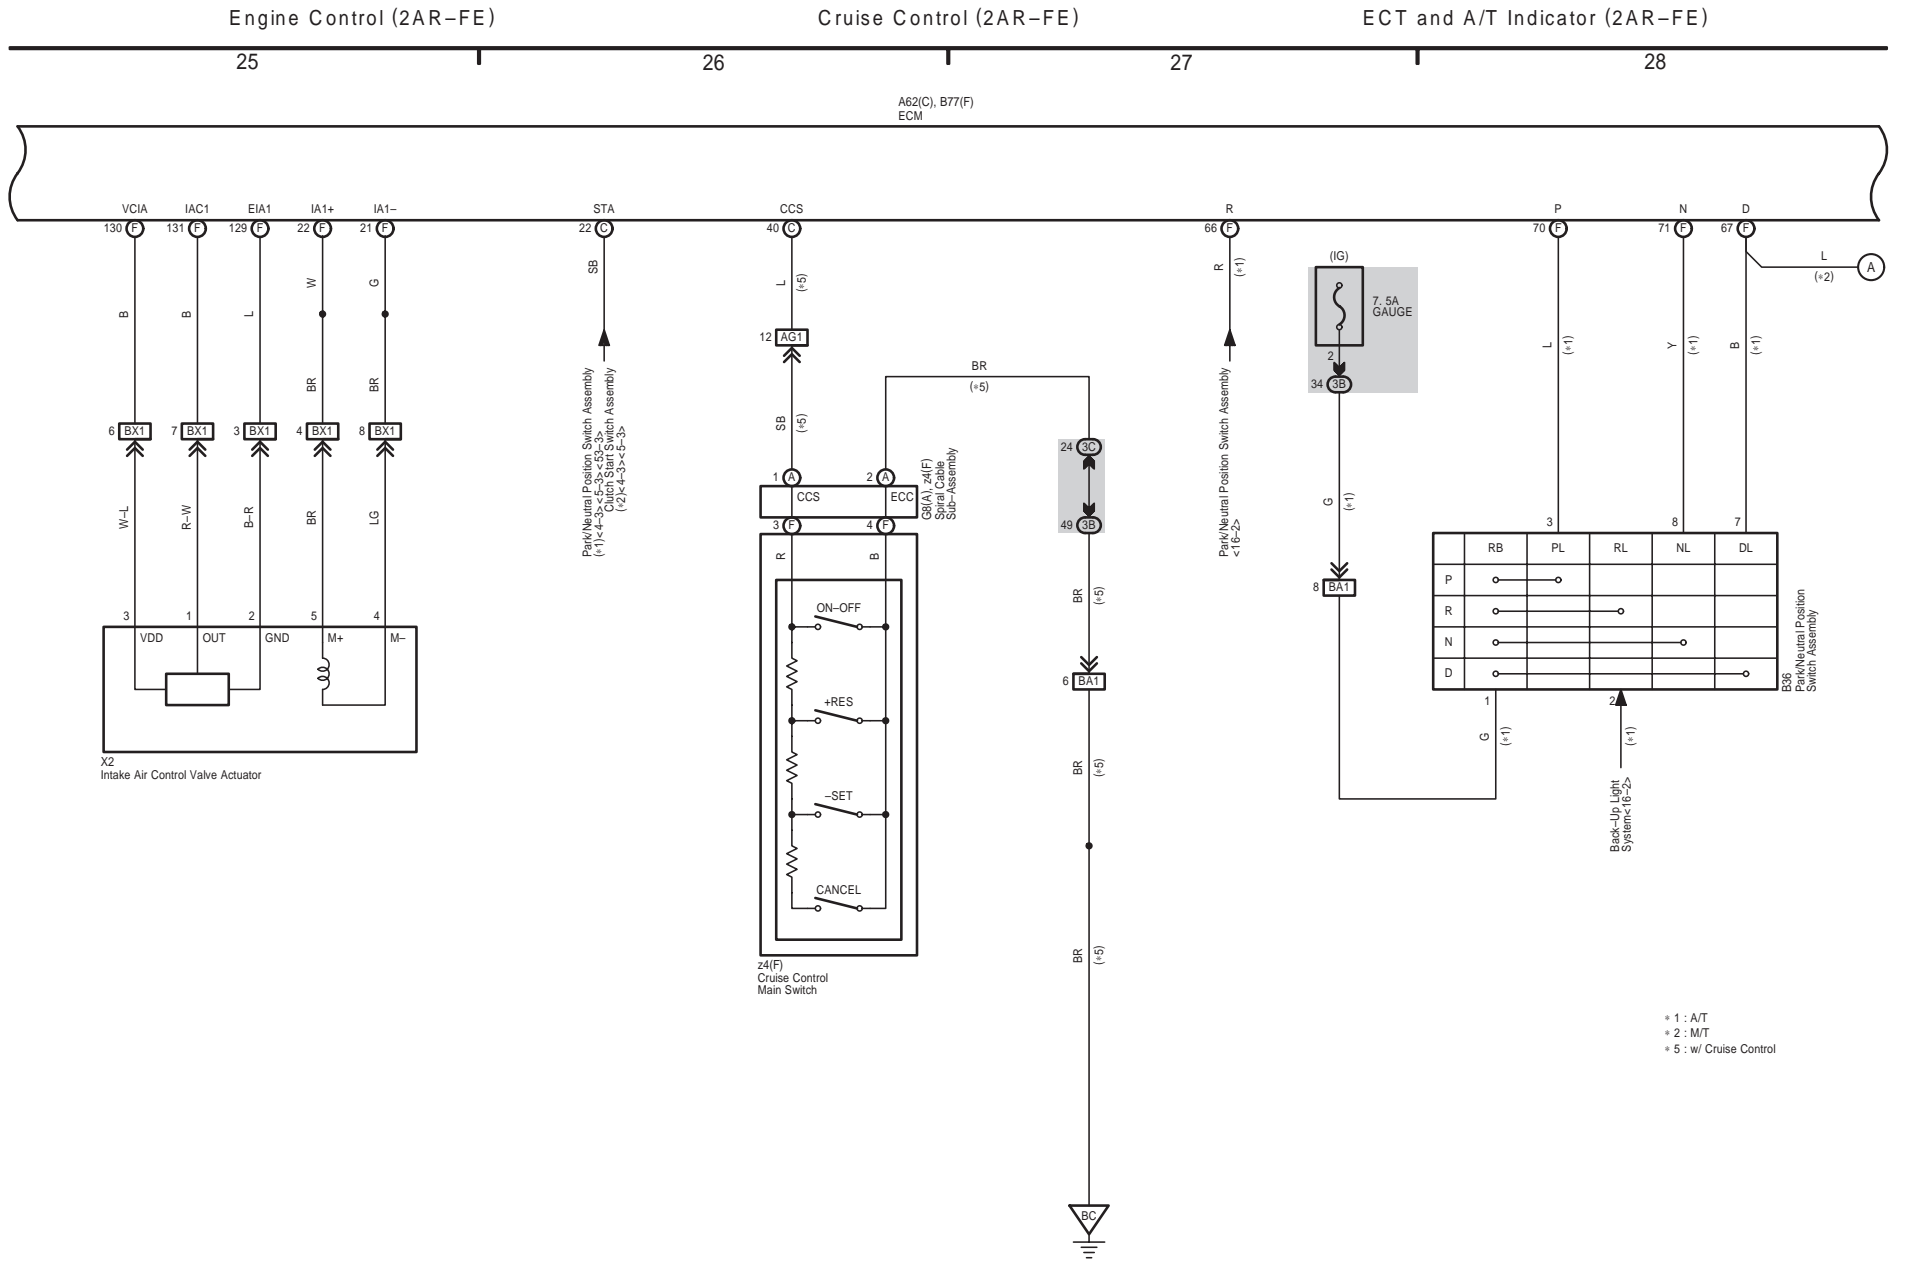


- \* 1 : A/T
- \* 2 : M/T
- \*11 : Korea
- \*12 : Except Korea

32

The diagram illustrates the electrical system for the 2007 Honda CRF150F. It shows the battery, main fuse, clutch switch assembly, front and rear fuses, and various junction connectors (A12, A14, A16, A18, A20, A22, A24, A26, A28, A30, A32, A34, A36, A38, A40, A42, A44, A46, A48, A50, A52, A54, A56, A58, A60, A62, A64, A66, A68, A70, A72, A74, A76, A78, A80, A82, A84, A86, A88, A90, A92, A94, A96, A98, A100). It also shows the engine control unit (ECU), transmission control switch, and various sensors and actuators. The diagram is divided into two main sections: the left side shows the battery and main fuse, and the right side shows the engine and transmission components.



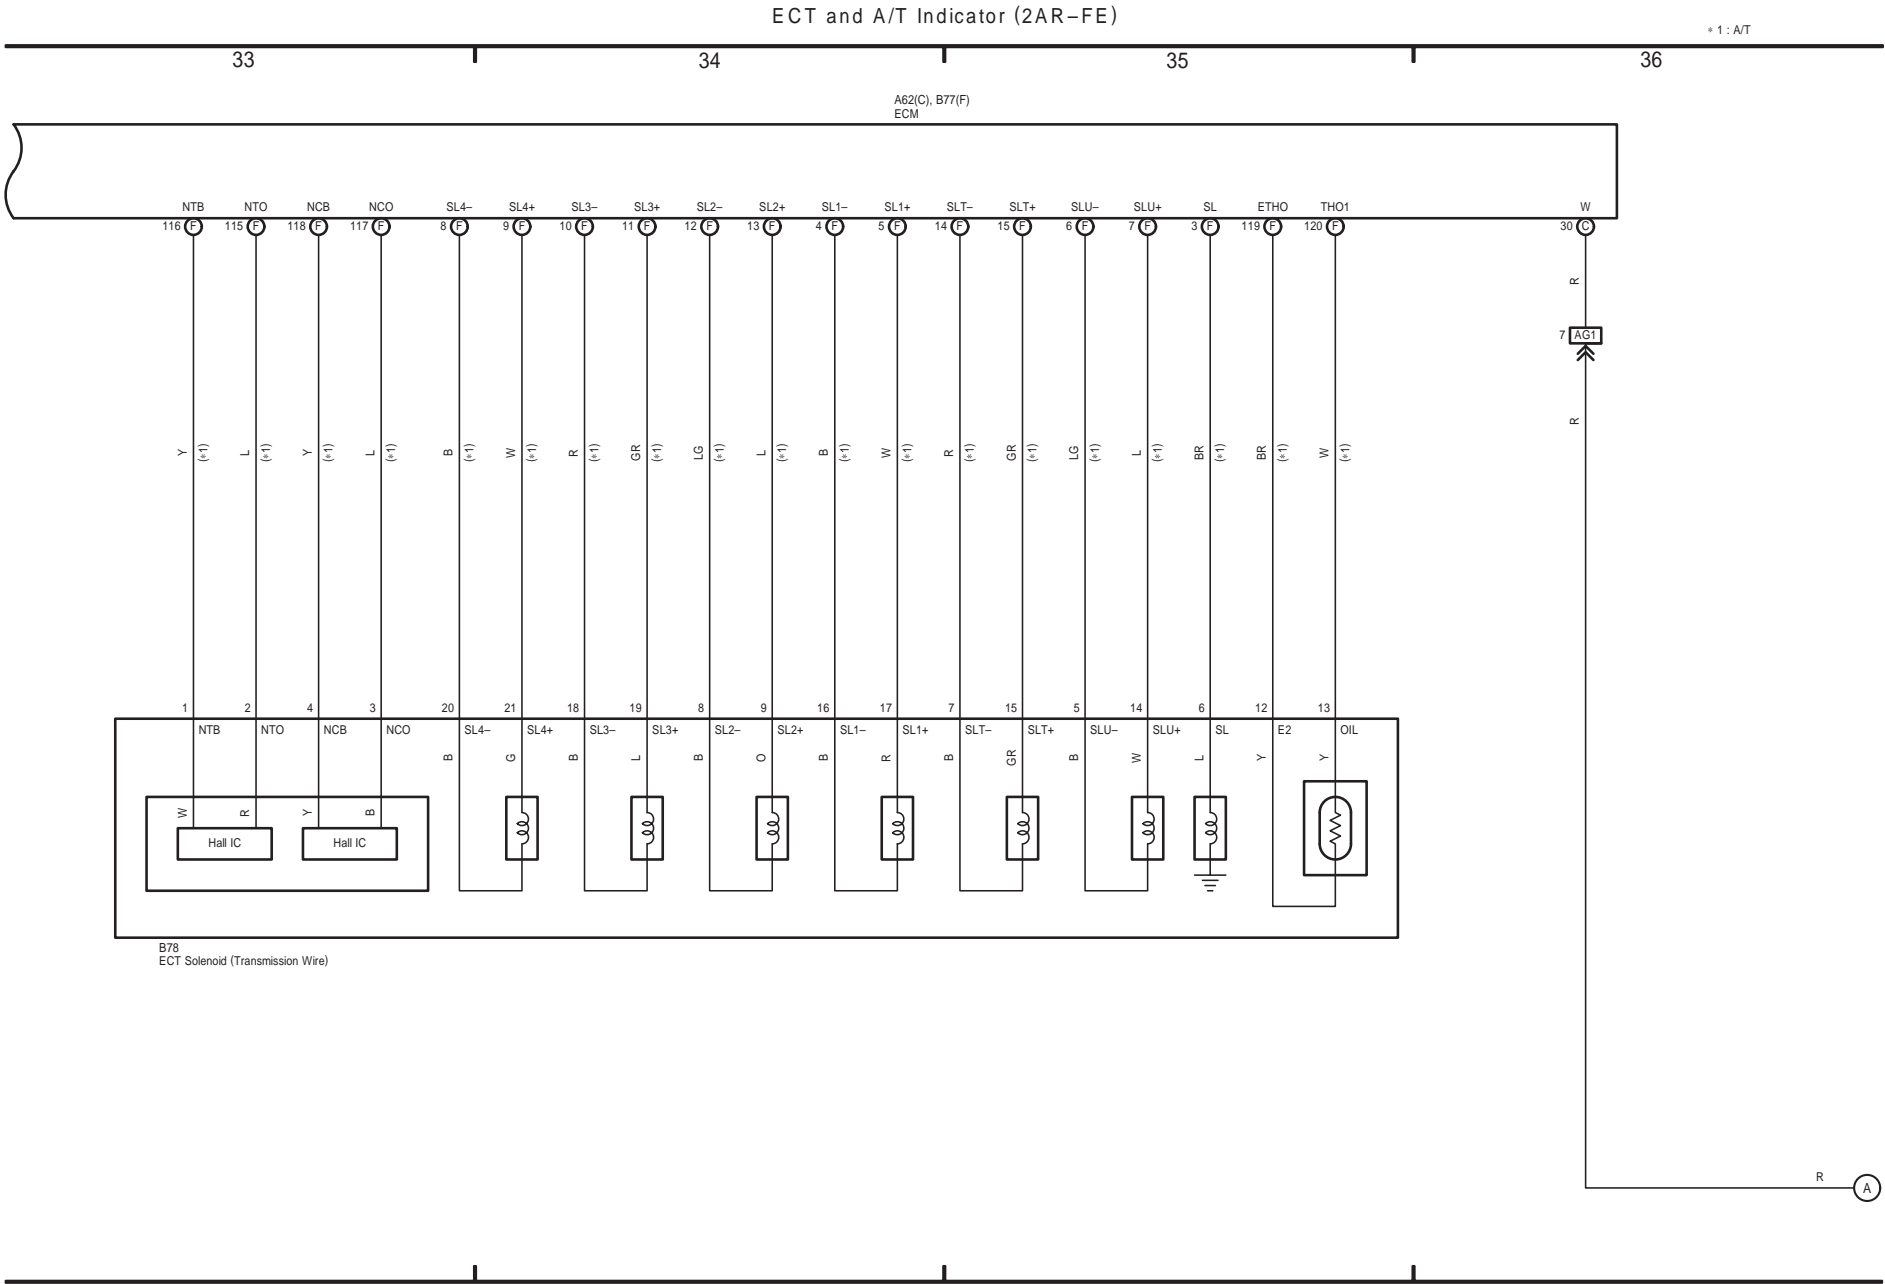

11 TOYOTA RAV4 (Cont' d)

ECT and A/T Indicator (2AR-FE)

\*19 : w/ Gear Shift Indicator

