



- * 1 : 1AD-FTV
- * 2 : Except 1AD-FTV
- * 4 : w/ Air Fuel Ratio Sensor
- *10 : A/T

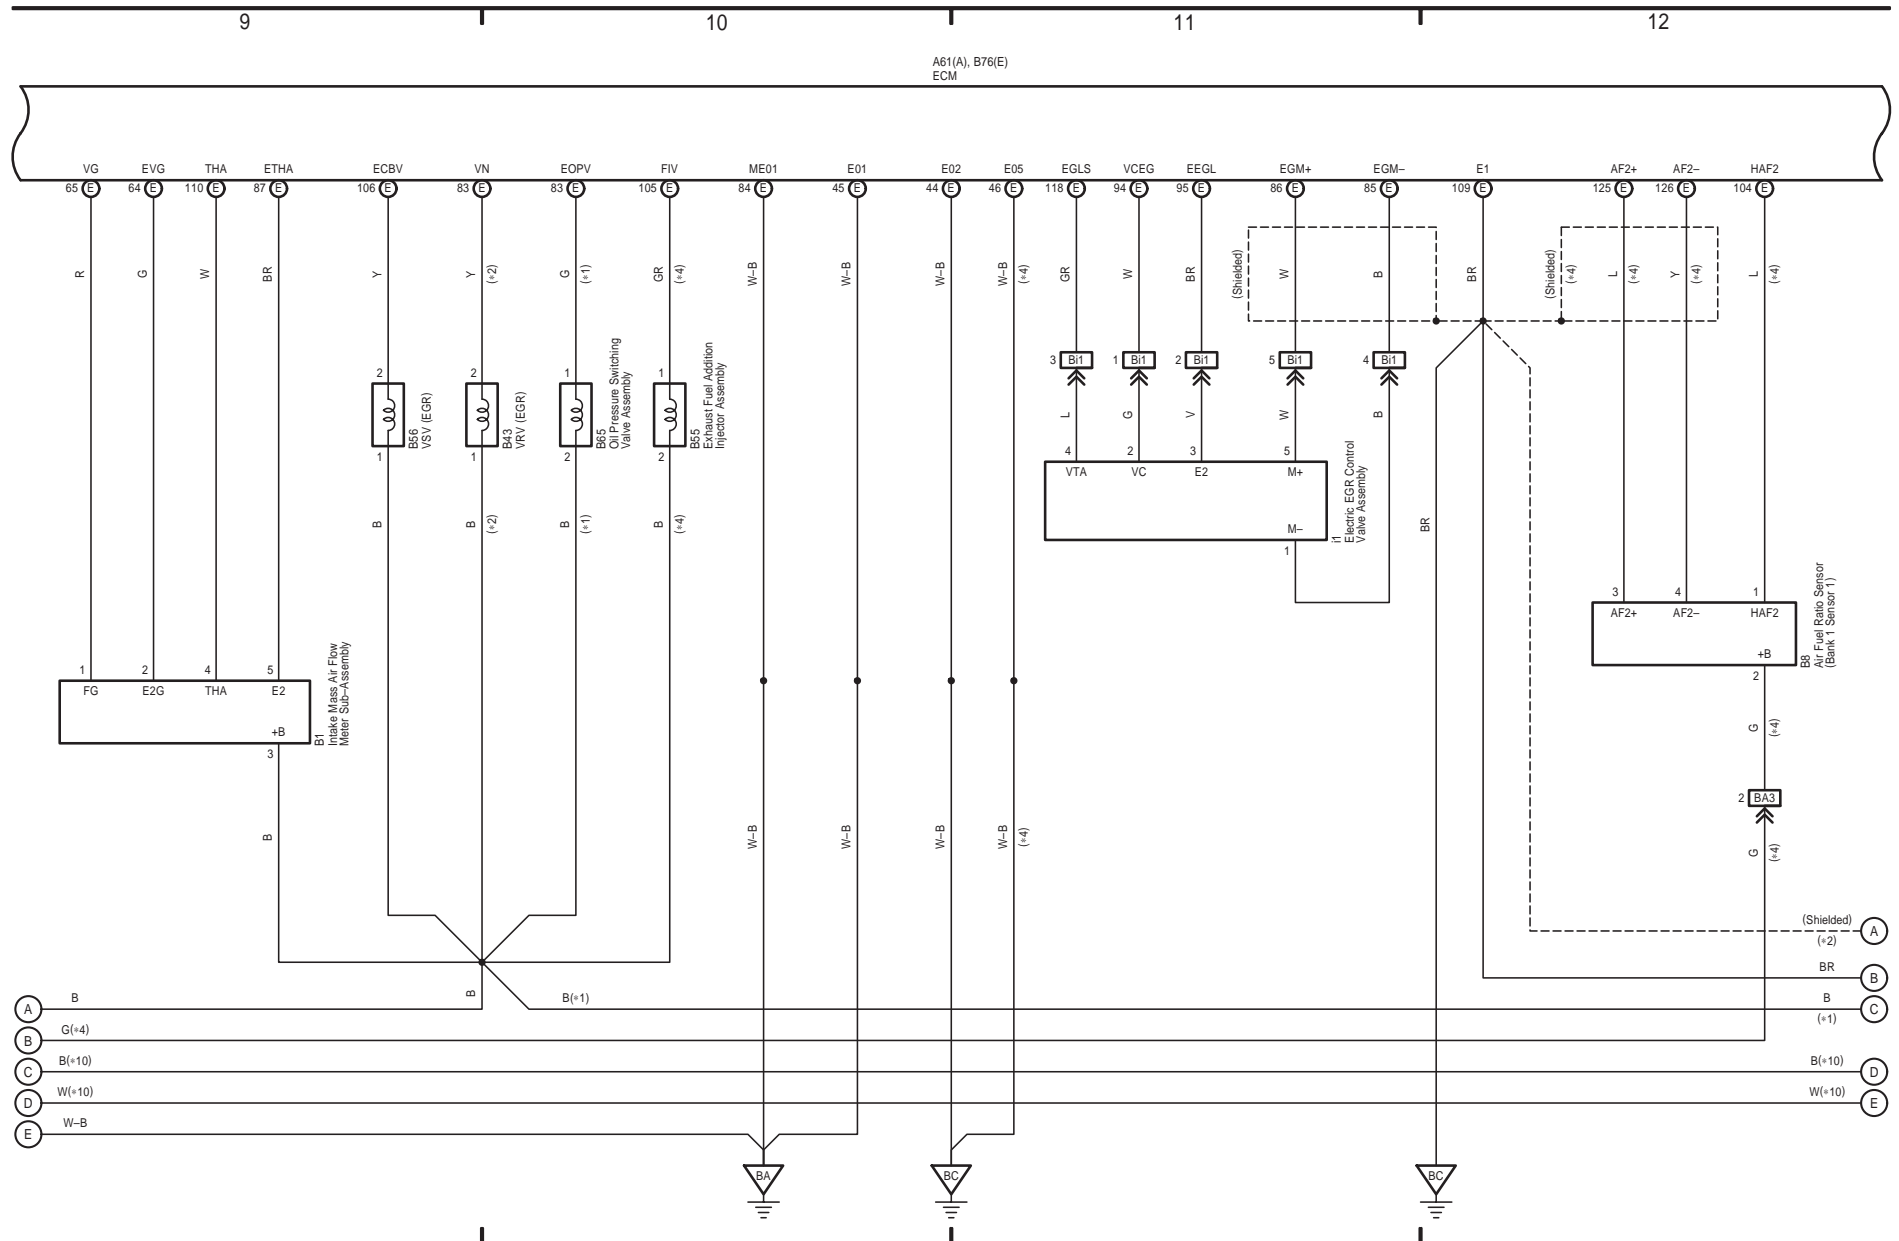


Engine Control (Diesel)

* 1 : 1AD-FTV
 * 2 : Except 1AD-FTV
 * 10 : A/T

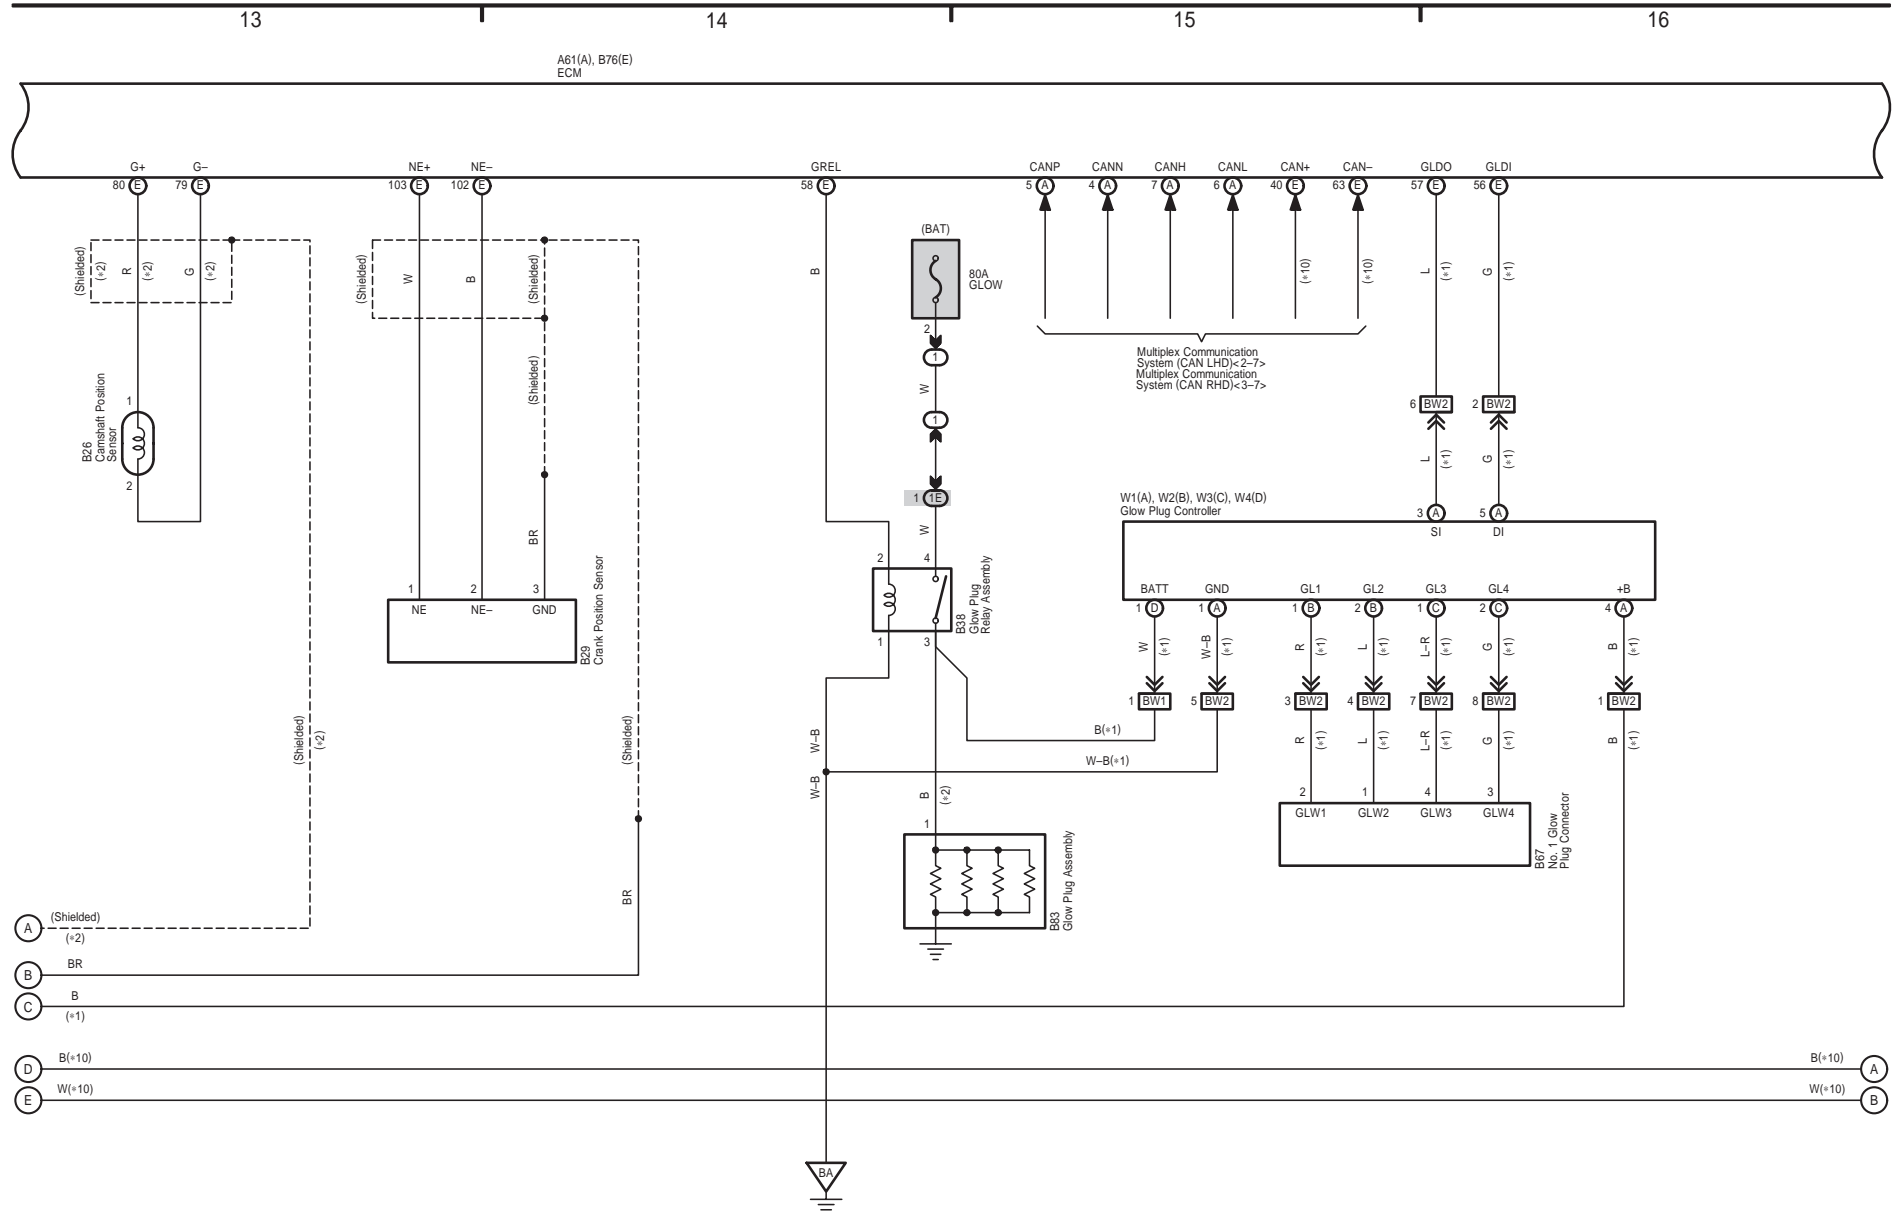


- * 1 : 1AD-FTV
- * 2 : Except 1AD-FTV
- * 5 : M/T
- * 10 : A/T
- * 13 : w/ Entry & Start System

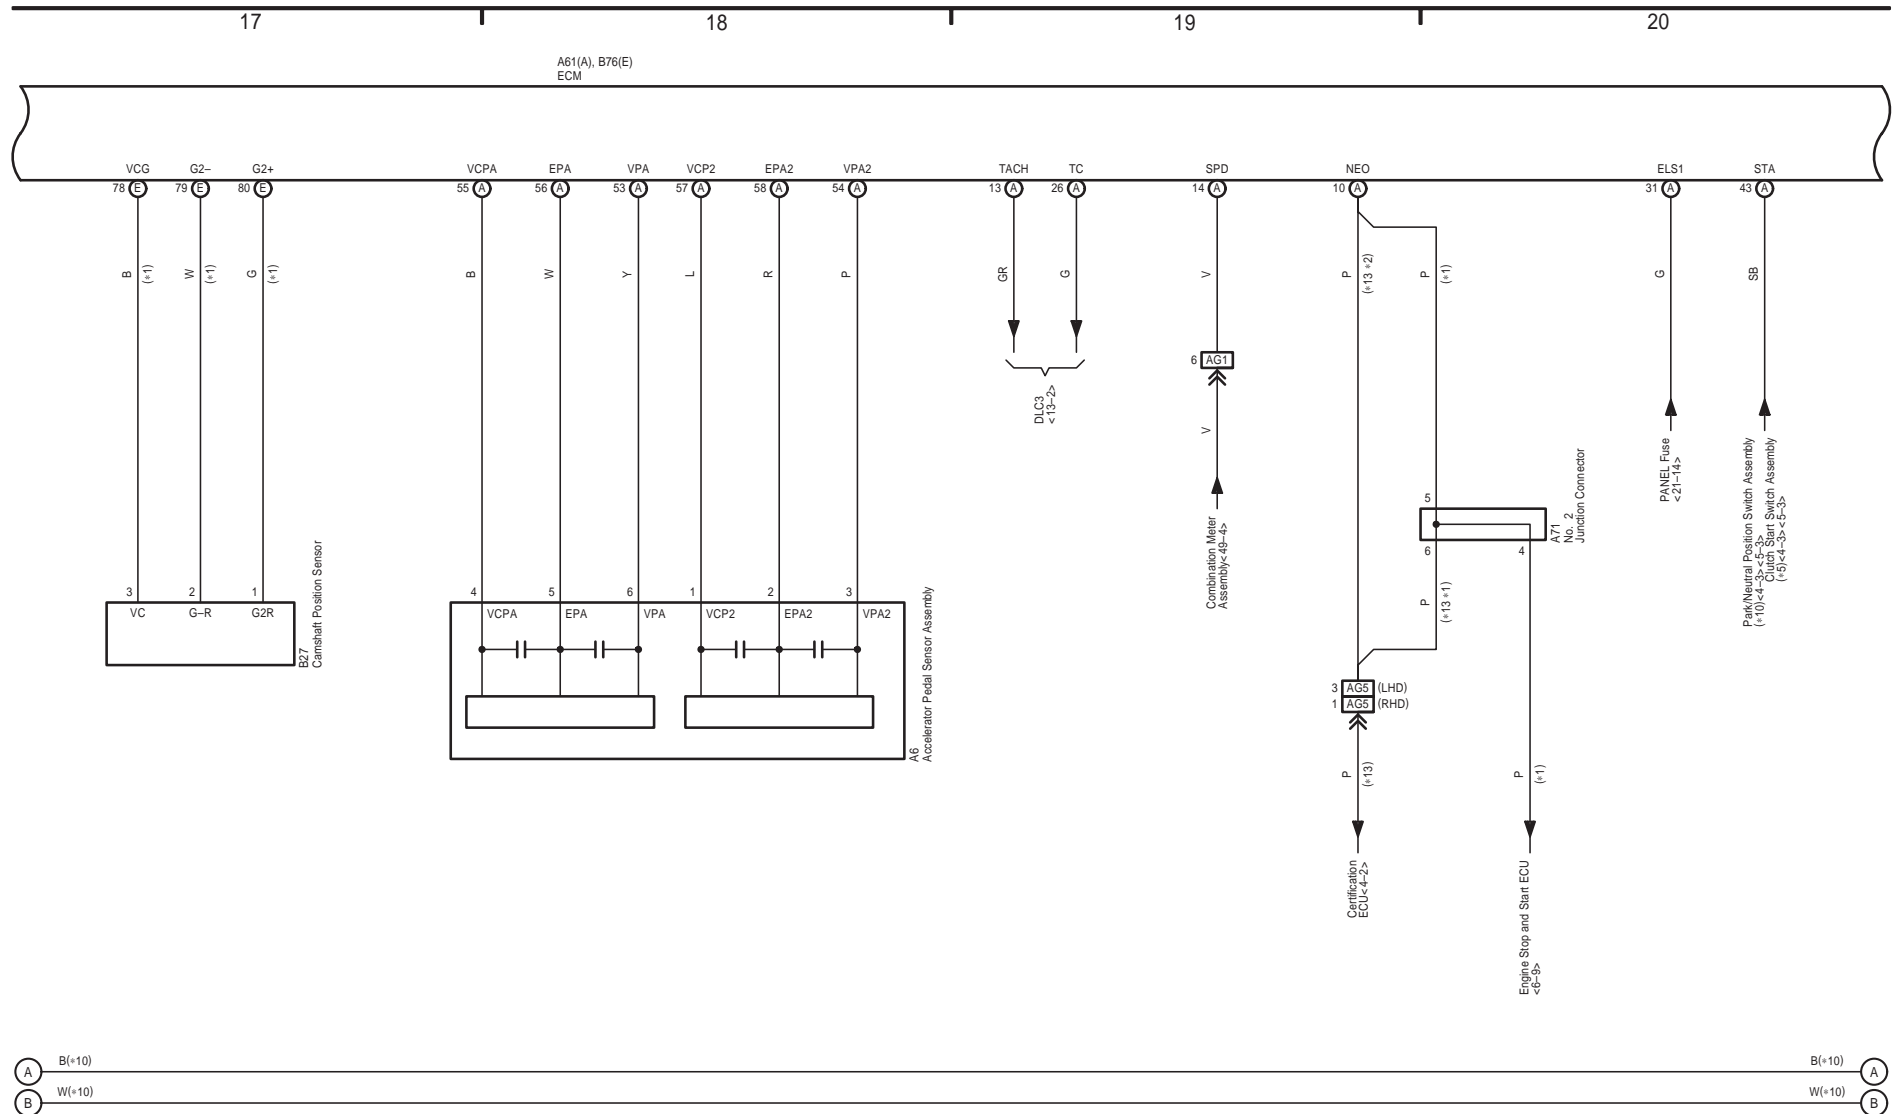


Engine Control (Diesel)


* 2 : Except 1AD-FTV
 *10 : A/T
 *13 : w/ Entry & Start System
 *14 : w/o Entry & Start System


*16 : w/ ID Code Box
 *17 : w/ Immobiliser System w/o Entry & Start System
 *18 : w/ Entry & Start System w/ ID Code Box
 *19 : w/ Entry & Start System w/o ID Code Box

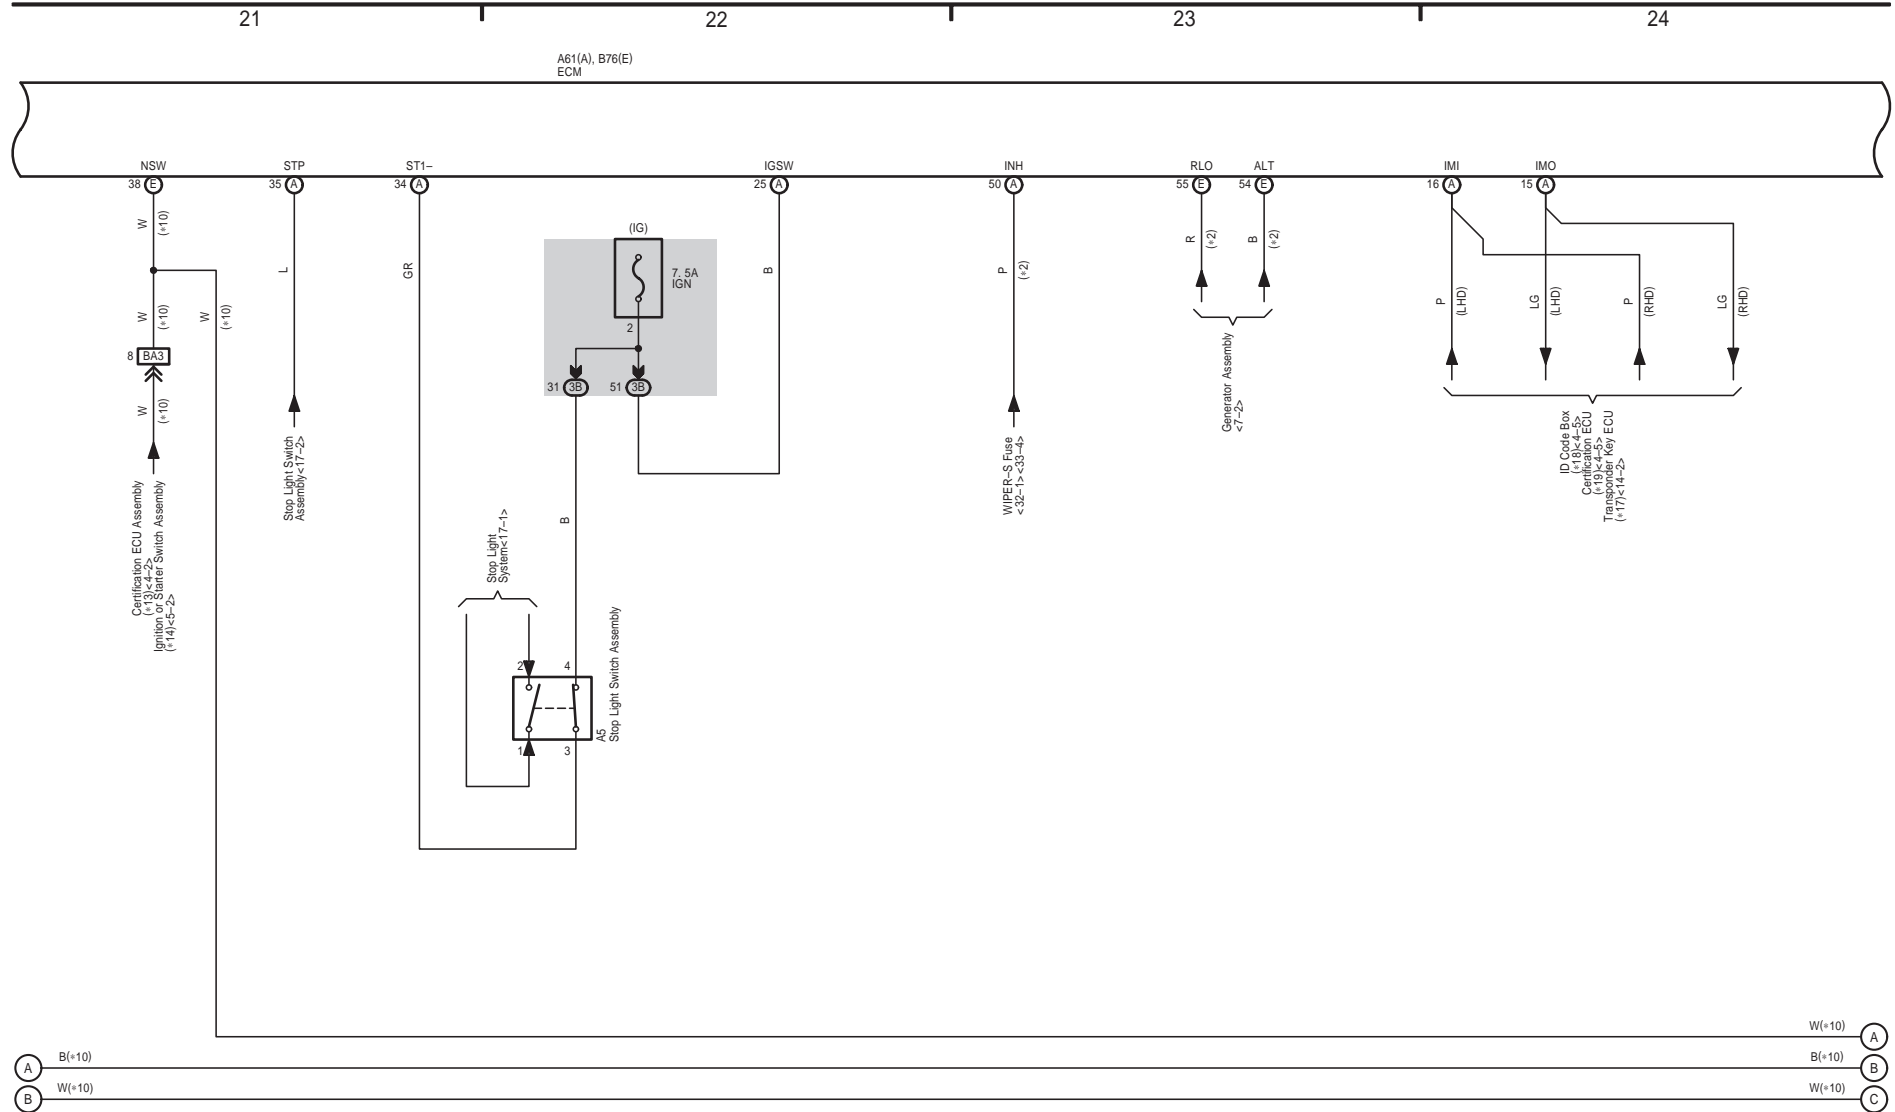

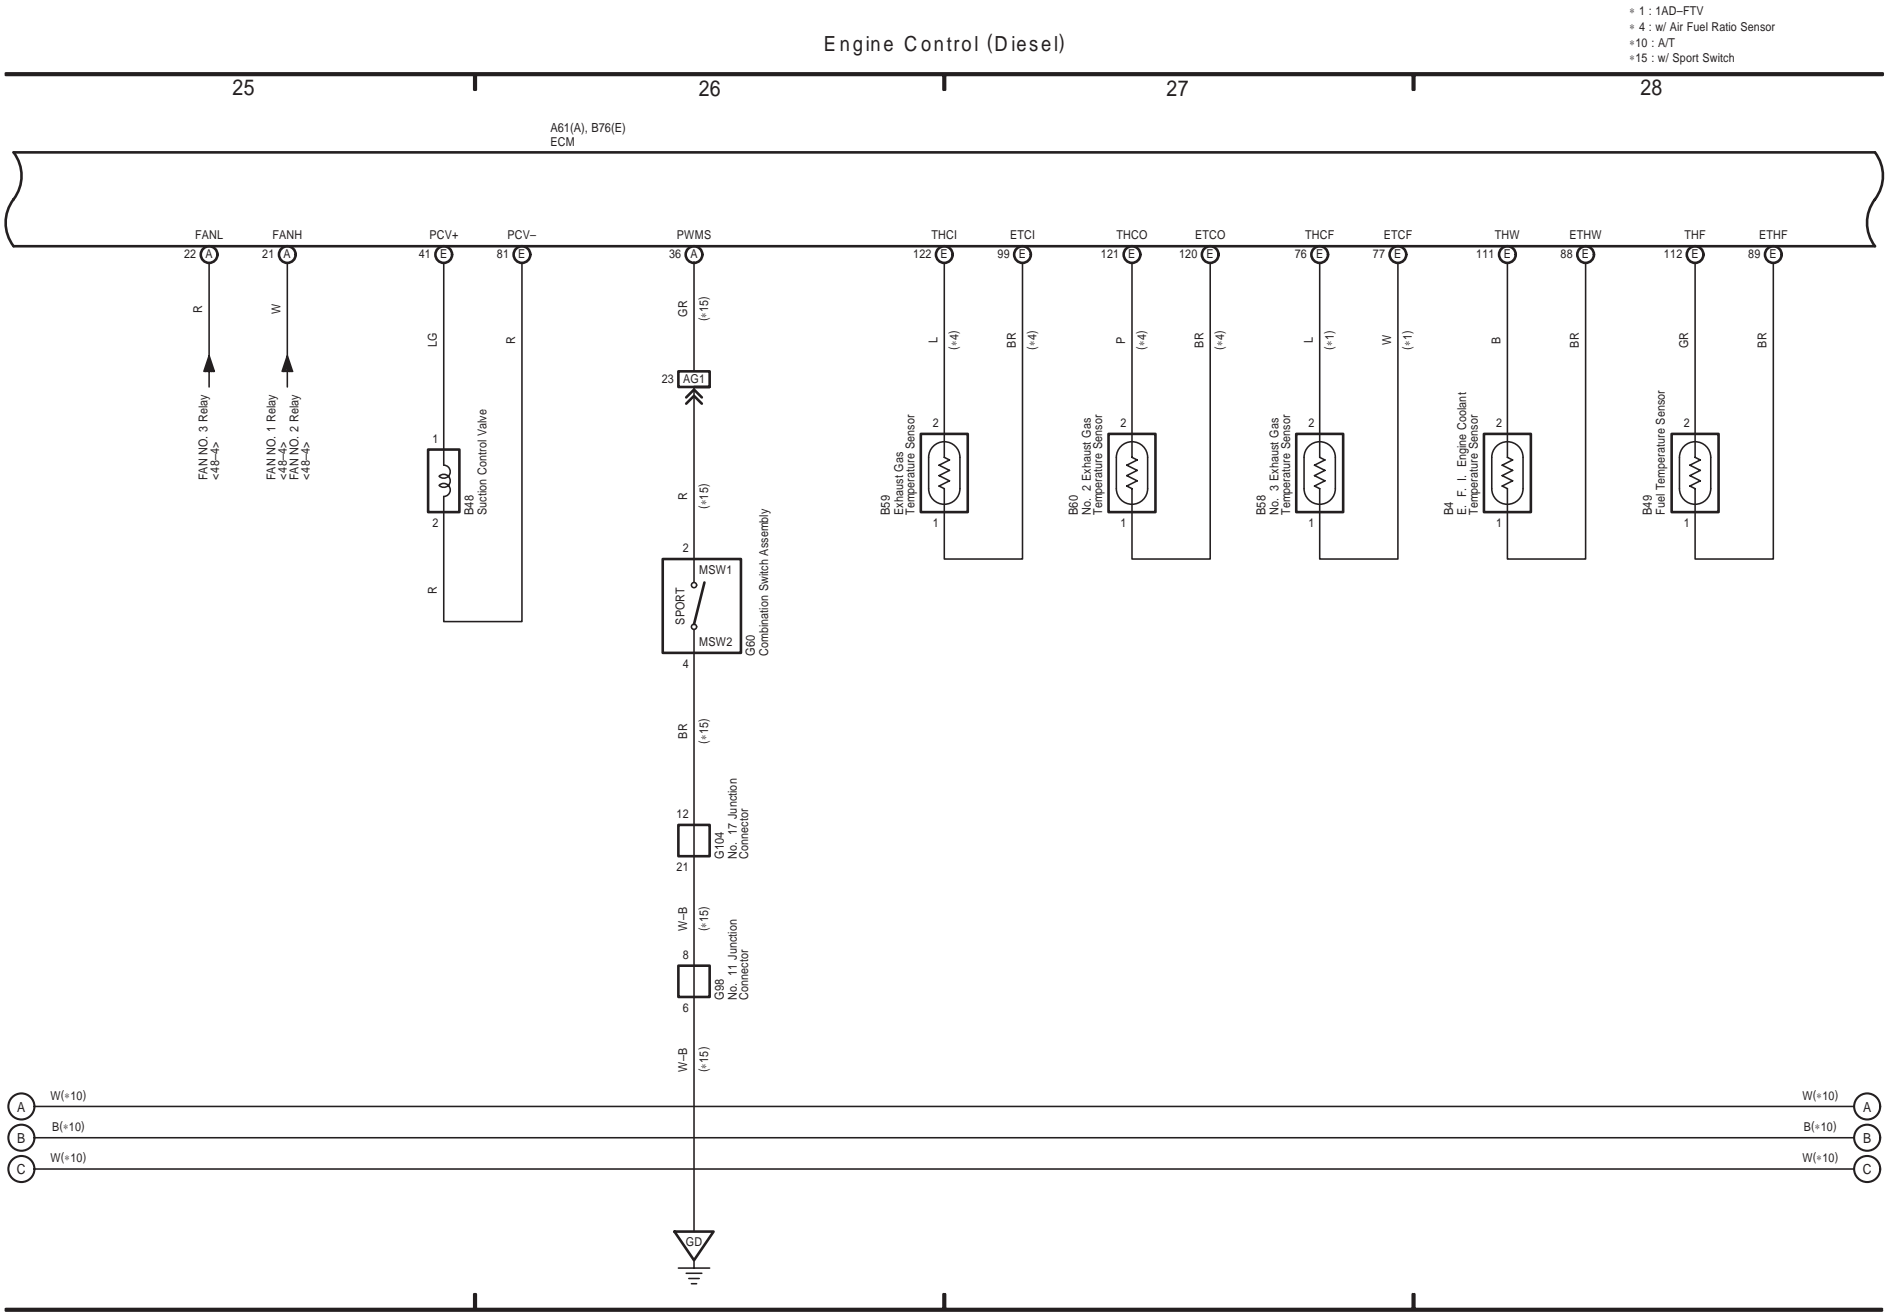


 
- * 1 : 1AD-FTV
- * 2 : Except 1AD-FTV
- * 10 : A/T



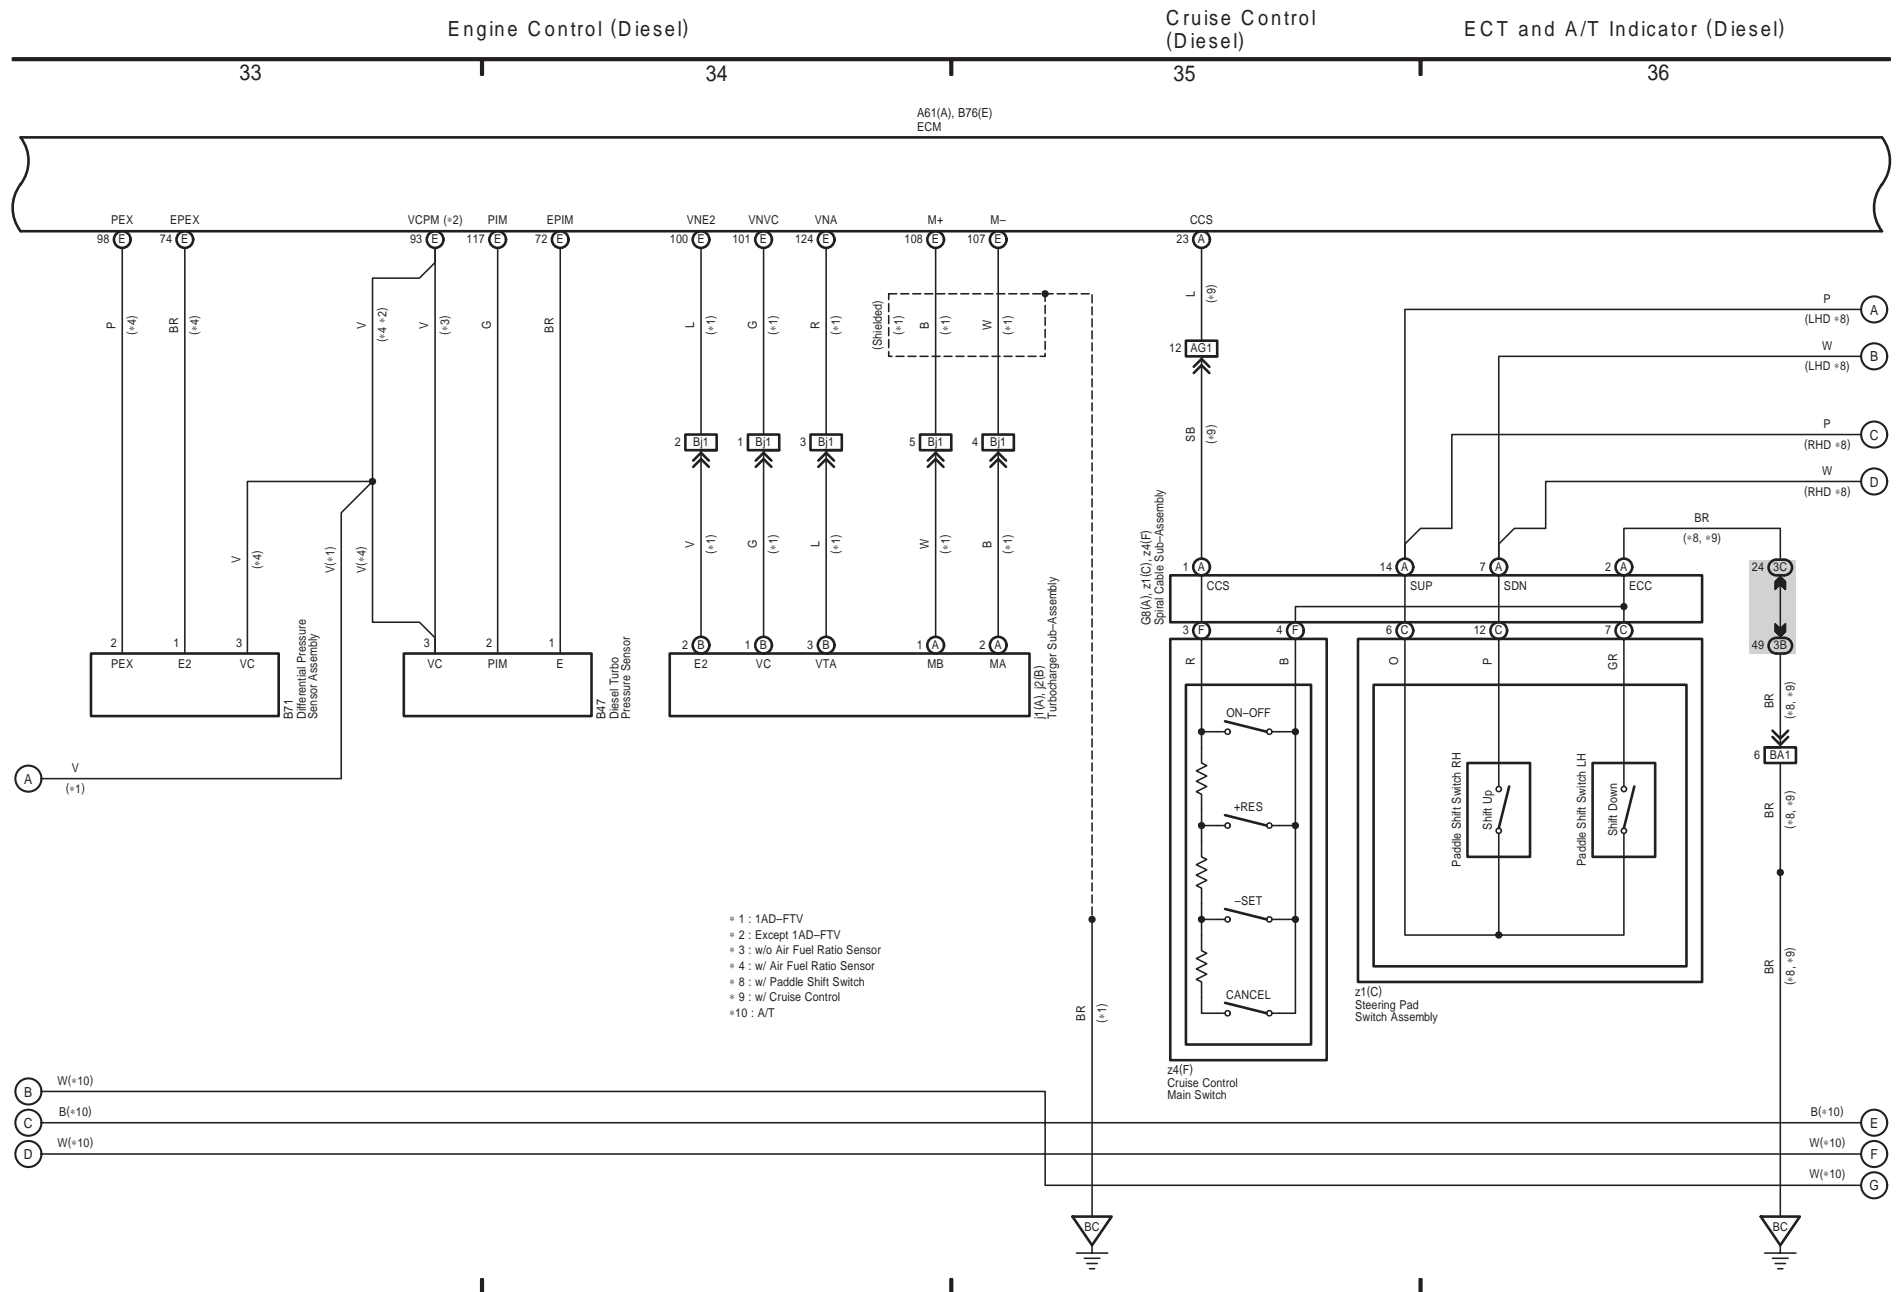

ECT and A/T Indicator (Diesel)

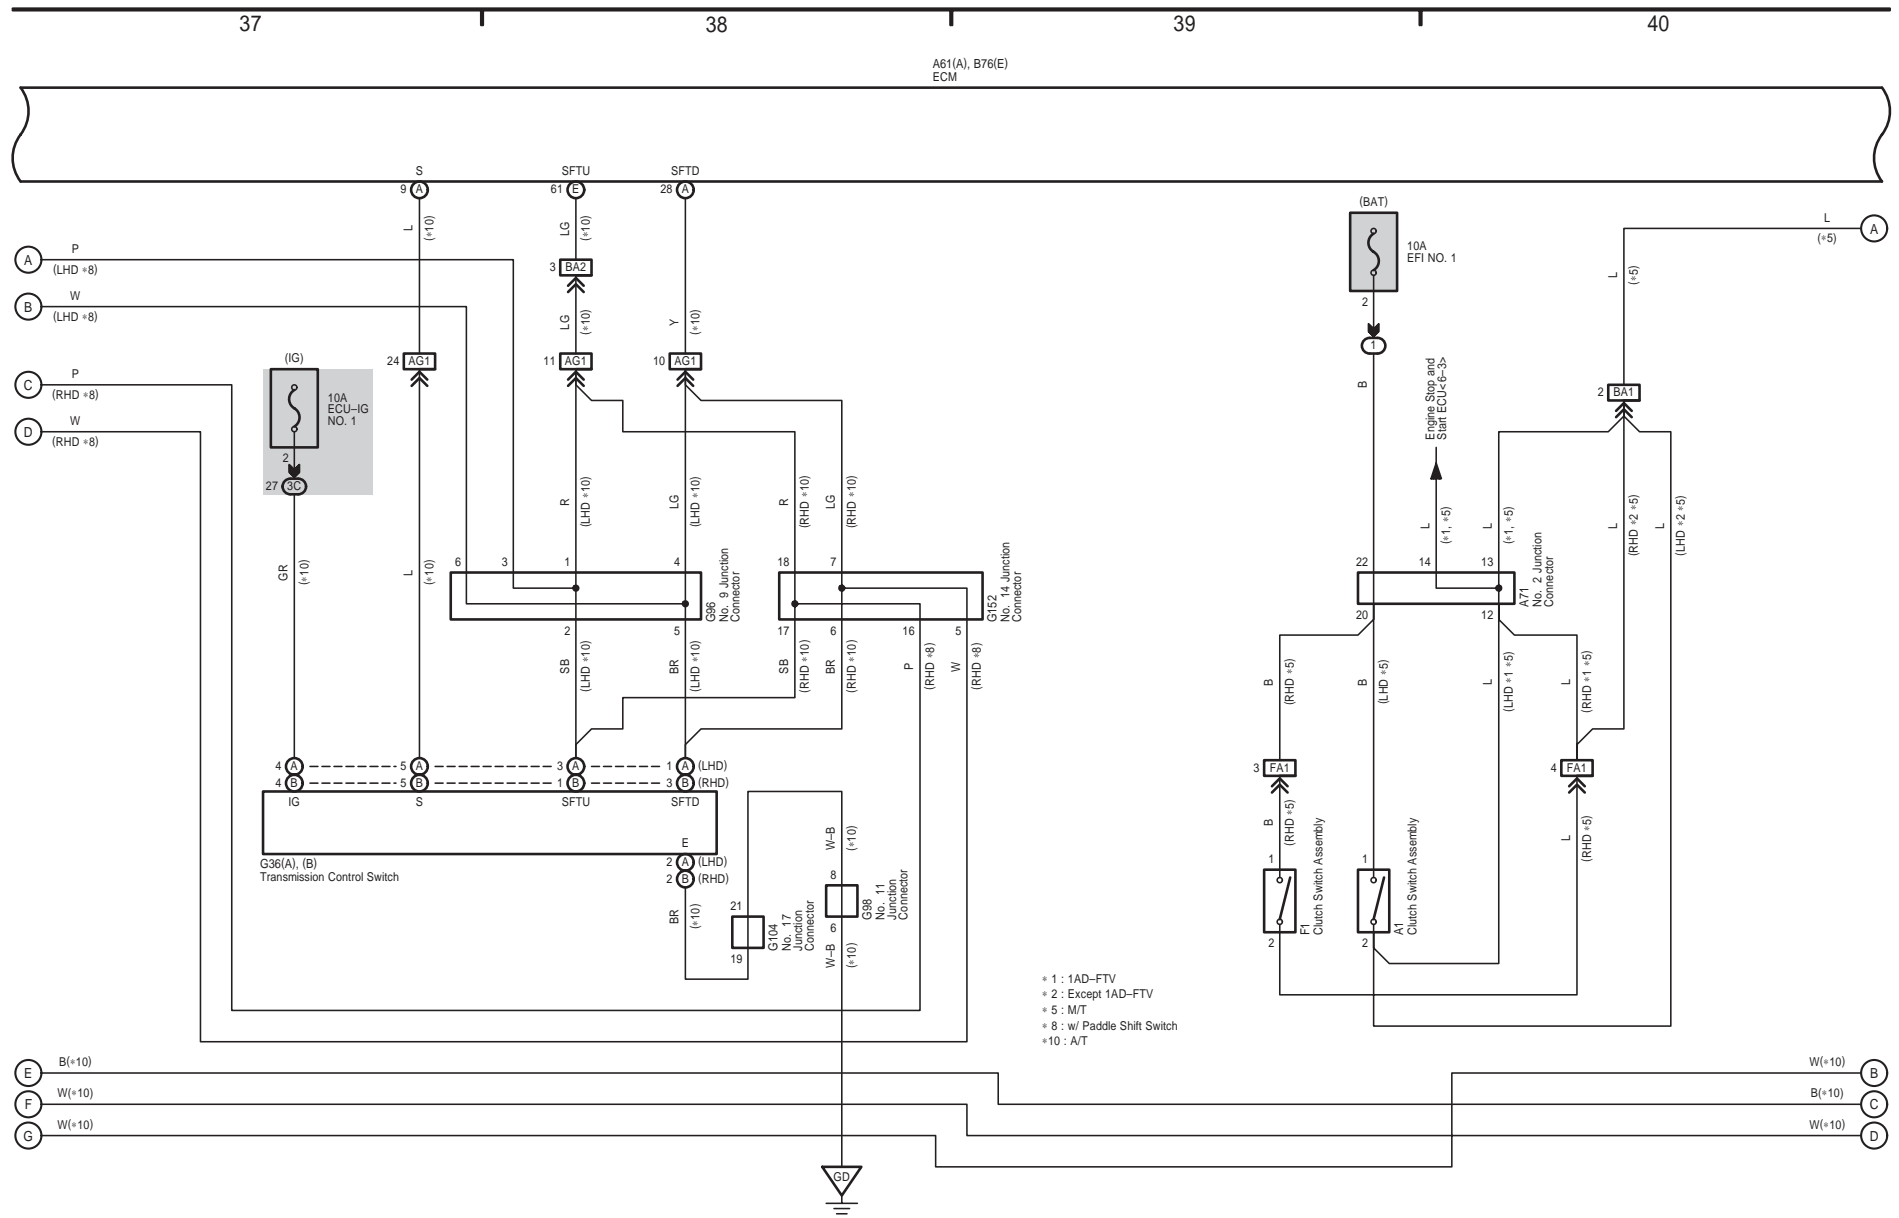

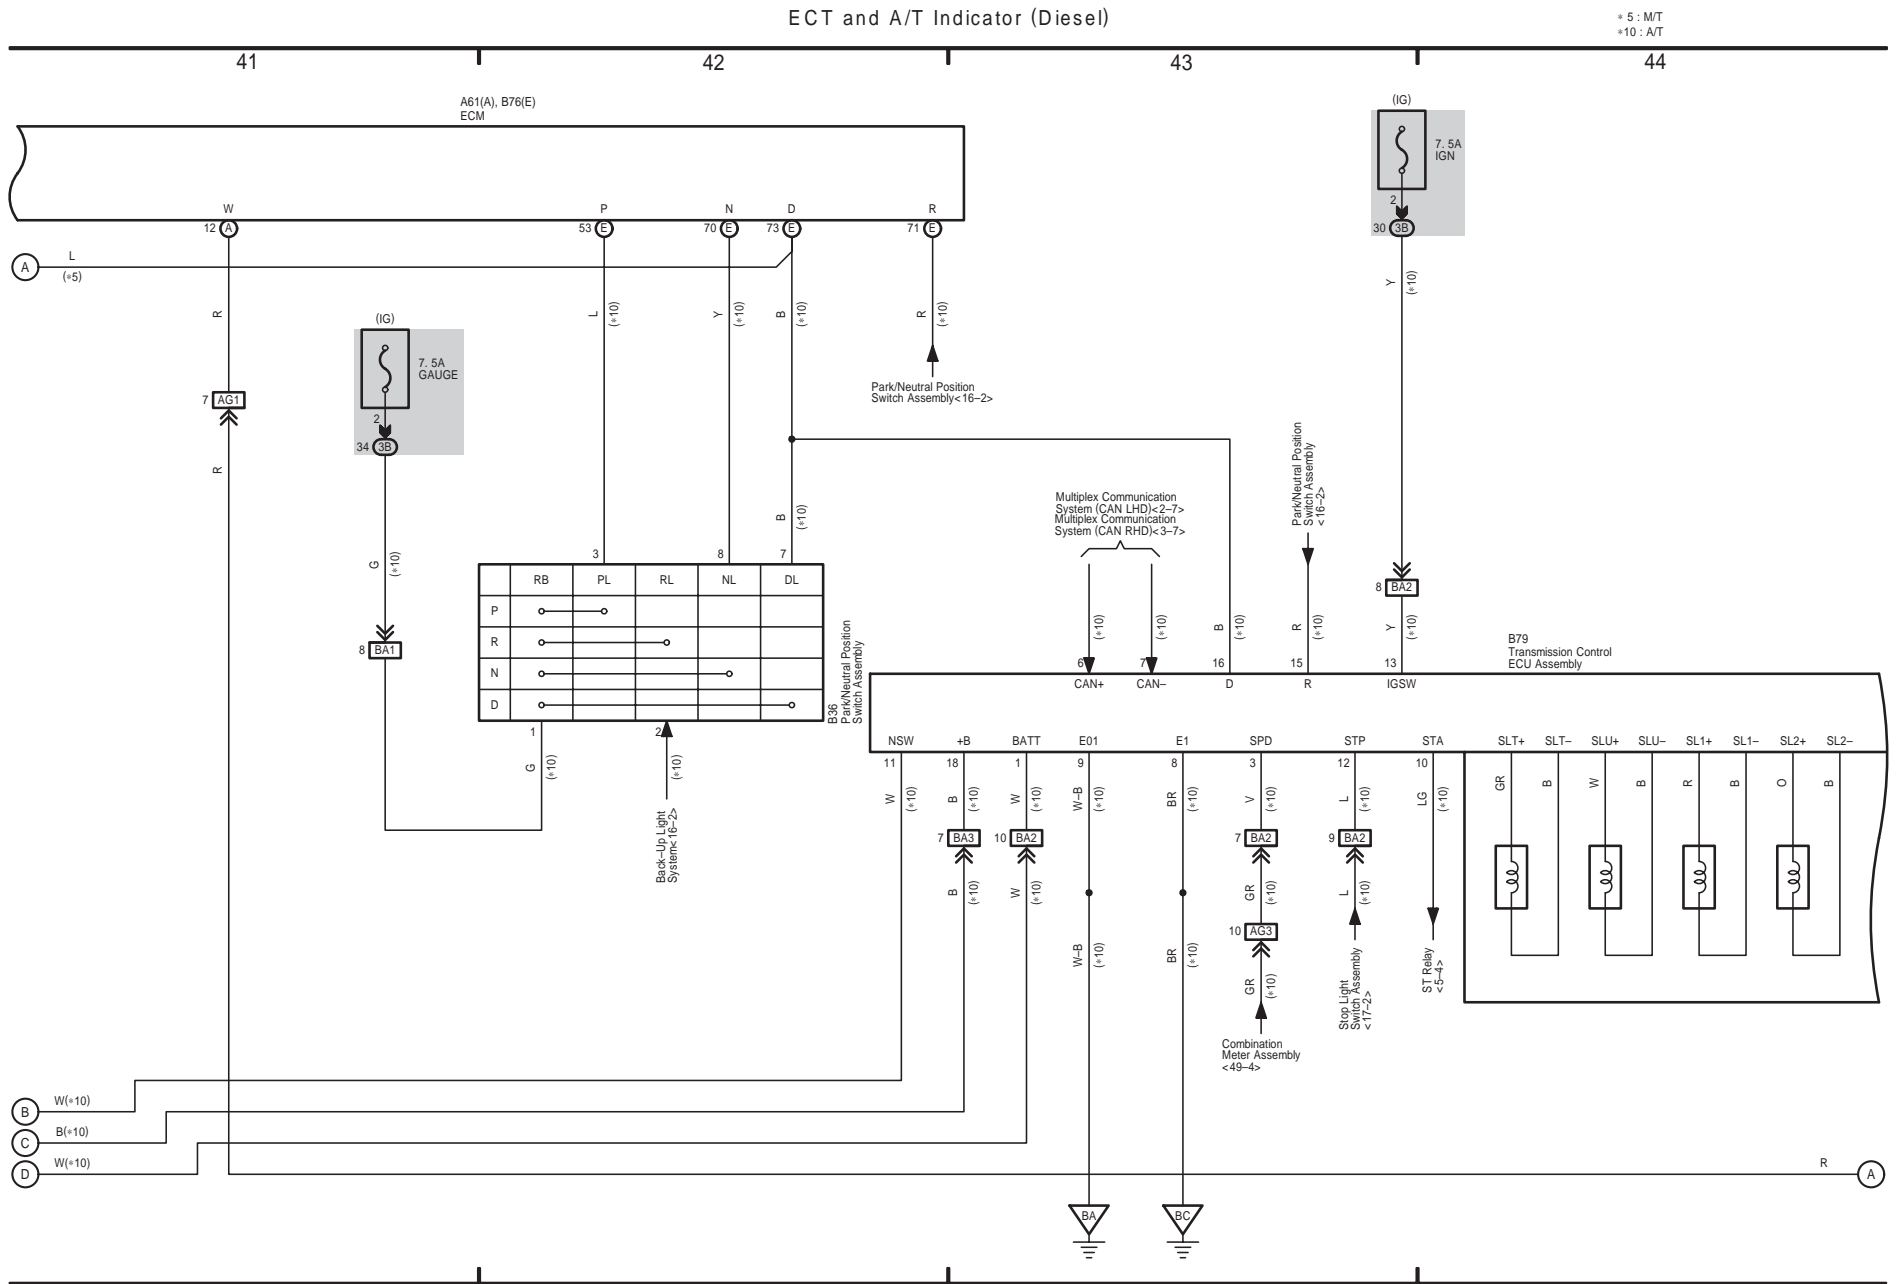

12 TOYOTA RAV4 (Cont' d)

ECT and A/T Indicator (Diesel)

*11 : w/ Stop & Start System
 *12 : w/o Stop & Start System
 *20 : w/ Gear Shift Indicator

