



Position of Parts in Engine Compartment <2UZ-FE>

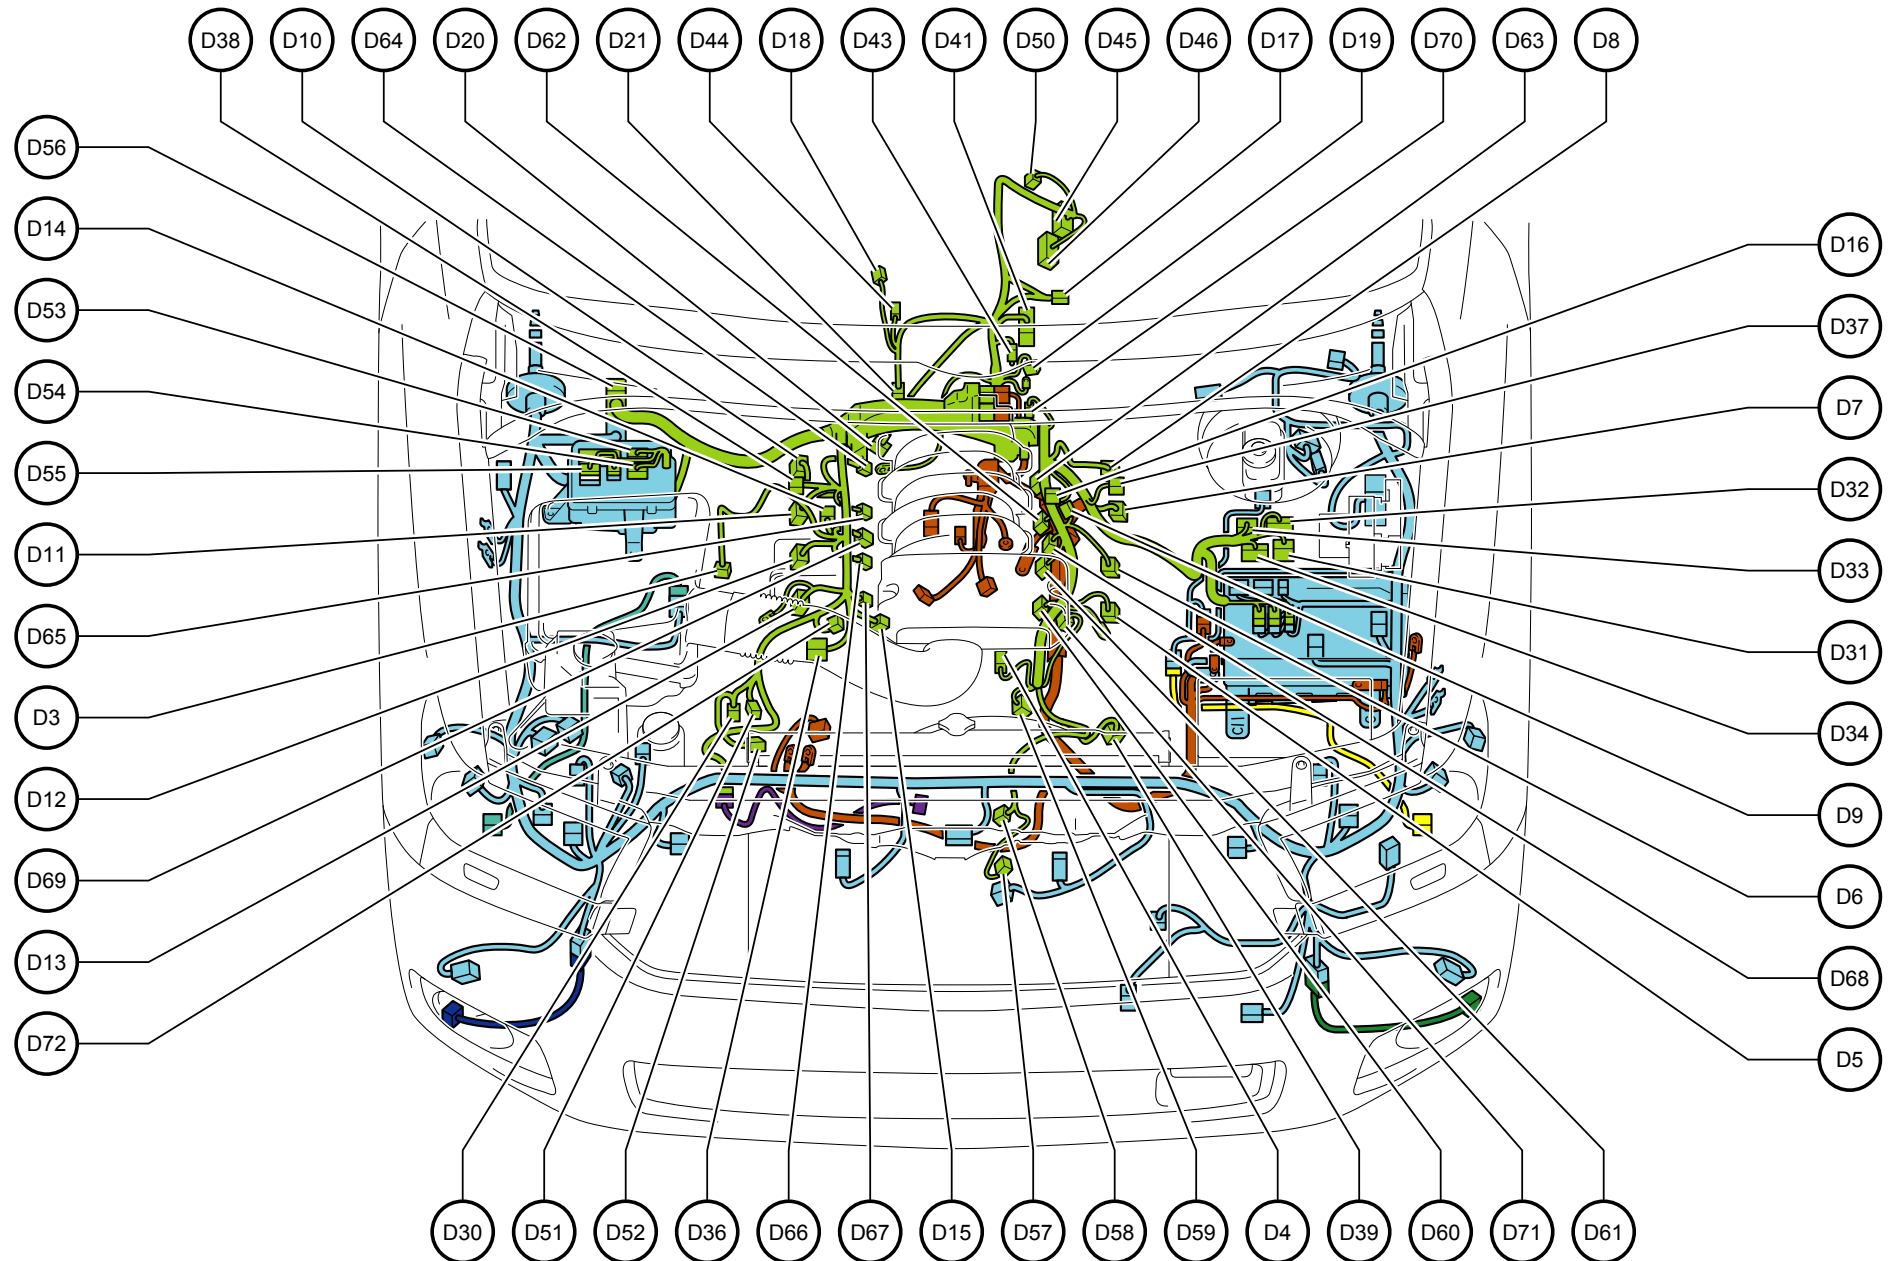

- D 3 Mass Air Flow Meter
- D 4 Throttle with Motor Body Assembly
- D 5 Ignition Coil Assembly No.1
- D 6 Ignition Coil Assembly No.3
- D 7 Ignition Coil Assembly No.5
- D 8 Ignition Coil Assembly No.7
- D 9 Noise Filter (Ignition Bank 1)
- D 10 Ignition Coil Assembly No.8
- D 11 Ignition Coil Assembly No.6
- D 12 Ignition Coil Assembly No.4
- D 13 Ignition Coil Assembly No.2
- D 14 Noise Filter (Ignition Bank 2)
- D 15 E.F.I. Engine Coolant Temperature Sensor
- D 16 Purge VSV
- D 17 Oxygen Sensor (Bank 1 Sensor 2)
- D 18 Oxygen Sensor (Bank 2 Sensor 2)
- D 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 20 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 21 Park/Neutral Position Switch Assembly
- D 30 Power Steering Oil Pressure Sensor
- D 31 Air Injection Control Driver (Bank 1)
- D 32 Air Injection Control Driver (Bank 1)
- D 33 Air Injection Control Driver (Bank 2)
- D 34 Air Injection Control Driver (Bank 2)
- D 36 Air Pump Assembly (Bank 2)
- D 37 Air Switching Valve (Bank 1)
- D 38 Air Switching Valve (Bank 2)
- D 39 Cooler Compressor Assembly
- D 41 Electronically Controlled Transmission Solenoid
- D 43 Transmission Revolution Sensor (Turbine)
- D 44 Transmission Revolution Sensor (Counter Gear)
- D 45 Transfer Shift Actuator Assembly
- D 46 Transfer Shift Actuator Assembly
- D 50 Transfer Shift Actuator Assembly
- D 51 Vane Pump Assembly
- D 52 Vane Pump Assembly
- D 53 Junction Connector
- D 54 Junction Connector
- D 55 Junction Connector
- D 56 ECM
- D 57 Oil Pressure Sender Gage Assembly
- D 58 Crank Position Sensor
- D 59 Cam Position Sensor
- D 60 Fuel Injector Assembly No.1
- D 61 Fuel Injector Assembly No.3
- D 62 Fuel Injector Assembly No.5
- D 63 Fuel Injector Assembly No.7
- D 64 Fuel Injector Assembly No.8
- D 65 Fuel Injector Assembly No.6
- D 66 Fuel Injector Assembly No.4
- D 67 Fuel Injector Assembly No.2
- D 68 VVT Sensor (Bank 1)
- D 69 VVT Sensor (Bank 2)
- D 70 VSV (ACIS)
- D 71 Cam Timing Oil Control Valve (Bank 1)
- D 72 Cam Timing Oil Control Valve (Bank 2)


# Position of Parts in Engine Compartment <2UZ-FE>

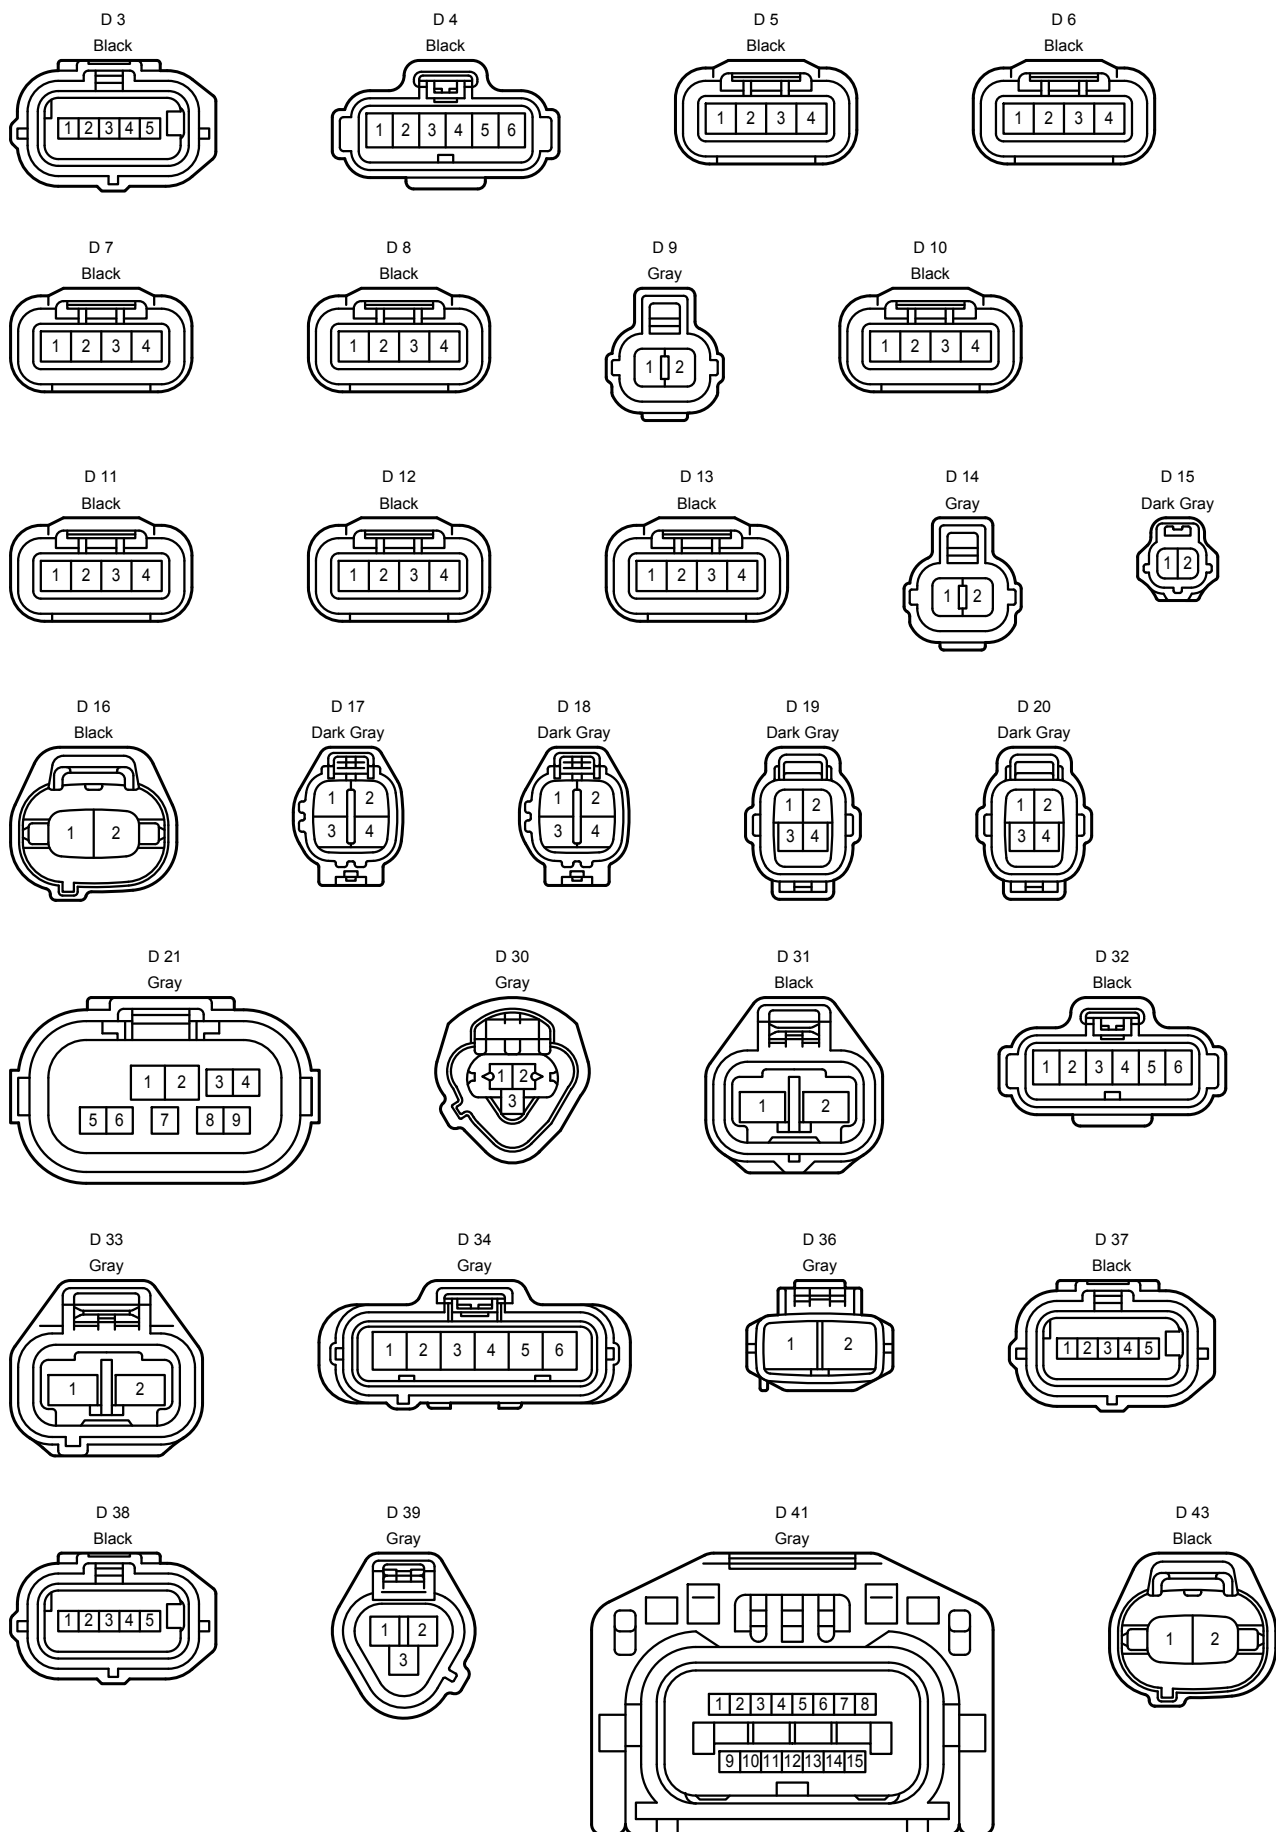

# Position of Parts in Engine Compartment <2UZ-FE>


D 44

Black

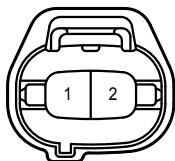


D 45

Black

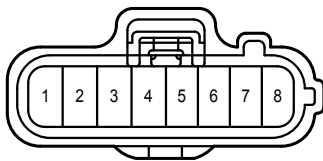

D 46

Dark Gray

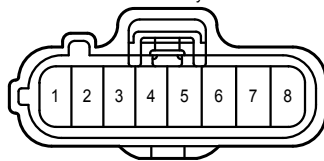


D 50

Black




D 51

Black

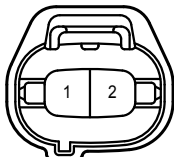


D 52

Black

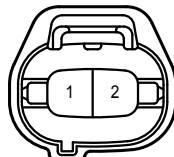


D 53

White

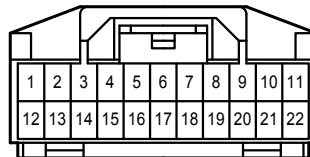


D 54

White

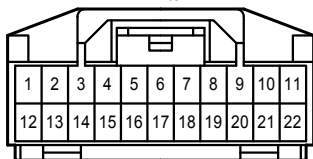


D 55

Blue

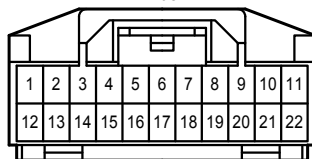

D 56

Black

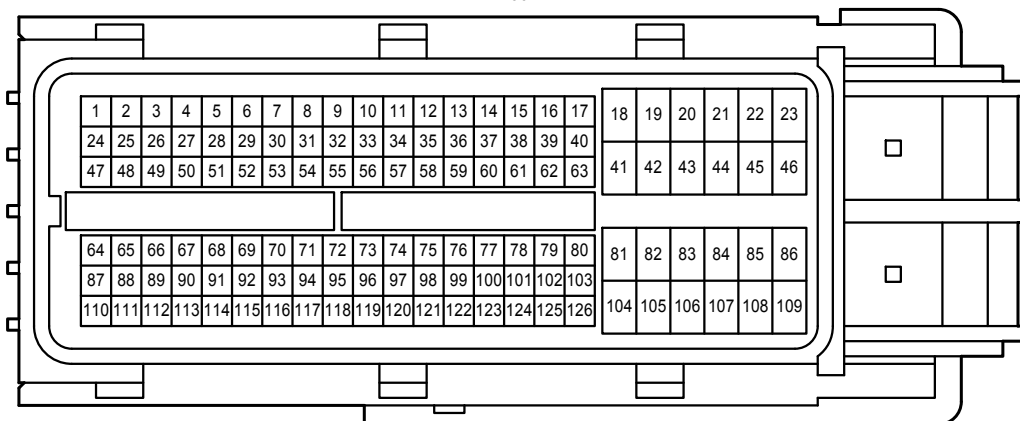

D 57

Black



D 58

Dark Gray



 
D 59

Gray




D 60

Gray




D 61

 Gray




D 62

 Gray




D 63

 Gray




D 64

 Gray



D 65

 Gray



D 66

Gray

