


Position of Parts in Engine Compartment <3UR-FE>

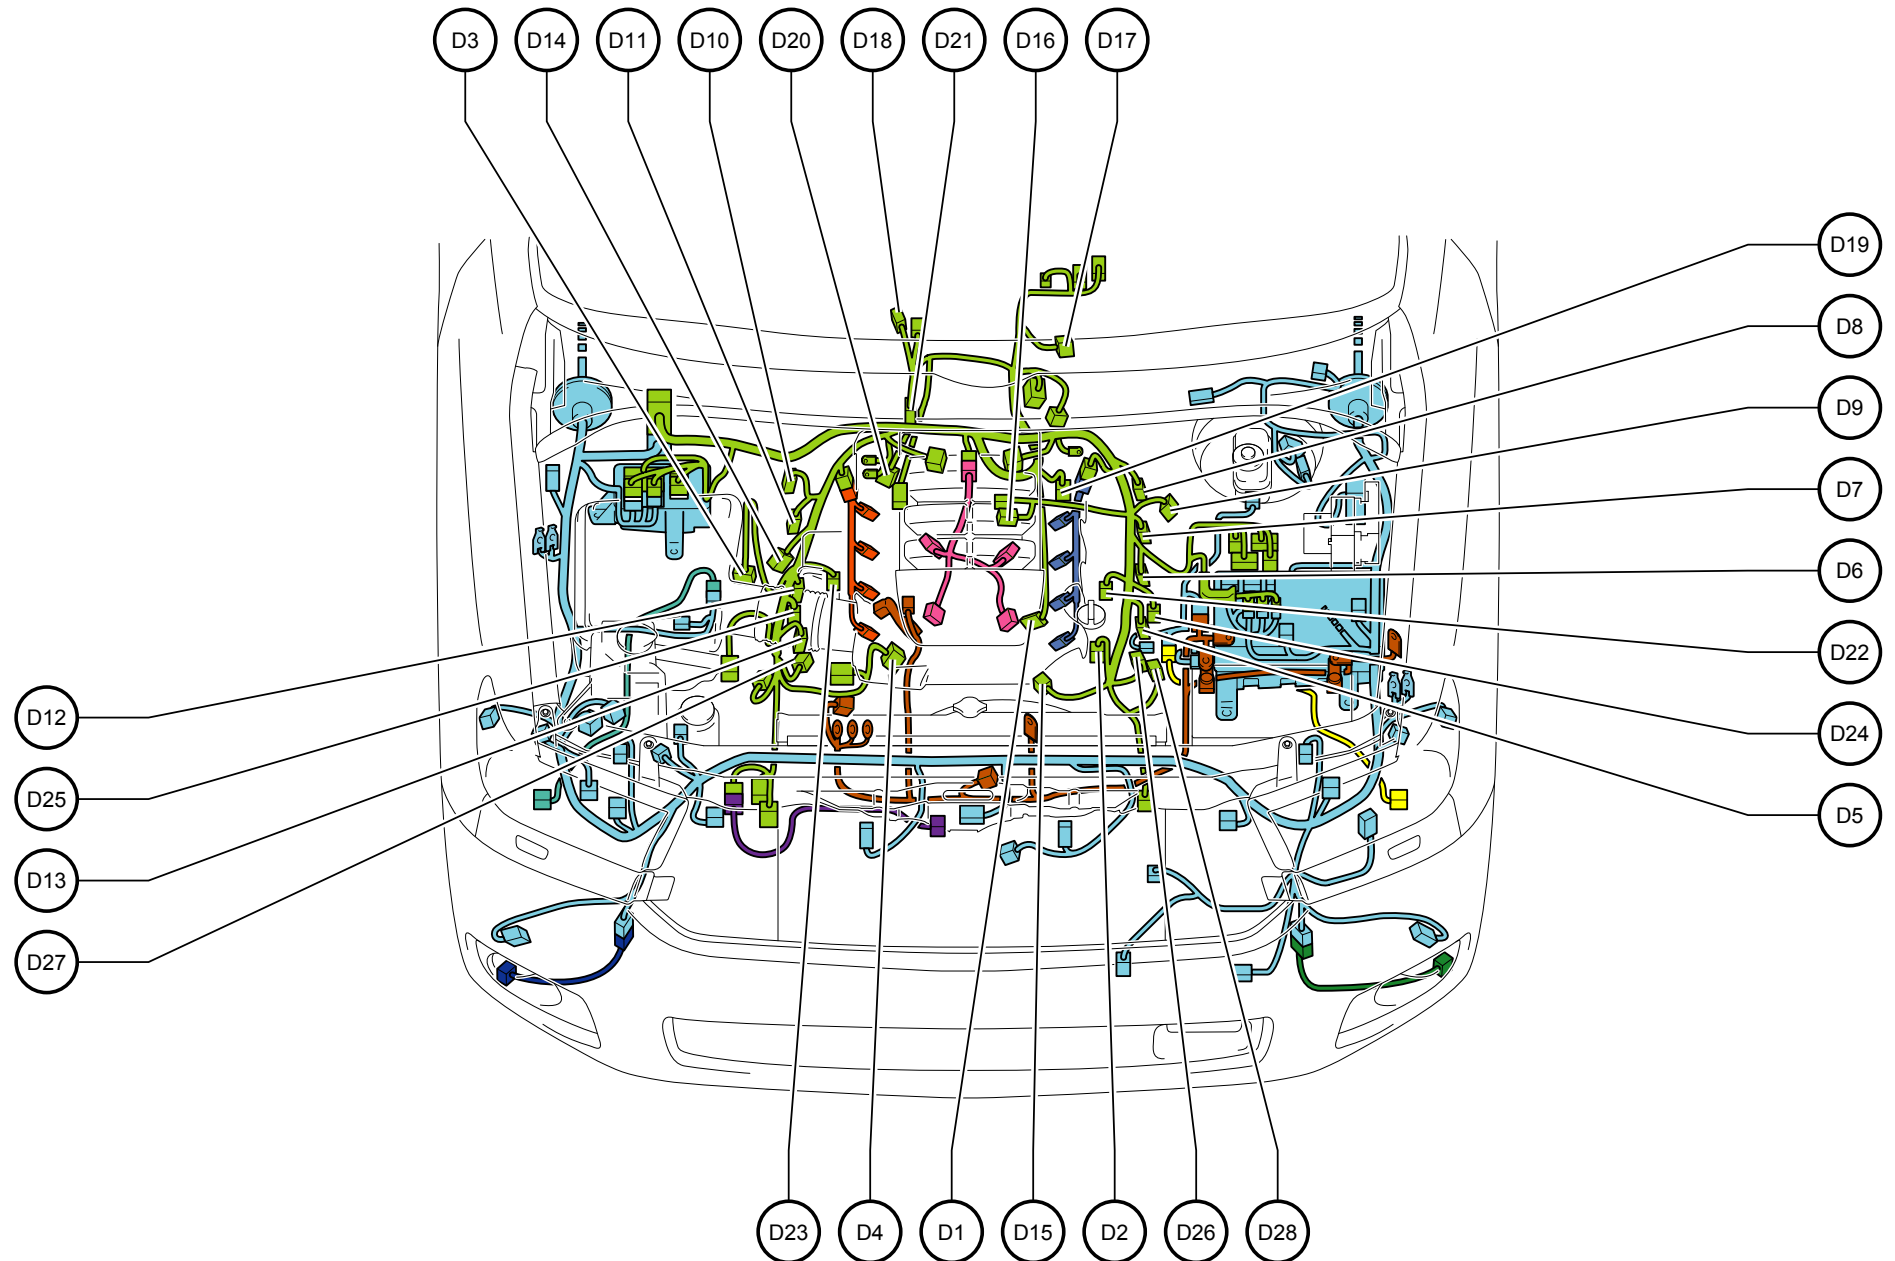

- D 1 Crank Position Sensor
- D 2 Cam Position Sensor
- D 3 Mass Air Flow Meter
- D 4 Throttle with Motor Body Assembly
- D 5 Ignition Coil Assembly No.1
- D 6 Ignition Coil Assembly No.3
- D 7 Ignition Coil Assembly No.5
- D 8 Ignition Coil Assembly No.7
- D 9 Noise Filter (Ignition Bank 1)
- D 10 Ignition Coil Assembly No.8
- D 11 Ignition Coil Assembly No.6
- D 12 Ignition Coil Assembly No.4
- D 13 Ignition Coil Assembly No.2
- D 14 Noise Filter (Ignition Bank 2)
- D 15 E.F.I. Engine Coolant Temperature Sensor
- D 16 Purge VSV
- D 17 Oxygen Sensor (Bank 1 Sensor 2)
- D 18 Oxygen Sensor (Bank 2 Sensor 2)
- D 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 20 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 21 Park/Neutral Position Switch Assembly
- D 22 VVT Sensor (Bank 1 Intake Side)
- D 23 VVT Sensor (Bank 2 Intake Side)
- D 24 VVT Sensor (Bank 1 Exhaust Side)
- D 25 VVT Sensor (Bank 2 Exhaust Side)
- D 26 Cam Timing Oil Control Valve (Bank 1 Intake Side)
- D 27 Cam Timing Oil Control Valve (Bank 2 Intake Side)
- D 28 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)

