

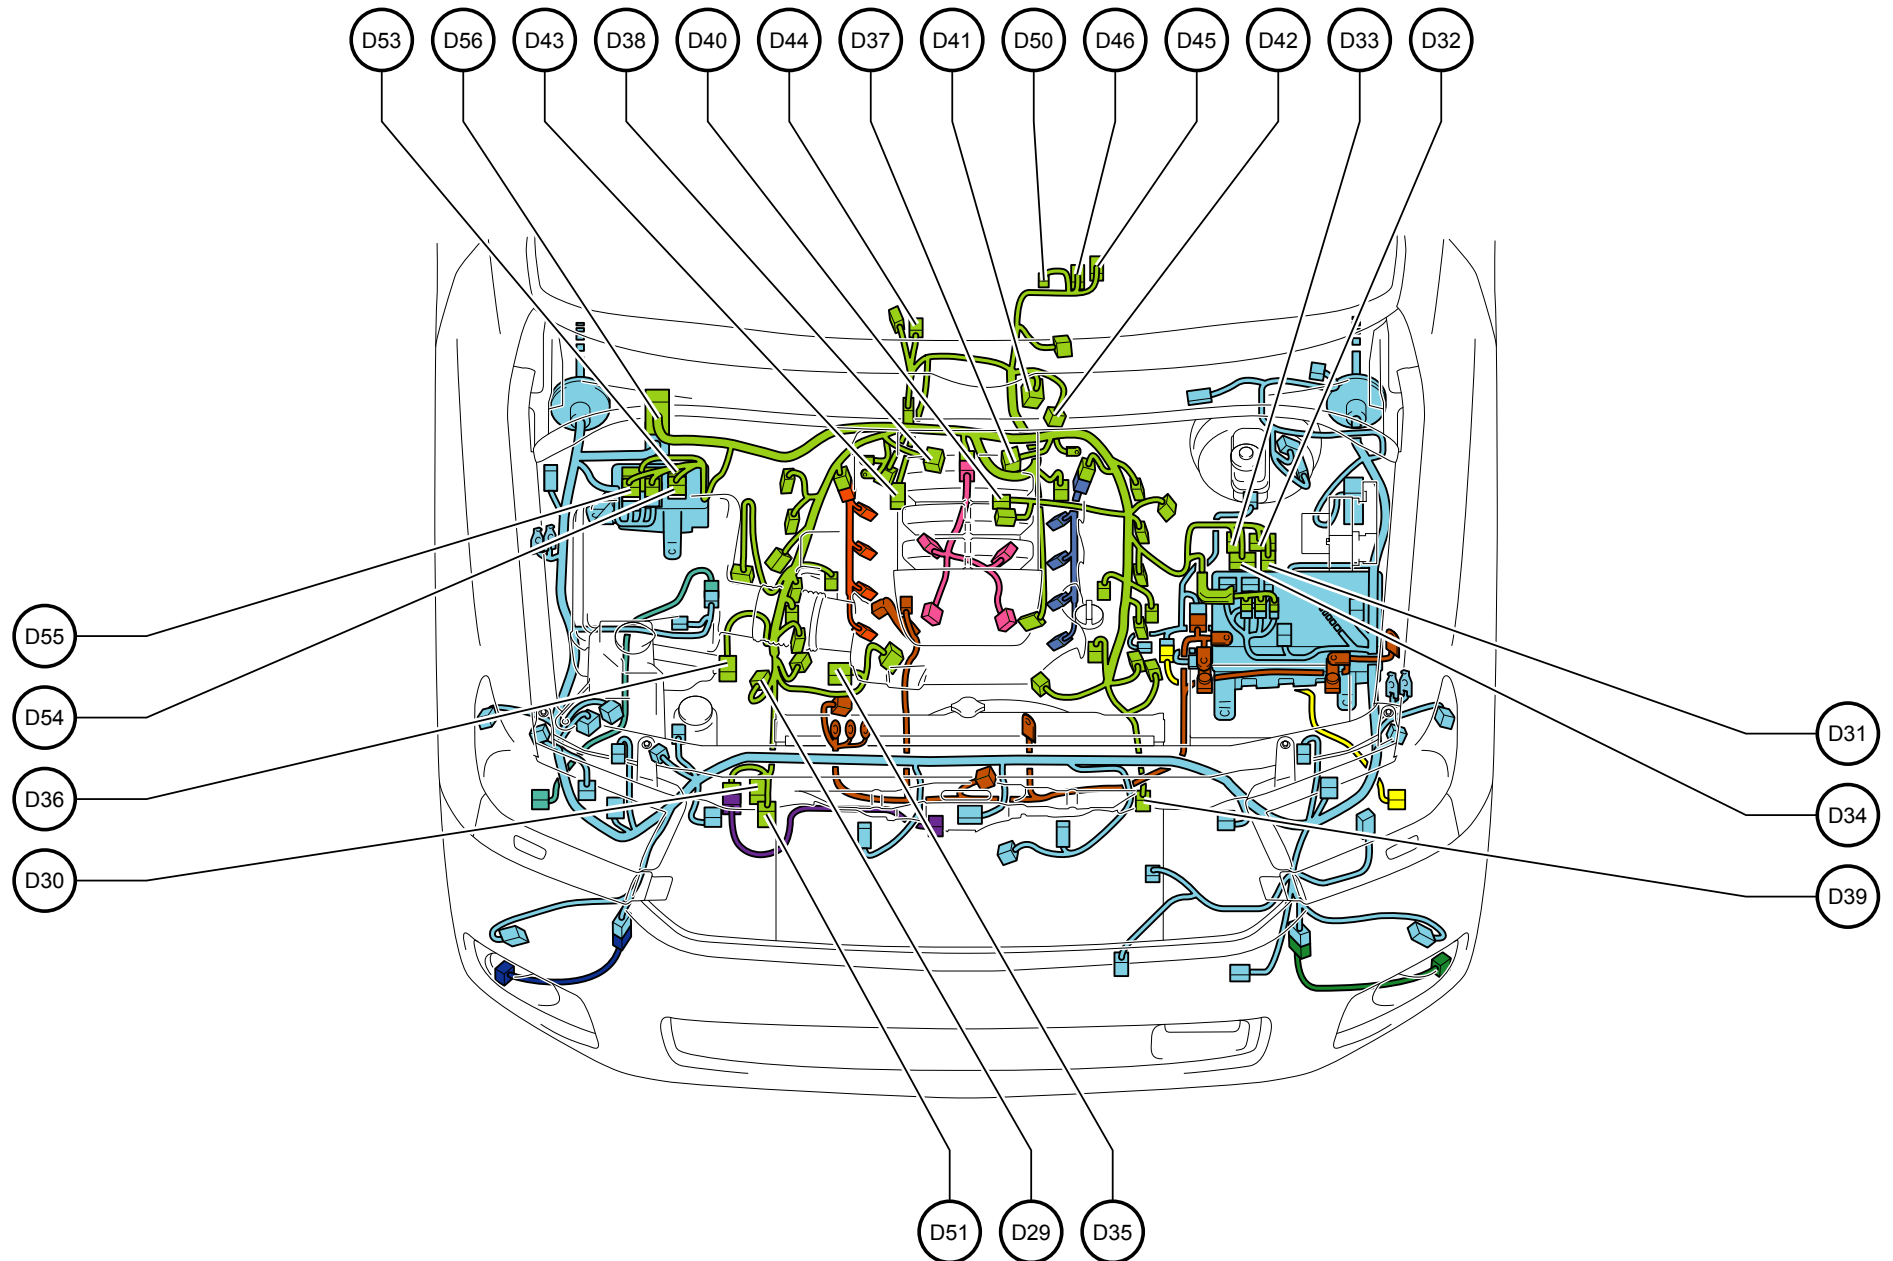
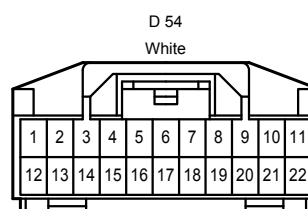
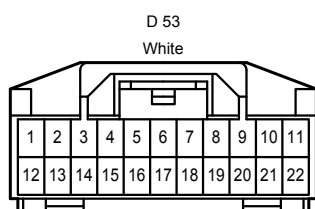
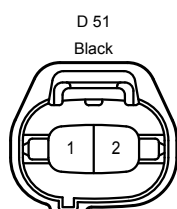
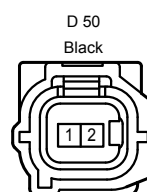
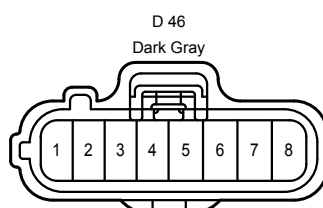
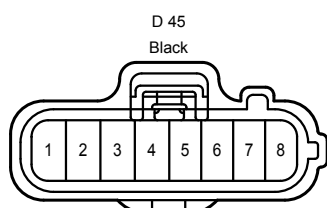
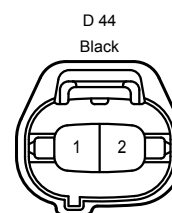
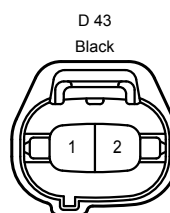
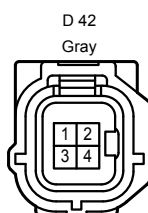
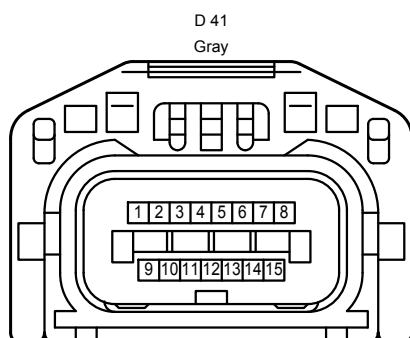
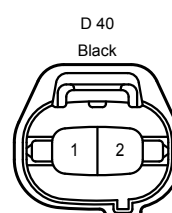
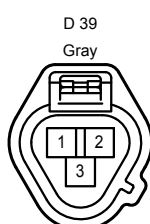
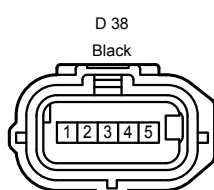
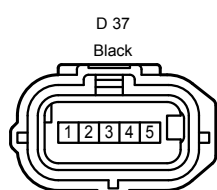
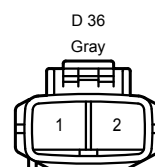
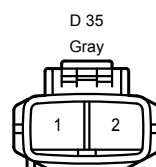
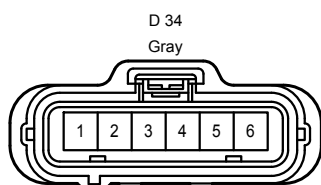
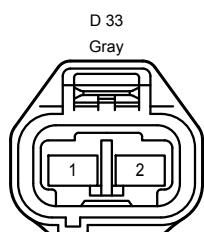
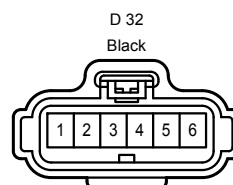



Position of Parts in Engine Compartment <3UR-FE>

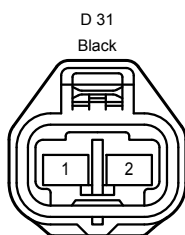

- D 29 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
- D 30 Power Steering Oil Pressure Sensor
- D 31 Air Injection Control Driver (Bank 1)
- D 32 Air Injection Control Driver (Bank 1)
- D 33 Air Injection Control Driver (Bank 2)
- D 34 Air Injection Control Driver (Bank 2)
- D 35 Air Pump Assembly (Bank 1)
- D 36 Air Pump Assembly (Bank 2)
- D 37 Air Switching Valve (Bank 1)
- D 38 Air Switching Valve (Bank 2)
- D 39 Cooler Compressor Assembly
- D 40 VSV (ACIS)
- D 41 Electronically Controlled Transmission Solenoid
- D 42 Electronically Controlled Transmission Solenoid
- D 43 Transmission Revolution Sensor (Turbine)
- D 44 Transmission Revolution Sensor (Counter Gear)
- D 45 Transfer Shift Actuator Assembly
- D 46 Transfer Shift Actuator Assembly
- D 50 Transfer Shift Actuator Assembly
- D 51 Vane Pump Assembly
- D 53 Junction Connector
- D 54 Junction Connector
- D 55 Junction Connector
- D 56 ECM

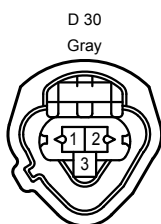

D 55
Blue

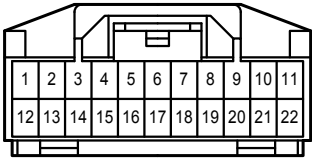

D 56
Black

