

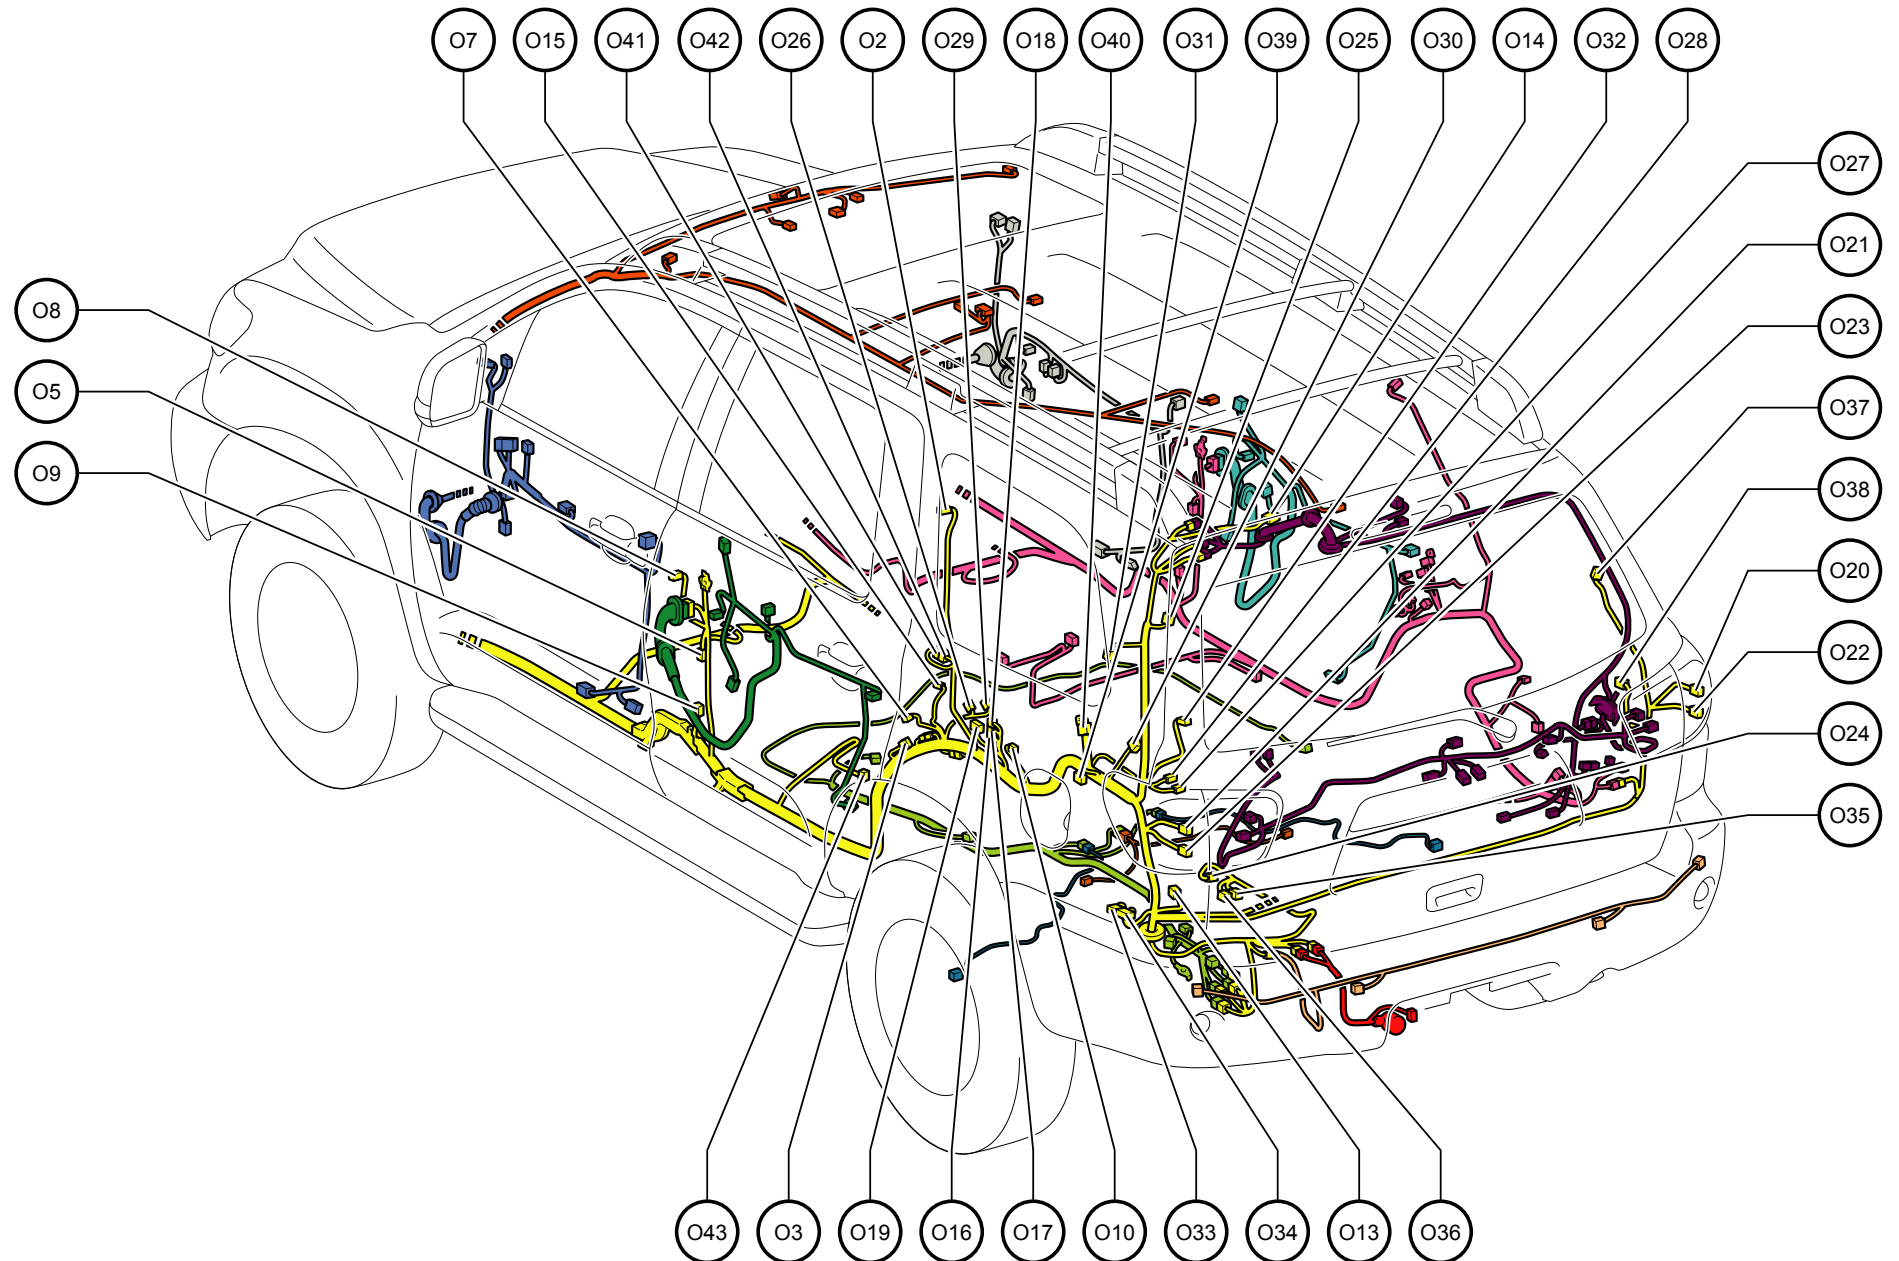
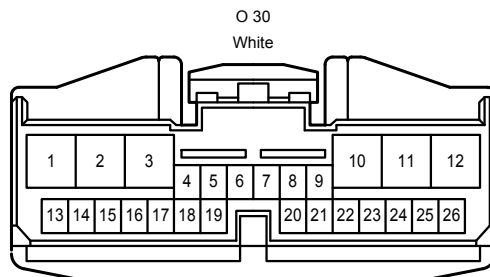
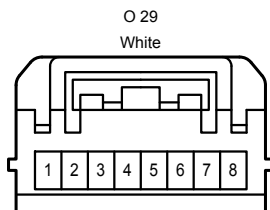
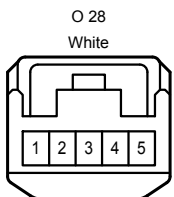
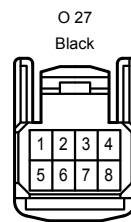
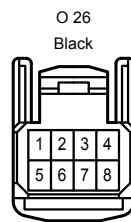
 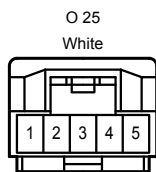
 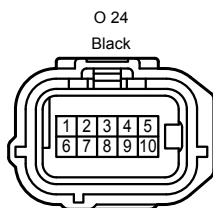


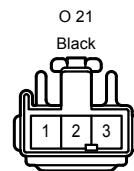
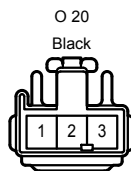
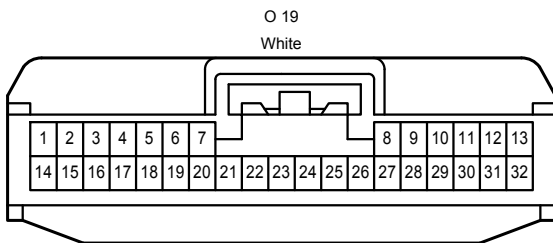
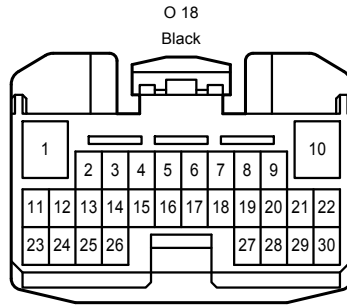
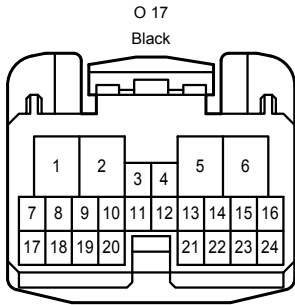
 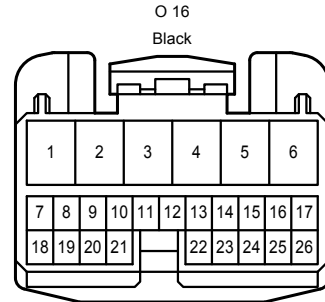
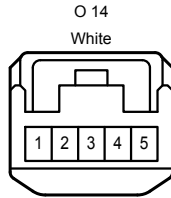

 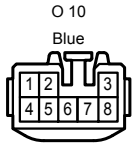
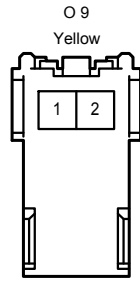
 


Position of Parts in Body

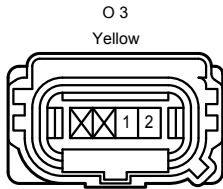

- O 2 Curtain Shield Airbag Assembly LH
- O 3 Rear Airbag Sensor LH
- O 5 Diode (Rear Door Courtesy LH)
- O 7 Rear Door Courtesy Light Switch LH
- O 8 Front Door Courtesy Light Switch LH
- O 9 Front Seat Outer Belt Assembly LH
- O 10 Voltage Inverter Assembly
- O 13 No.1 with Box Speaker Assembly
- O 14 Tire Pressure Warning Antenna and Receiver
- O 15 Rear Room Temperature Sensor (Cooler Thermistor)
- O 16 Suspension Control ECU
- O 17 Suspension Control ECU
- O 18 Suspension Control ECU
- O 19 Suspension Control ECU
- O 20 Rear Combination Light Assembly RH
- O 21 Rear Combination Light Assembly LH
- O 22 Rear Combination Light Assembly RH
- O 23 Rear Combination Light Assembly LH
- O 24 Canister Pump Module
- O 25 Door Control Receiver
- O 26 Front Fold Seat Switch Assembly LH
- O 27 Rear Fold Seat Switch Assembly LH
- O 28 Rear Fold Seat Switch Assembly RH
- O 29 Rear Power Seat Switch LH
- O 30 Power Back Door Unit Assembly
- O 31 Quarter Side Speaker Assembly LH
- O 32 Power Back Door Closer Switch (Back Door Control Switch)
- O 33 Fold Seat Control ECU LH
- O 34 Fold Seat Control ECU LH
- O 35 Fuel Pump Control ECU Assembly
- O 36 Fuel Pump Control ECU Assembly
- O 37 Quarter Side Speaker Assembly RH
- O 38 Rear Power Point Socket Assembly
- O 39 Junction Connector
- O 40 Junction Connector
- O 41 Junction Connector
- O 42 Junction Connector
- O 43 Rear Seat Heater Control Sub-Assembly LH

Position of Parts in Body



Position of Parts in Body

