

 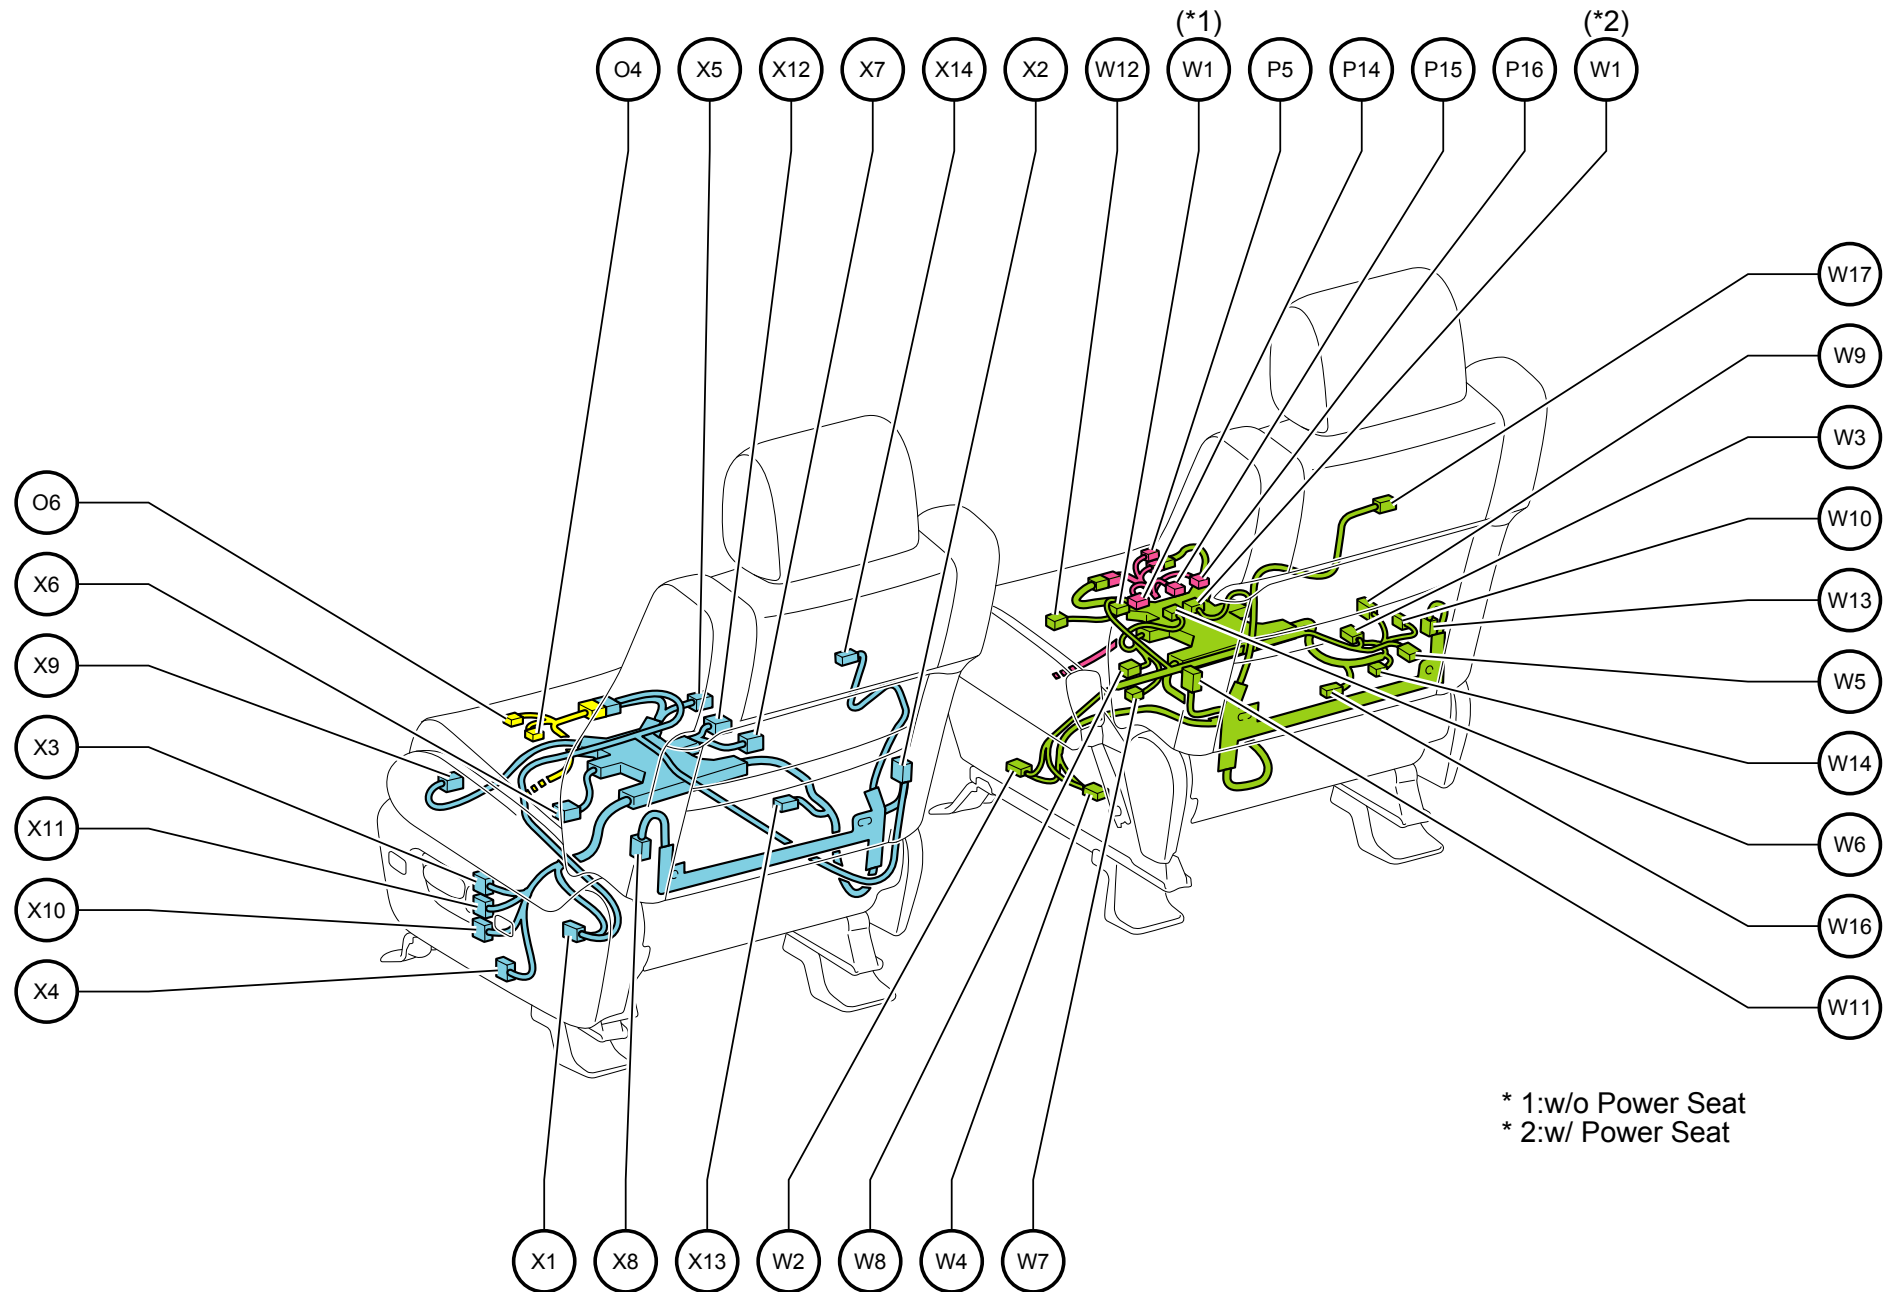
 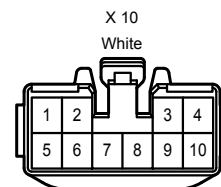
 
 
 

 
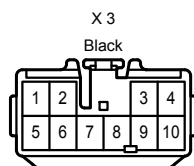

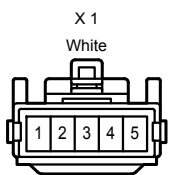
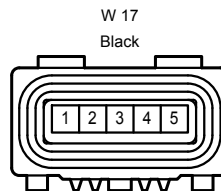
 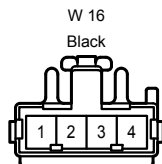
 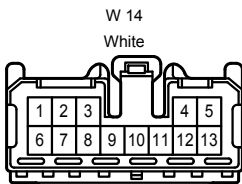
 


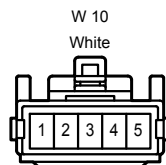
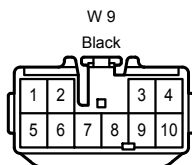
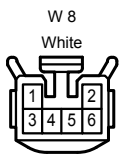
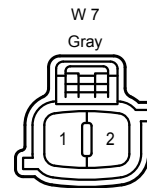
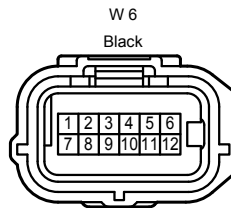
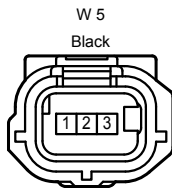
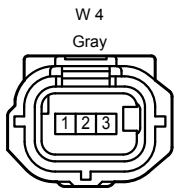
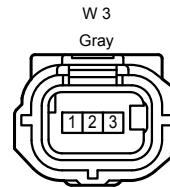
 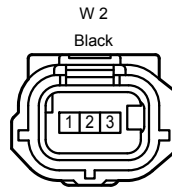
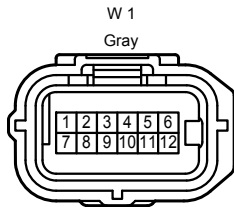



Position of Parts in Seat <Front Seat>

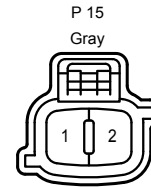

- O 4 Front Seat Inner Belt Assembly LH
- O 6 Side Airbag Squib Circuit LH
  
- P 5 Side Airbag Squib Circuit RH
- P 14 Occupant Detection ECU
- P 15 Front Seat Inner Belt Assembly RH
- P 16 Side Airbag Squib Circuit RH
  
- W 1 Occupant Detection ECU
- W 2 Front Occupant Classification Sensor RH (Inner)
- W 3 Front Occupant Classification Sensor RH (Outer)
- W 4 Rear Occupant Classification Sensor RH (Inner)
- W 5 Rear Occupant Classification Sensor RH (Outer)
- W 6 Occupant Detection ECU
- W 7 Front Seat Inner Belt Assembly LH
- W 8 Front Seat Heater Control Sub-Assembly RH
- W 9 Front Power Seat Switch RH
- W 10 Front Lumbar Power Seat Switch RH
- W 11 Front Lumbar Support Forward and Back Motor Assembly RH
- W 12 Front Power Seat Slide Position Motor Assembly RH
- W 13 Front Power Seat Reclining Position Motor Assembly RH
- W 14 Junction Connector
- W 16 Seat Cushion Climate Control Blower RH
- W 17 Seat Back Climate Control Blower RH
  
- X 1 Front Lumbar Power Seat Switch LH
- X 2 Front Lumbar Support Forward and Back Motor Assembly LH
- X 3 Front Power Seat Switch LH
- X 4 Seat Variable Cushion Switch LH
- X 5 Front Power Seat Slide Position Motor Assembly LH
- X 6 Front Power Seat Vertical Position Motor Assembly LH
- X 7 Front Power Seat Lift Position Motor Assembly LH
- X 8 Front Power Seat Reclining Position Motor Assembly LH
- X 9 Front Power Seat Cushion Control Motor Assembly LH
- X 10 Front Power Seat ECU and Switch LH
- X 11 Front Power Seat ECU and Switch LH
- X 12 Front Seat Heater Control Sub-Assembly LH
- X 13 Seat Cushion Climate Control Blower LH
- X 14 Seat Back Climate Control Blower LH

Position of Parts in Seat <Front Seat>

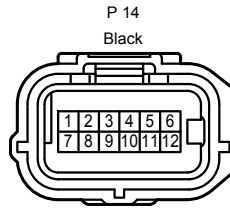


Position of Parts in Seat <Front Seat>

---

X 11

White

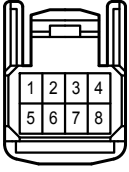


X 12

White



X 13

Black

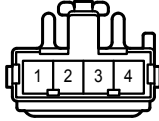

X 14

Black

