


Position of Parts in Instrument Panel

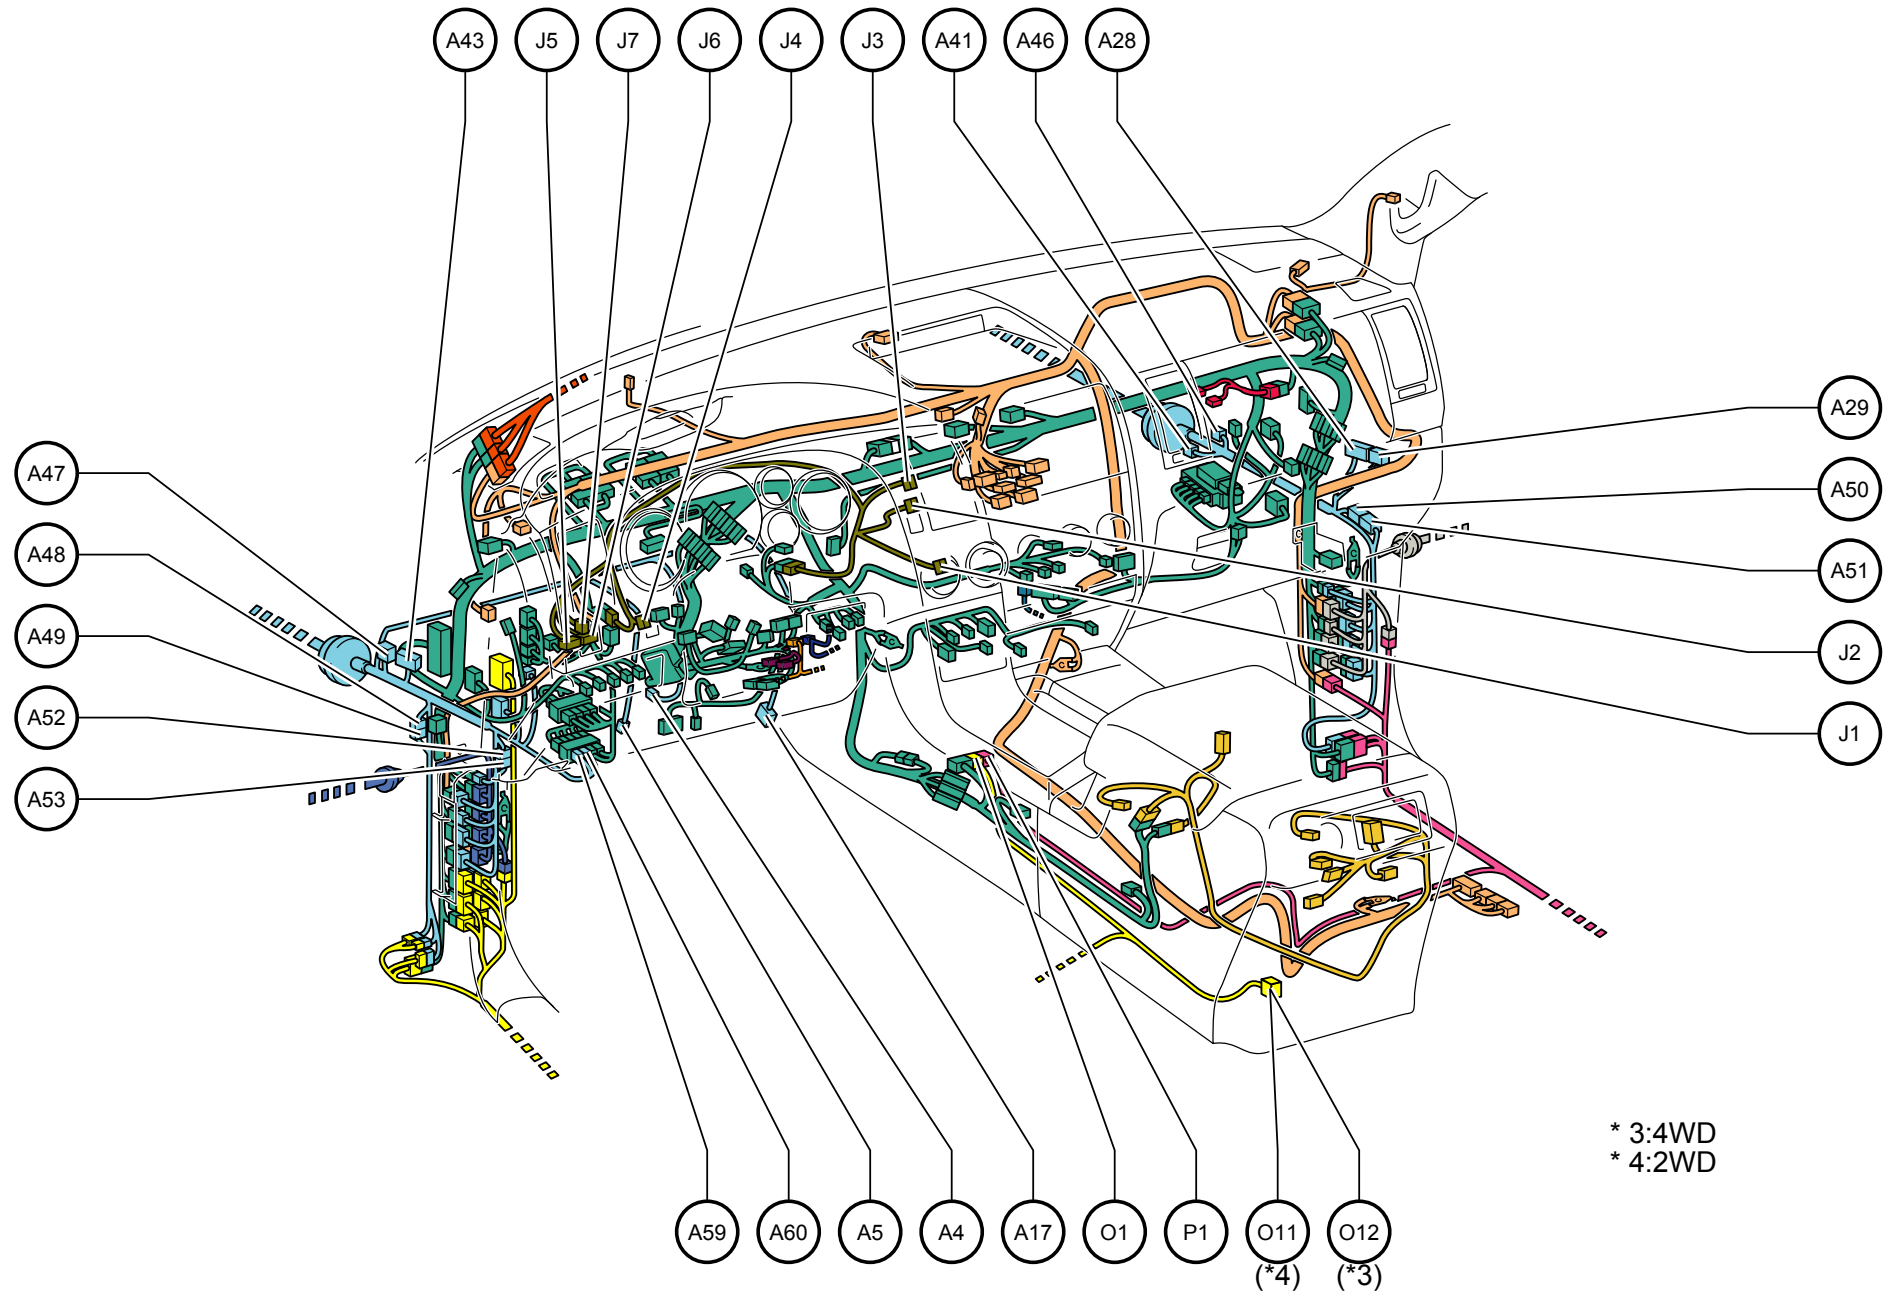














 




- A 4 Stop Light Switch Assembly
- A 5 Parking Brake Switch Assembly
- A 17 Accelerator Pedal Sensor Assembly
- A 28 Four Wheel Drive Control ECU
- A 29 Four Wheel Drive Control ECU
- A 41 Diode (Starting)
- A 43 Distance Control ECU Assembly
- A 46 Junction Connector
- A 47 Junction Connector
- A 48 Junction Connector
- A 49 Junction Connector
- A 50 Junction Connector
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 59 Junction Connector
- A 60 Junction Connector

- J 1 4 Wheel Drive Control Switch
- J 2 Drive Monitor Switch
- J 3 Hazard Warning Signal Switch Assembly
- J 4 Light Control Rheostat
- J 5 Outer Mirror Switch Assembly
- J 6 Outer Mirror Switch Assembly
- J 7 Interior Dome Light Switch Assembly

- O 1 Center Airbag Sensor Assembly
- O 11 Yaw Rate Sensor Assembly
- O 12 Yaw Rate Sensor Assembly

- P 1 Center Airbag Sensor Assembly

Position of Parts in Instrument Panel

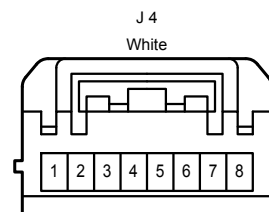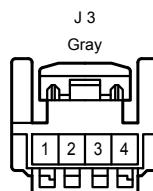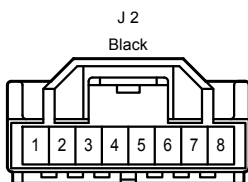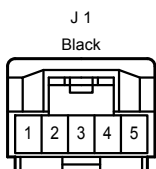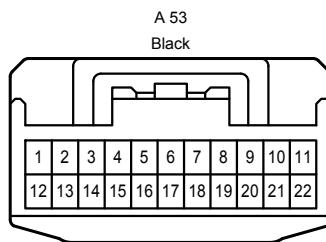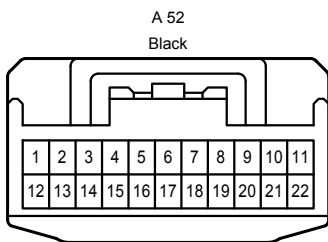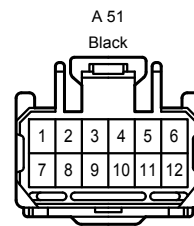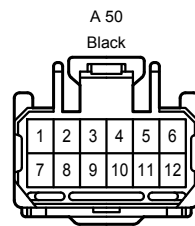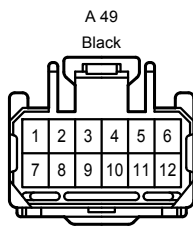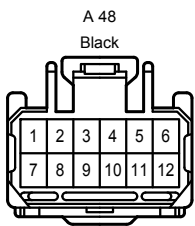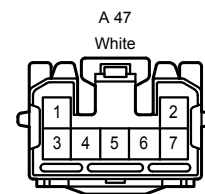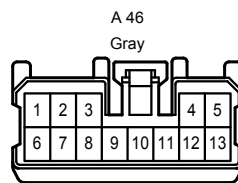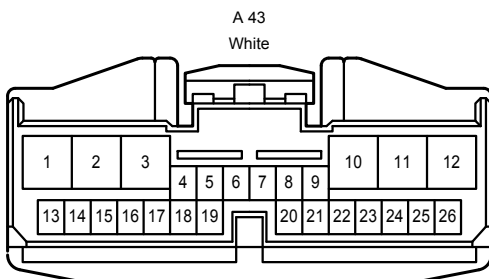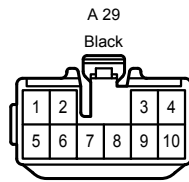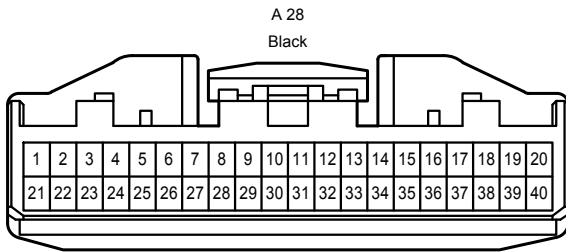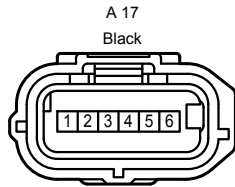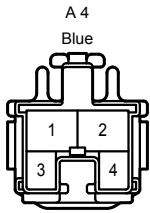

Position of Parts in Instrument Panel

