 
 
 


Back Door Opener

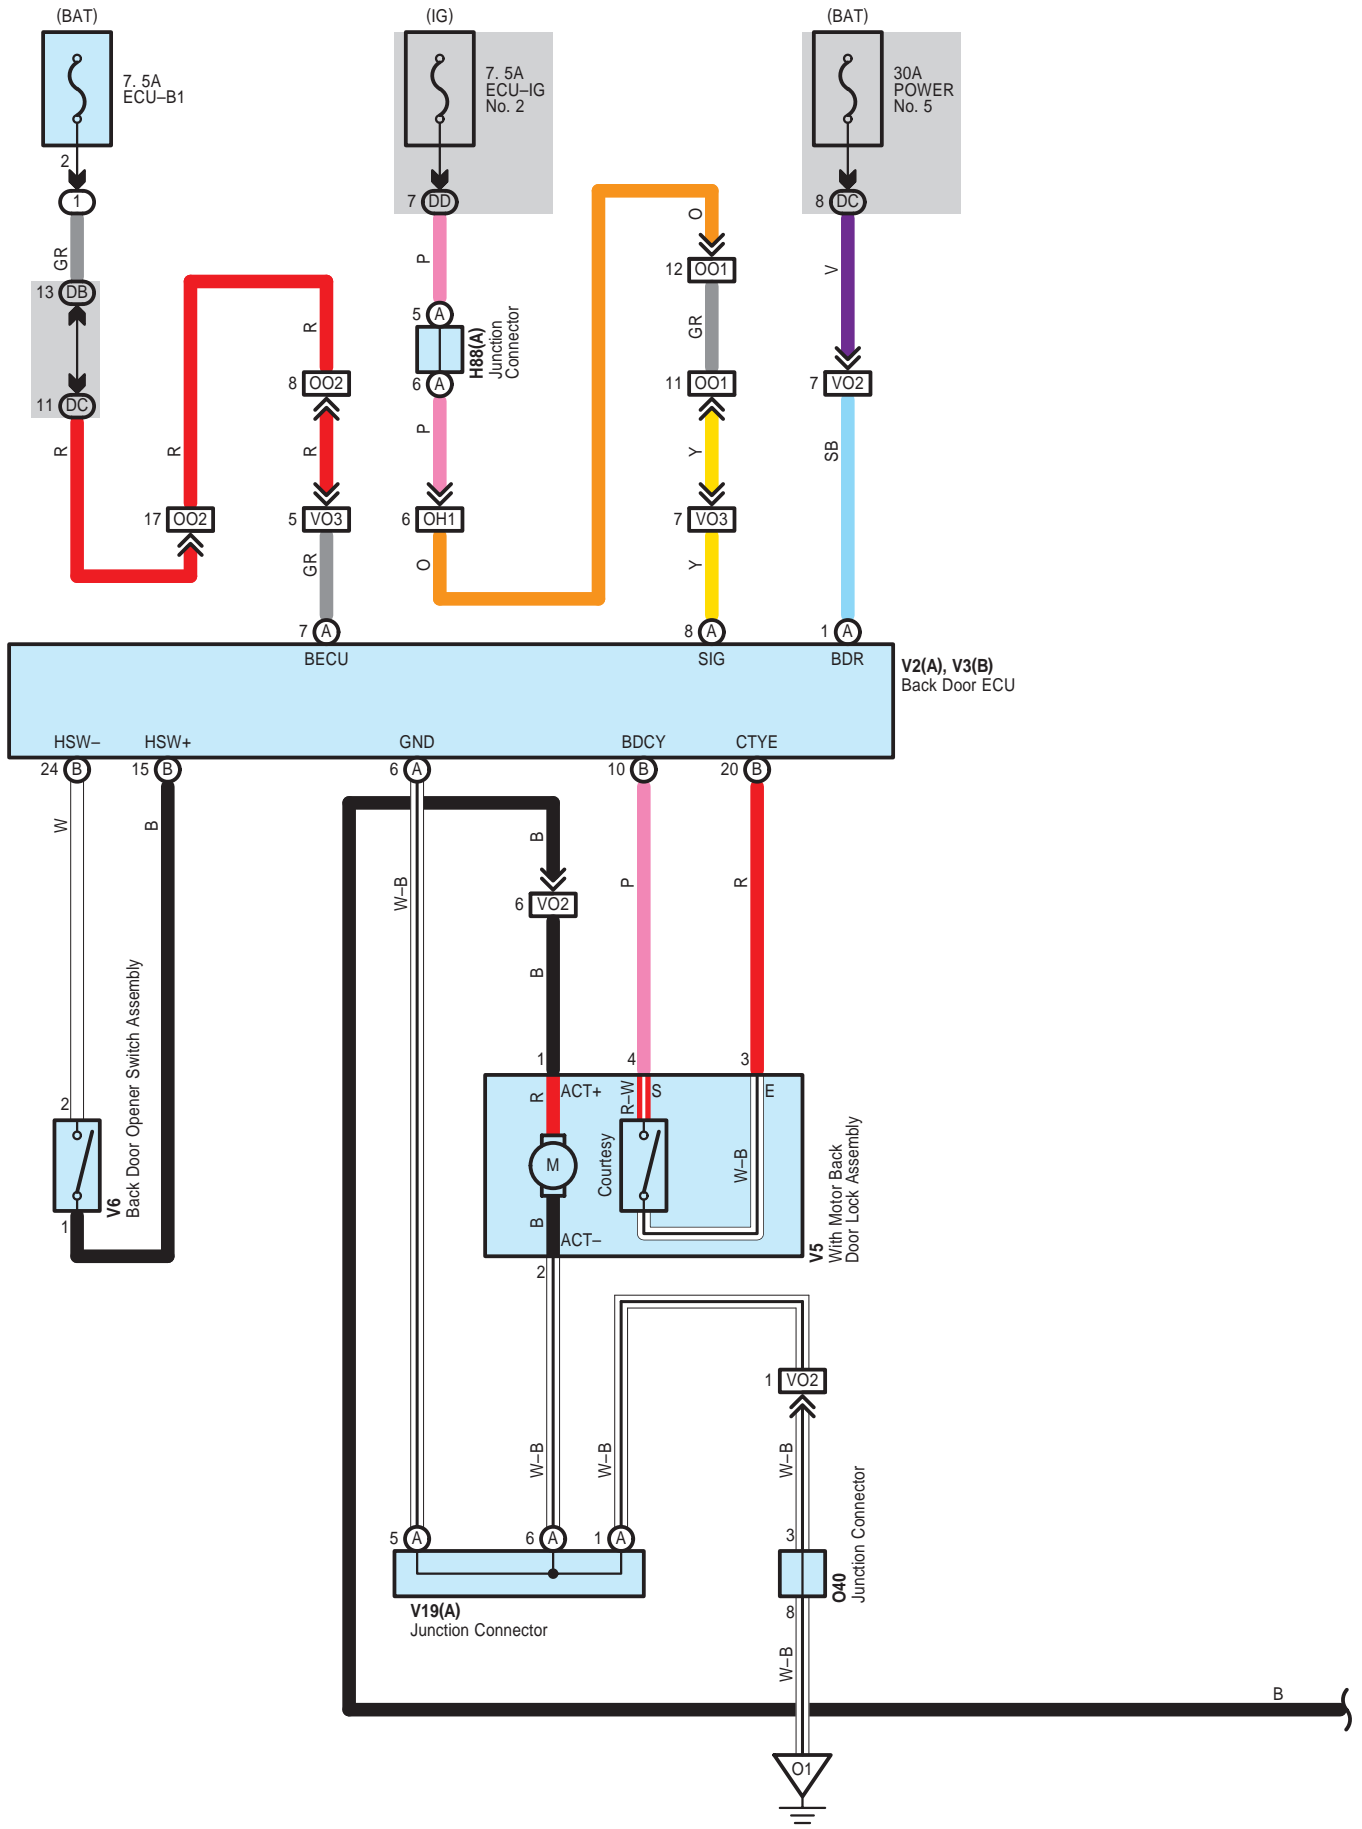 


Back Door Opener

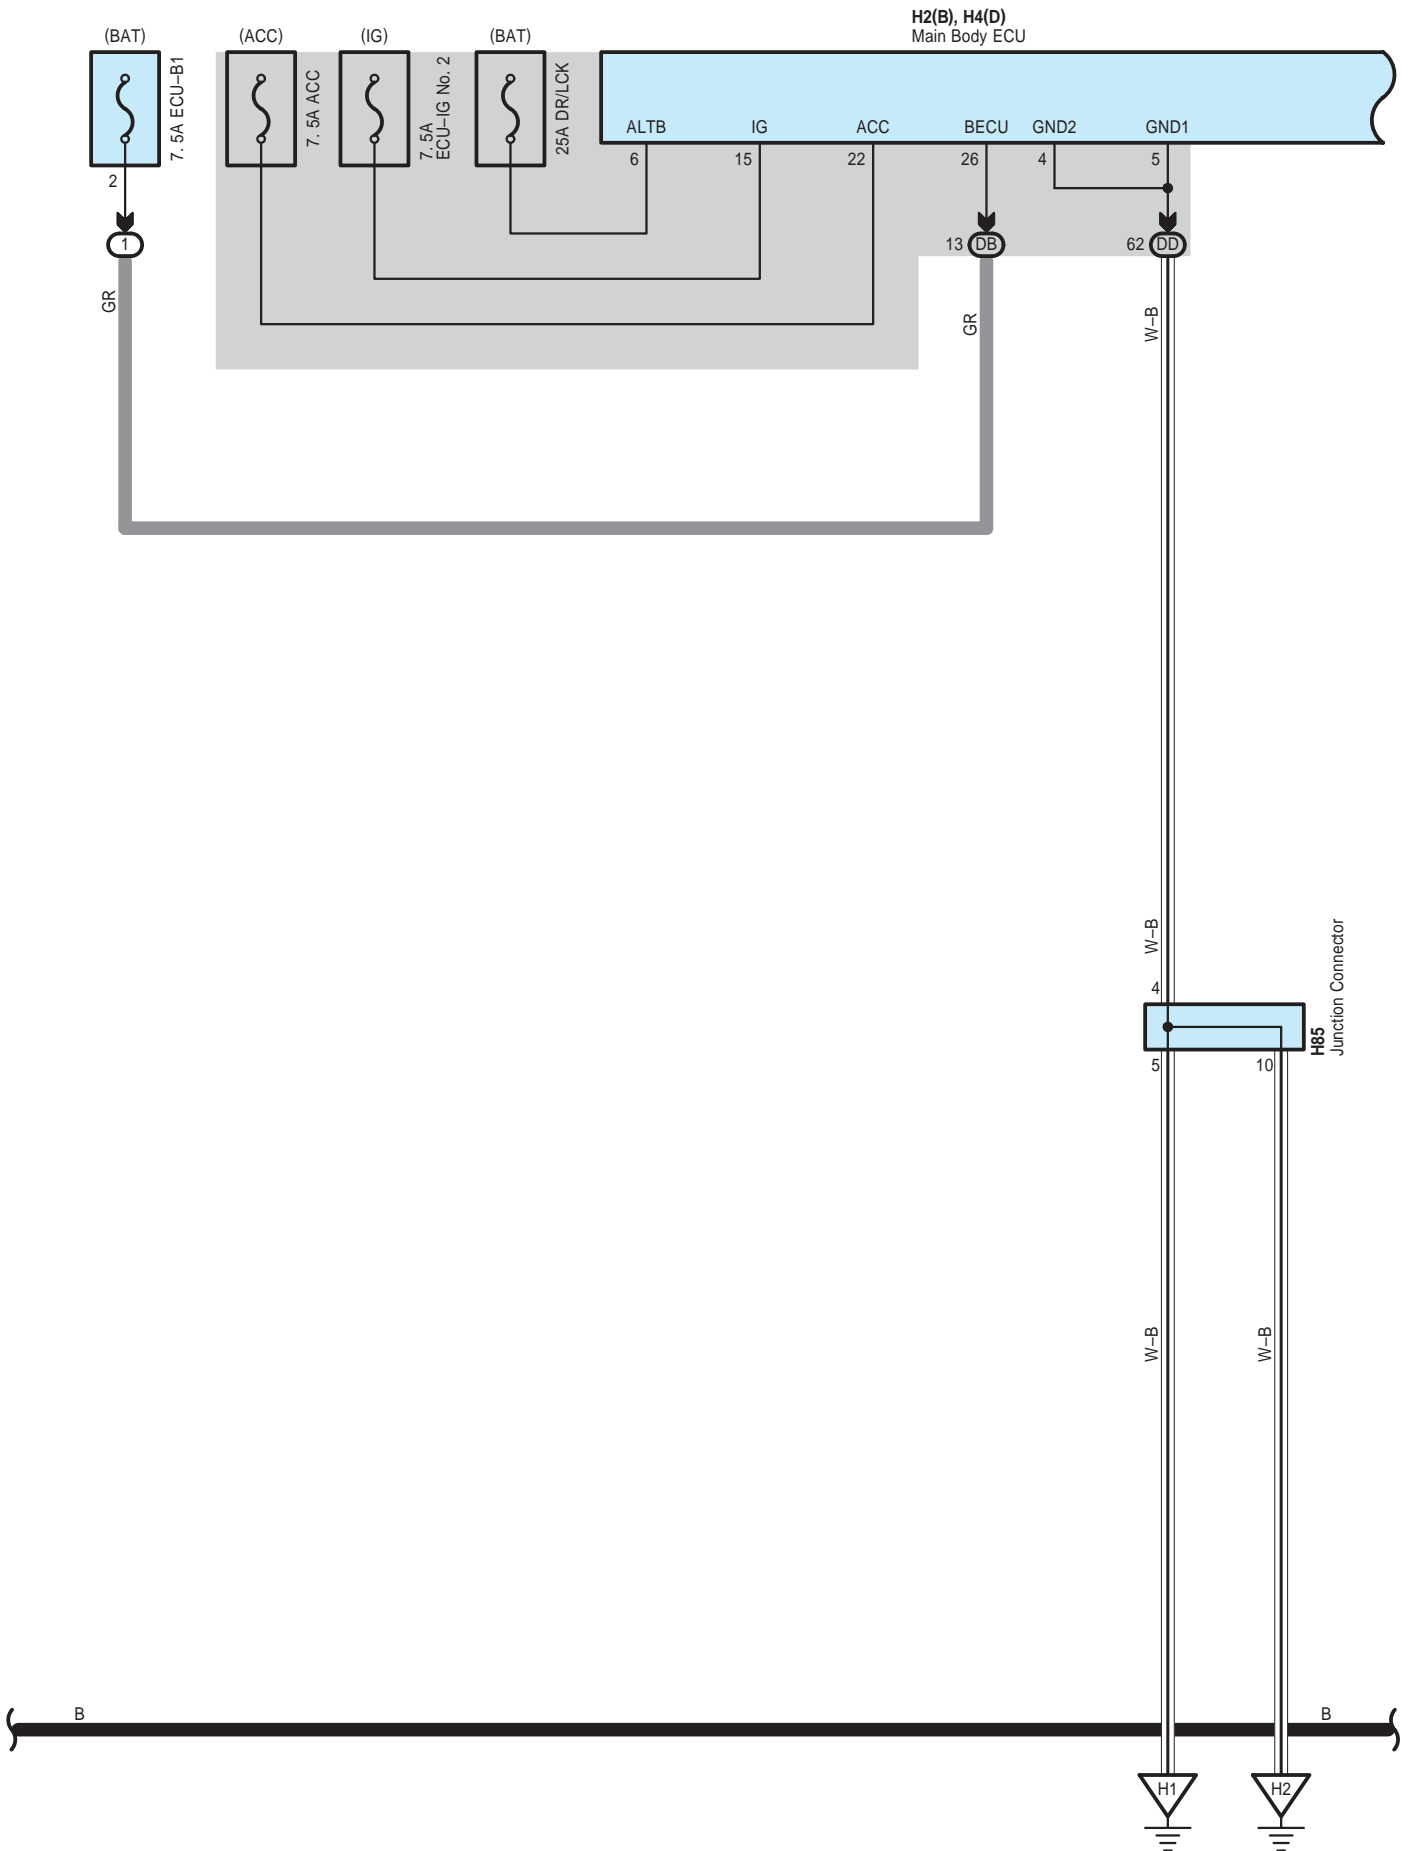

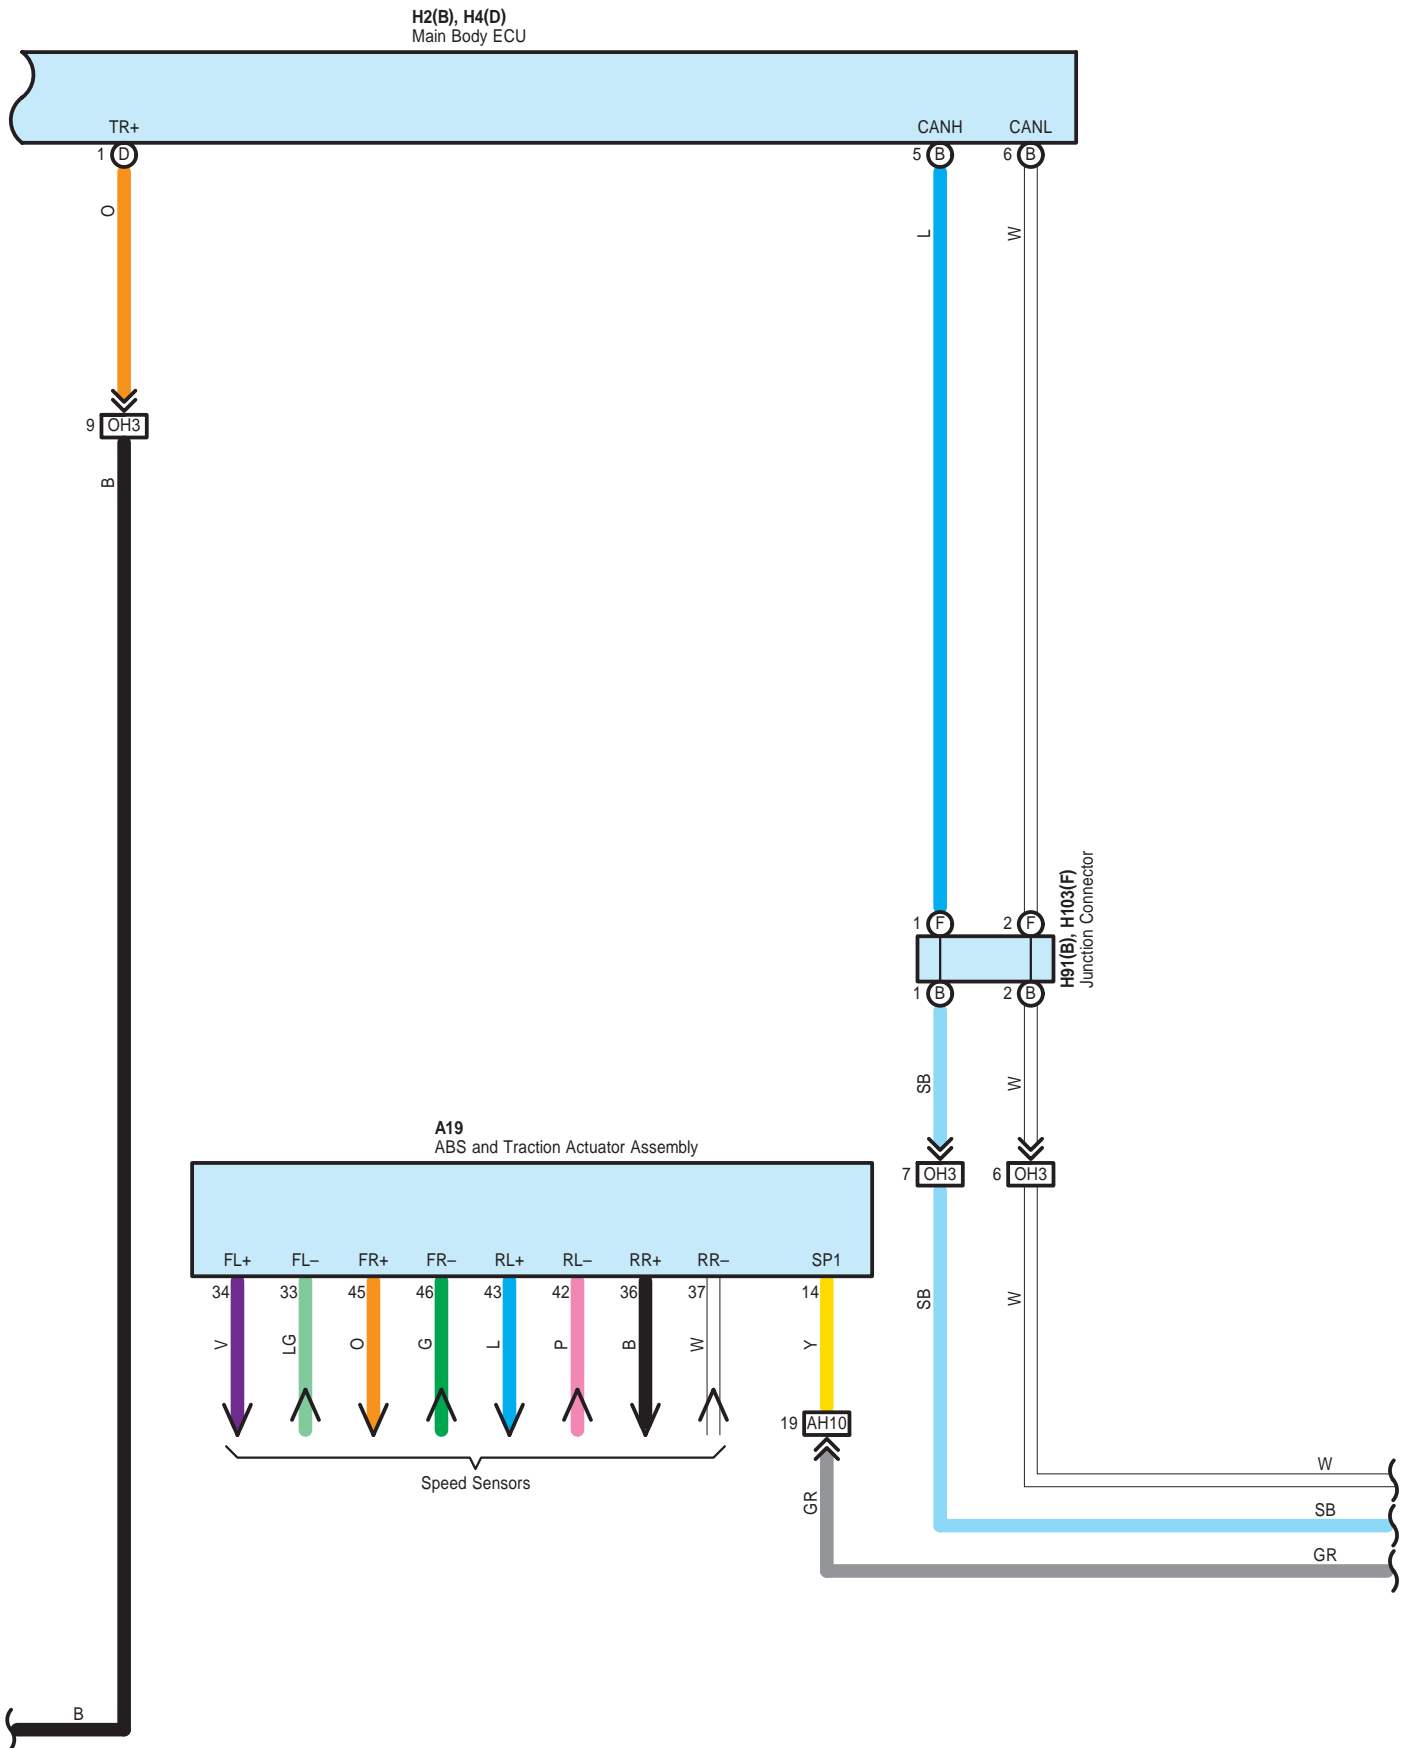


Back Door Opener

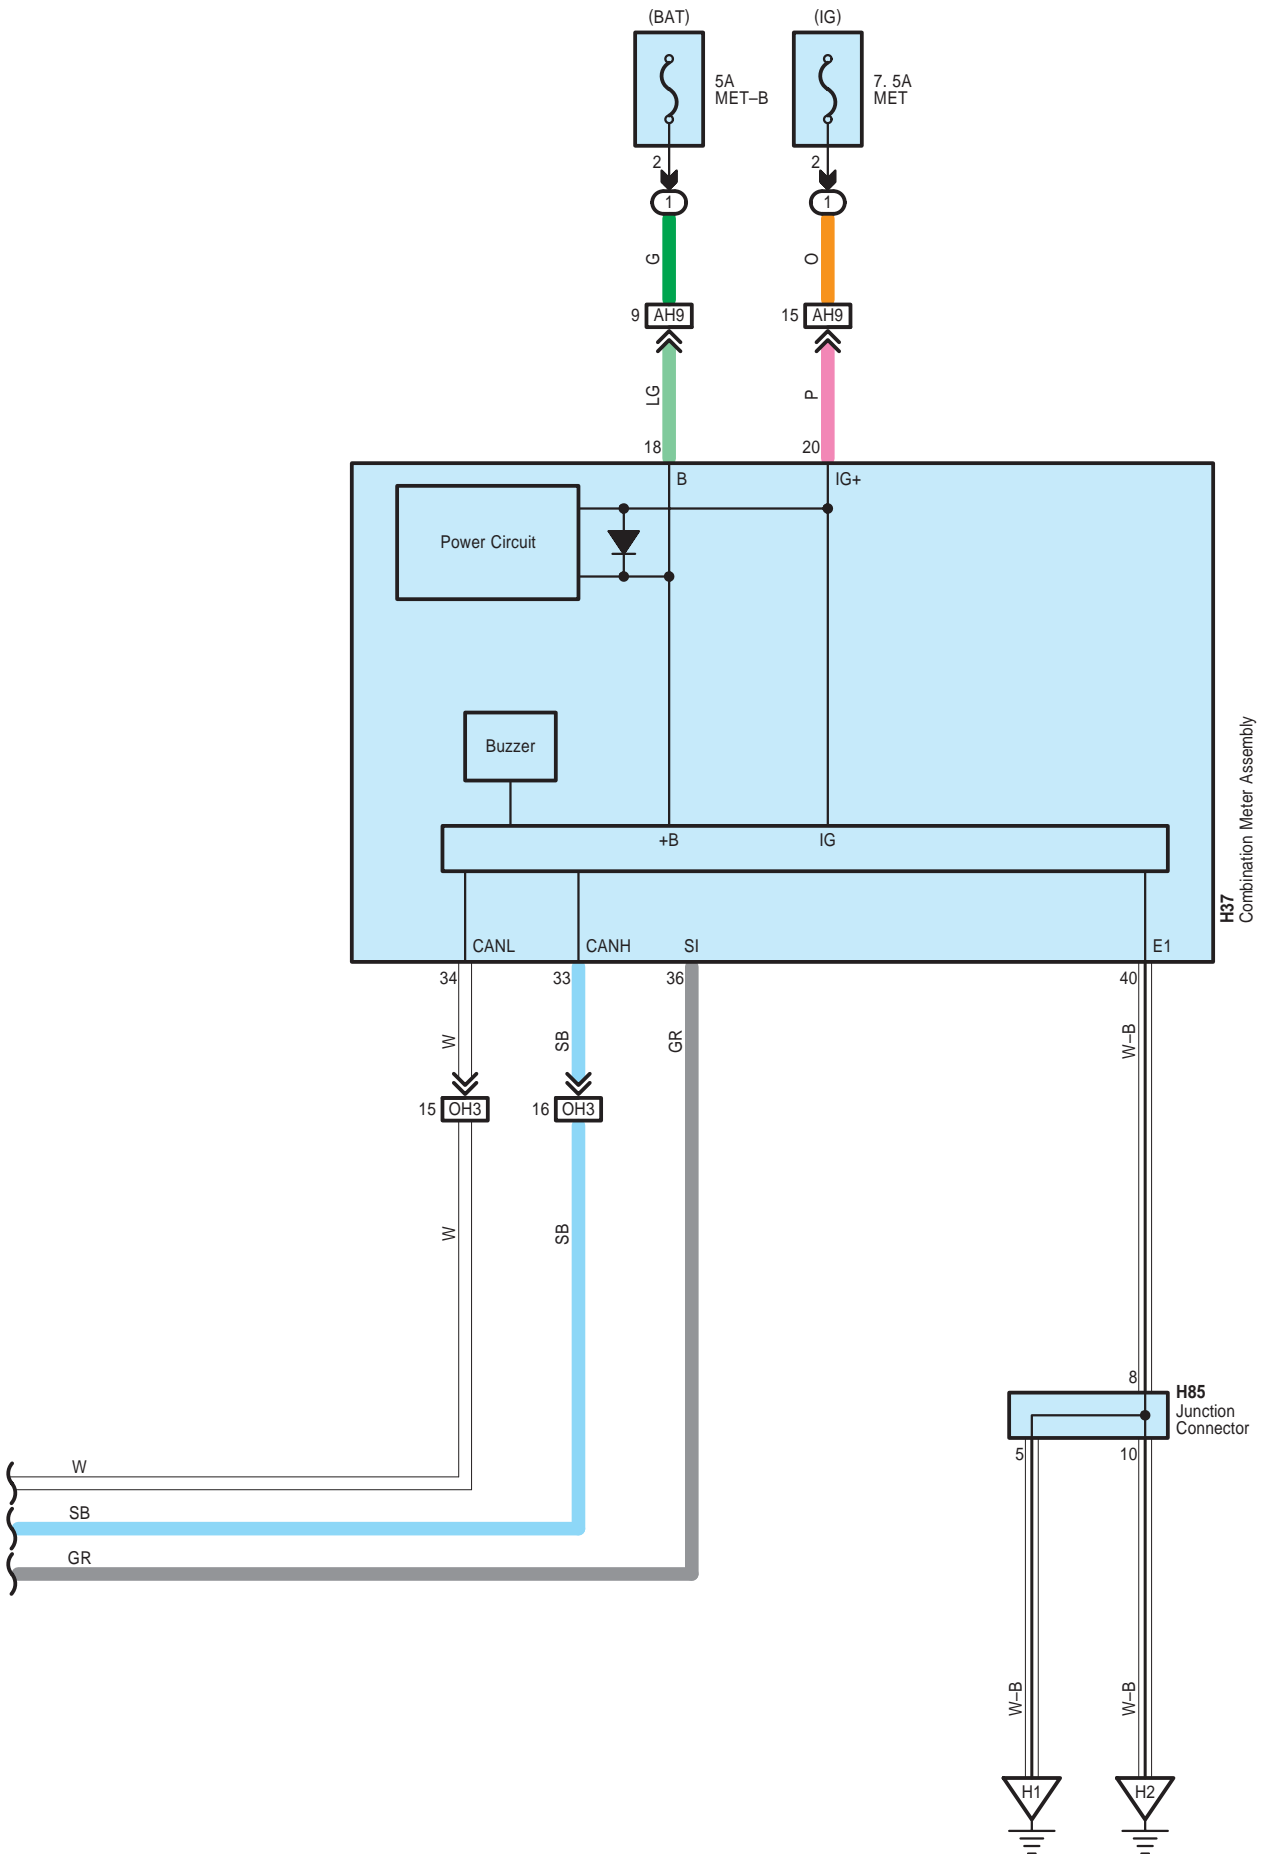


Back Door Opener

 
A 19
Black

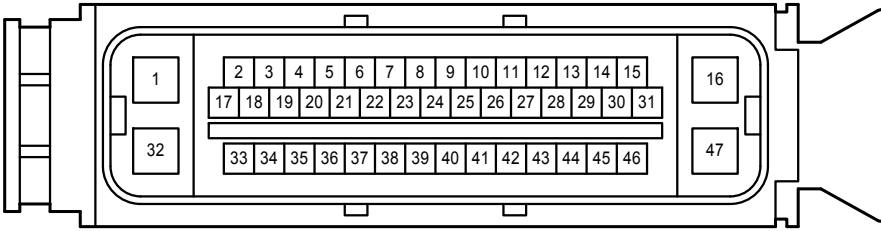


H 2
White

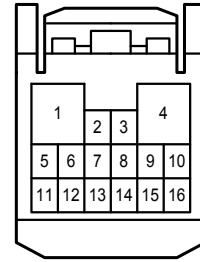 


H 4
White

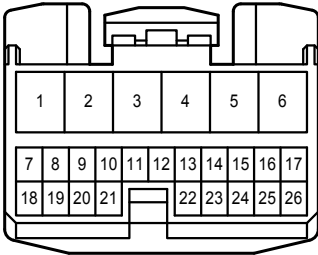 


H 37
White

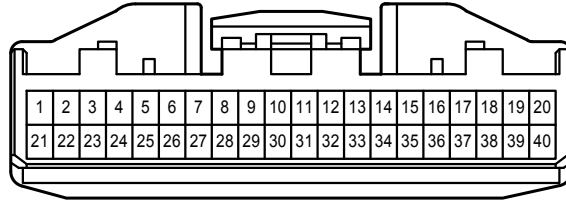 


H 85
White

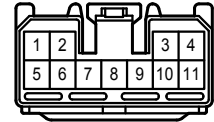 


H 88
White

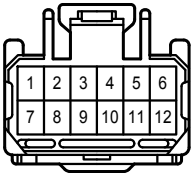 


H 91
White

 


H103
White

 


O 40
White

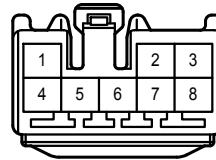 


V 2
White

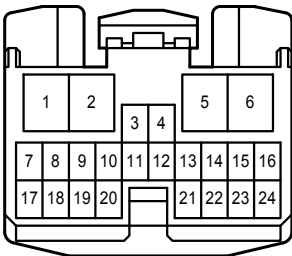 


V 3
White

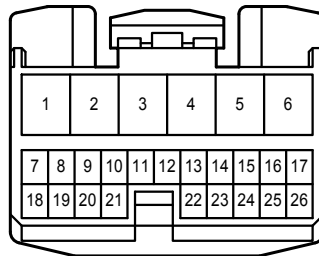 


V 5
White

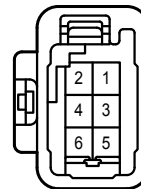 


V 6
White

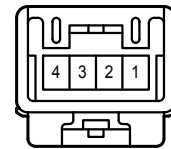 


V 19
Gray

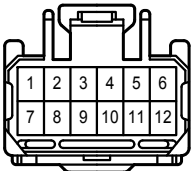 


DB
White

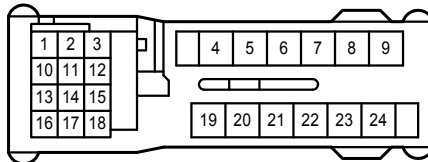 


DC
White

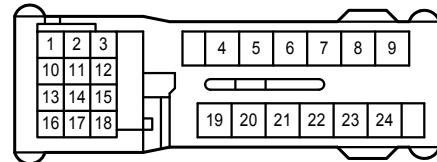 


DD
White

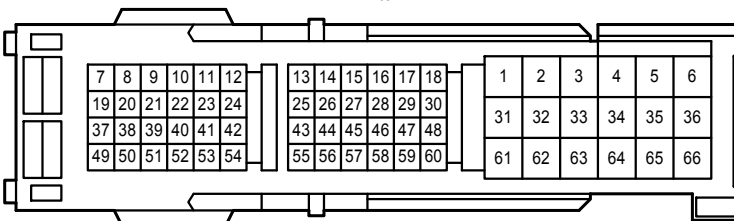 


AH9
Gray

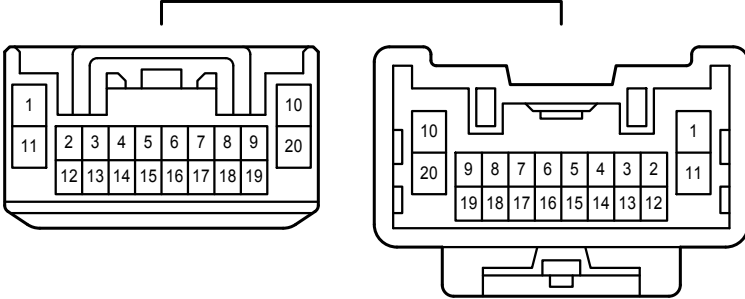 


AH10
Gray

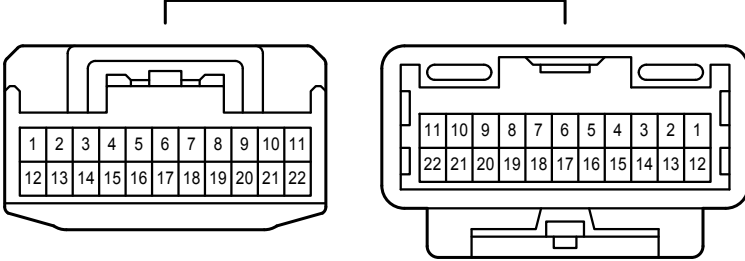 


OH1
Black

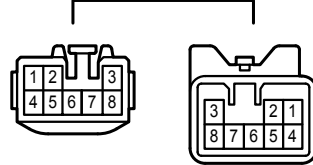 


OH3
White

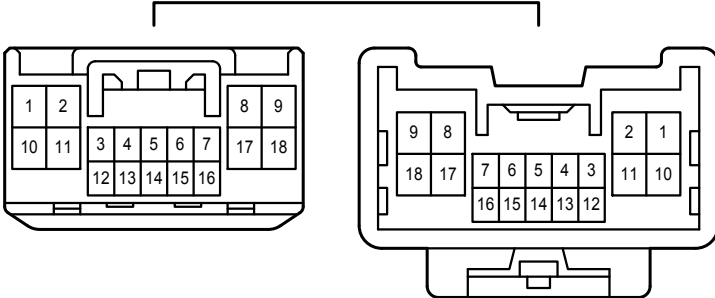 

OO1
White

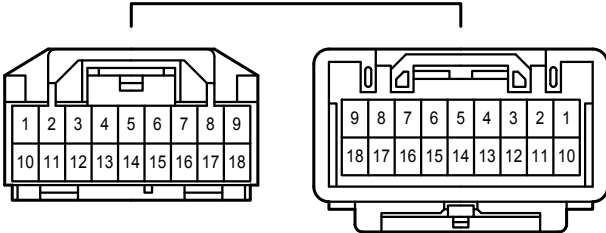 

OO2
White

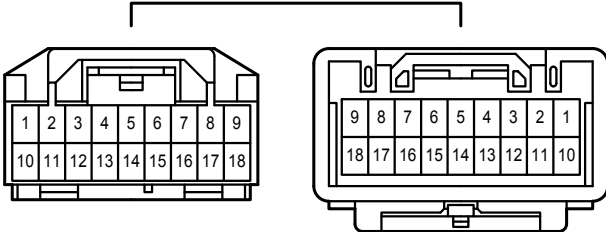 

VO2
White

