 


ENHANCEMENT OF PRODUCT APPEAL

 
■ WASHER NOZZLE

1. Front Washer

Spray type washer nozzles are located under the engine hood to ensure a good appearance. These nozzles can spray the windshield with an oscillating stream to optimally distribute and spread washer fluid. When washer fluid is sprayed from under the hood, the spray trajectory is less affected by airflow, thus maintaining a favorable spray trajectory at high speeds.

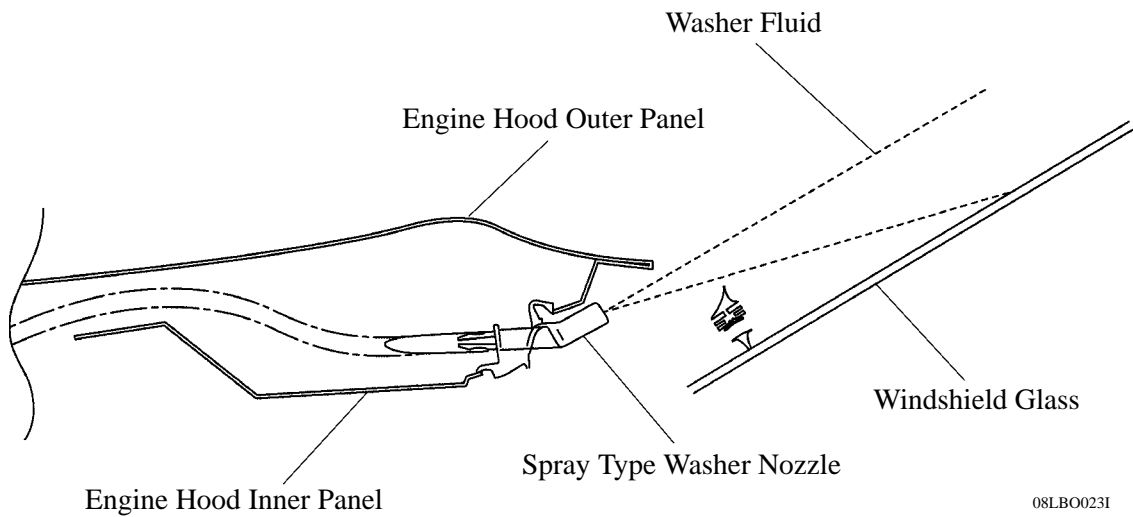


■ : Spray Area

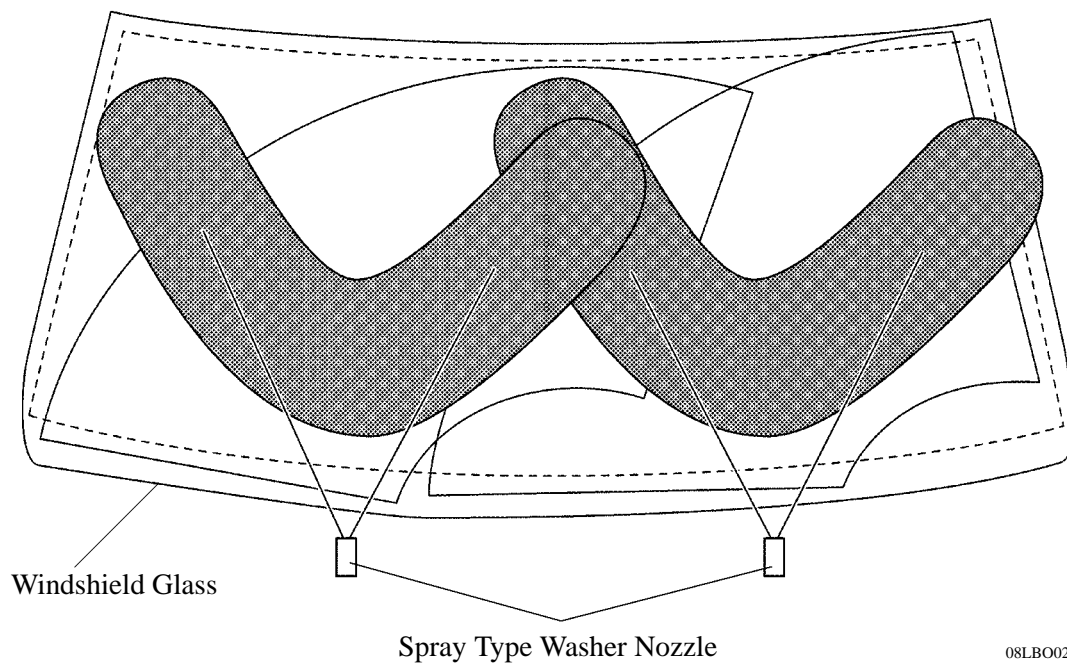

2. Rear Washer


The spray type washer nozzle is located on the rear spoiler* or the high-mount stop light.

 *: Models with Rear Spoiler

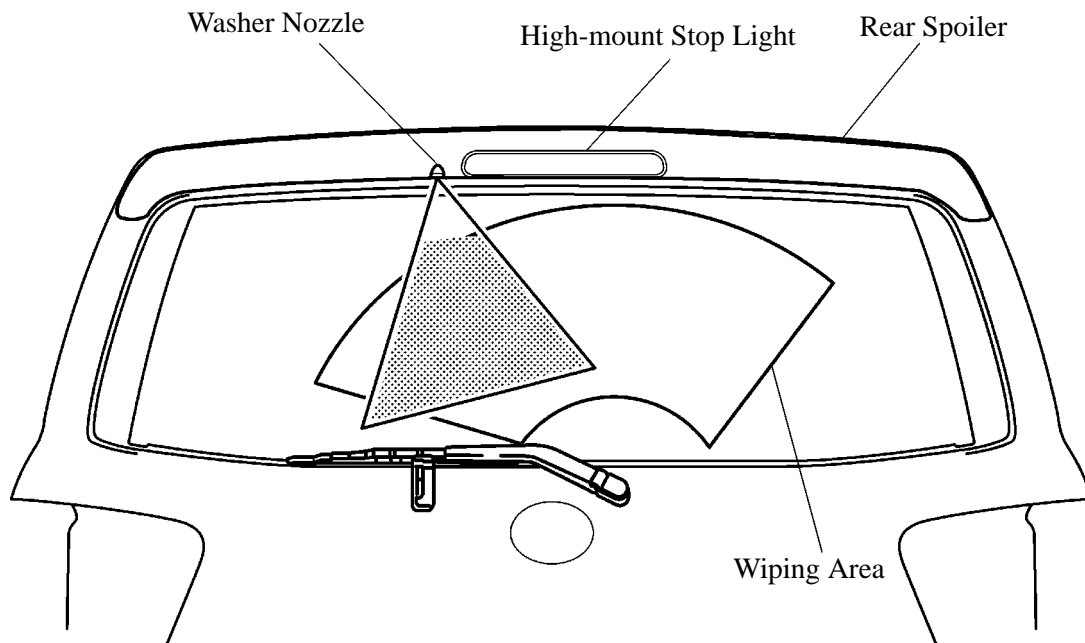

Models with Rear Spoiler

 08LBO025I

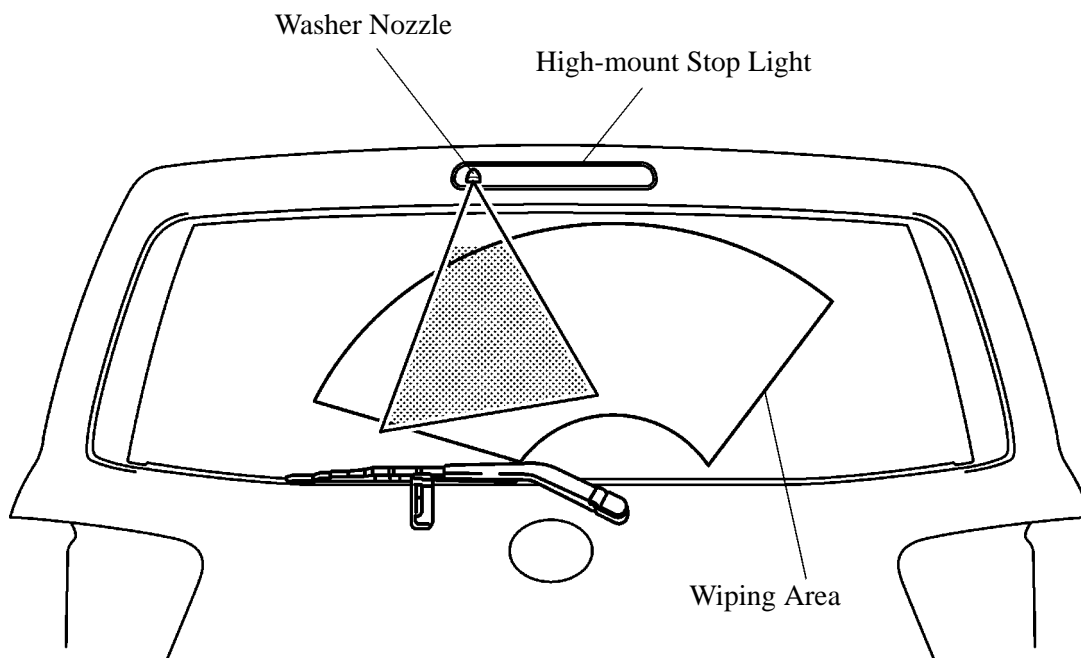

Models without Rear Spoiler

08LBO026I