

F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	

- * 1:1-H-HP LH/H-HP LO LH
- * 2:1-H-HP RH/H-HP LO RH
- * 3:30A HTR SUB1 (for High Current)
- * 4:30A RDI (for High Current)
- * 5:40A HTR (for High Current)
- * 6:50A ABS1/VSC1 (for High Current)
- * 7:50A EPS (for High Current)
- * 8:40A HTR SUB2 (for High Current)
- * 9:FAN NO.2 Relay
- * 10:ST Relay



