



Position of Parts in Engine Compartment

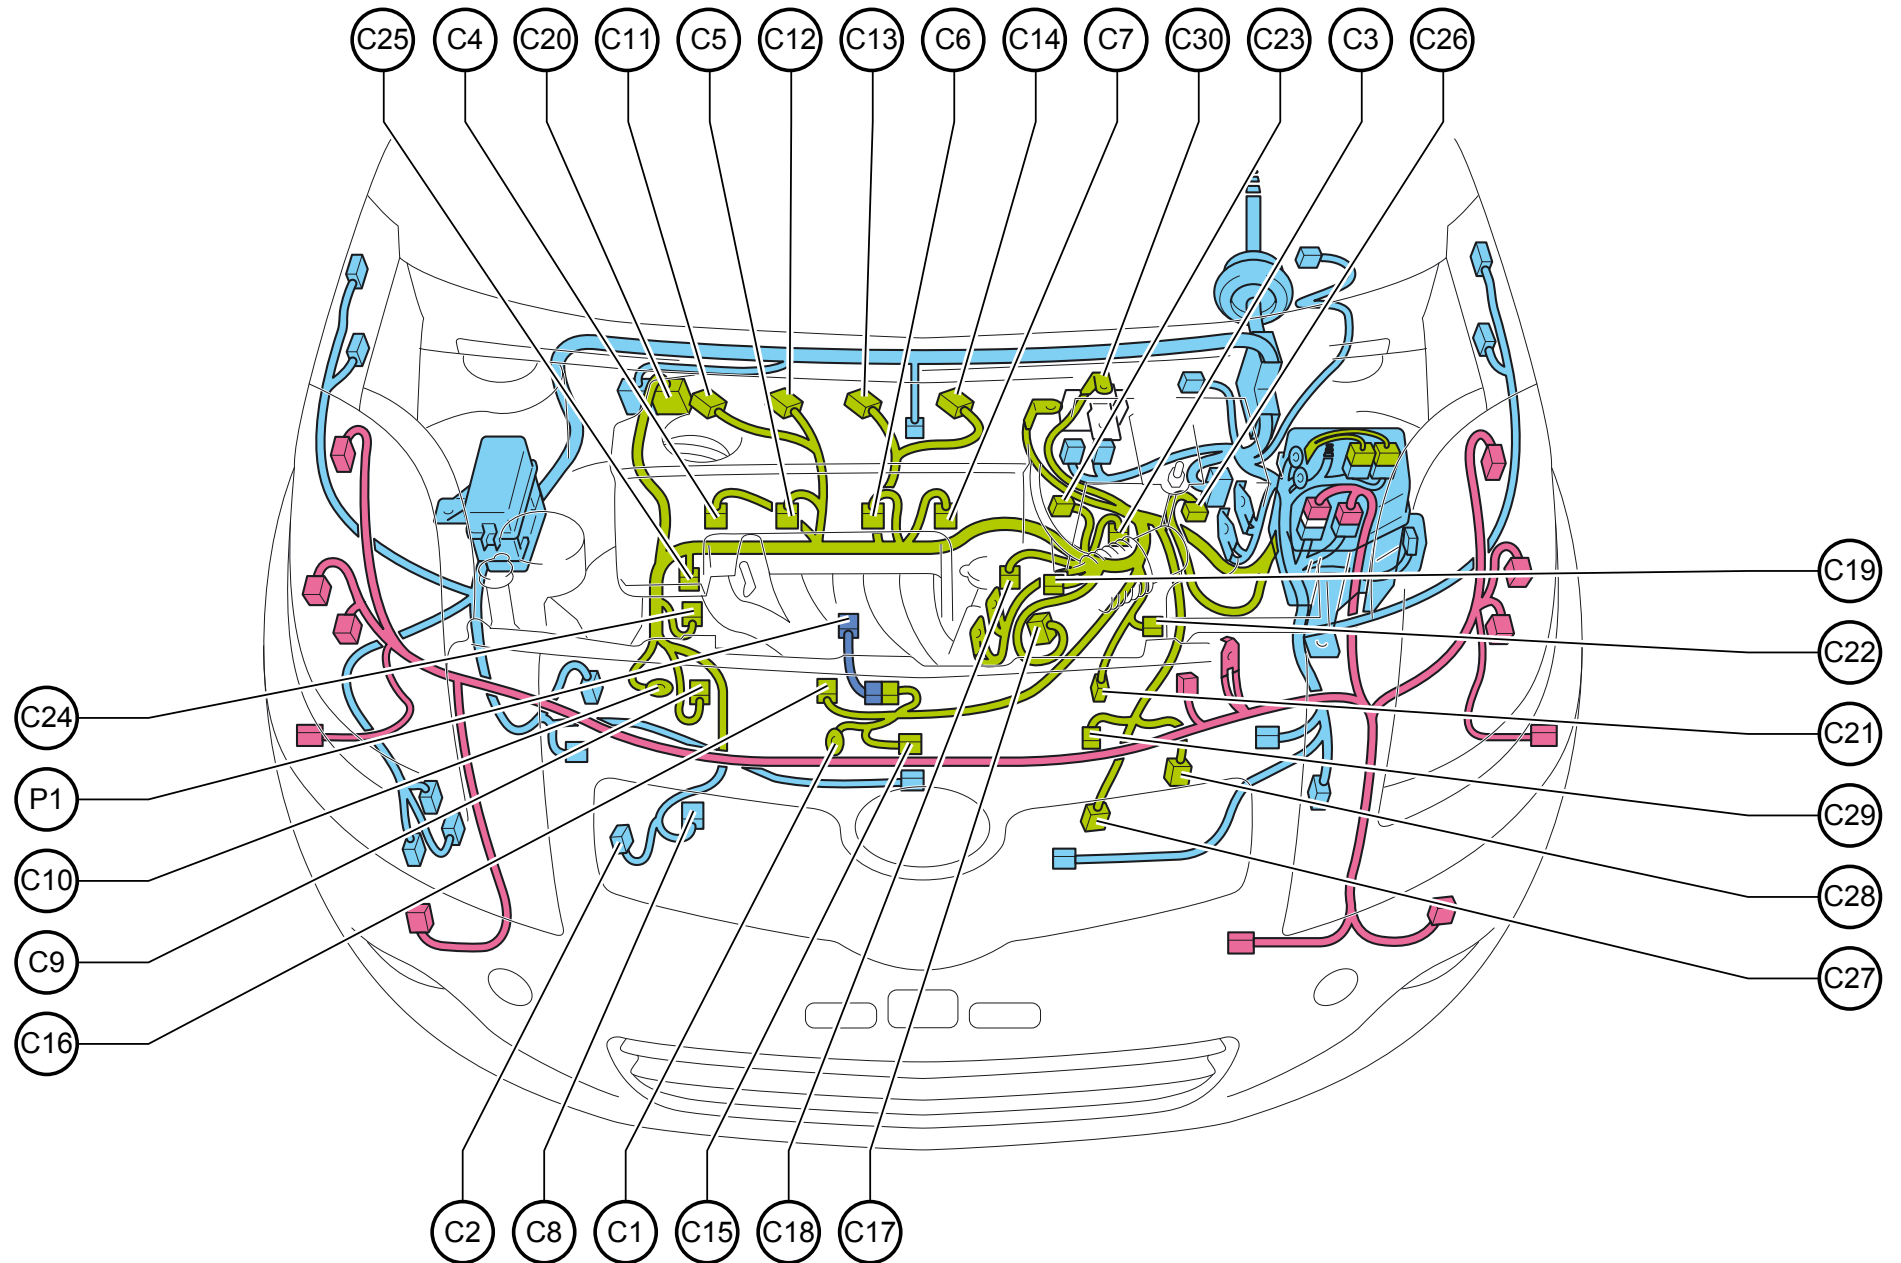

- C 1 Starter
- C 2 Crankshaft Position Sensor
- C 3 VSV (Purge)
- C 4 Fuel Injector (No.1)
- C 5 Fuel Injector (No.2)
- C 6 Fuel Injector (No.3)
- C 7 Fuel Injector (No.4)
- C 8 A/C Compressor
- C 9 Generator
- C 10 Generator
- C 11 Ignition Coil (No.1)
- C 12 Ignition Coil (No.2)
- C 13 Ignition Coil (No.3)
- C 14 Ignition Coil (No.4)
- C 15 Starter
- C 16 Engine Oil Pressure SW
- C 17 Throttle Body Assembly
- C 18 Camshaft Position Sensor
- C 19 Engine Coolant Temp. Sensor
- C 20 Engine Control Module
- C 21 Speed Sensor
- C 22 Back-Up Lamp SW
- C 23 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 24 Camshaft Timing Oil Control Valve
- C 25 Noise Filter
- C 26 Mass Air Flow Meter
- C 27 Park/Neutral Position SW
- C 28 Electronically Controlled Transmission Solenoid
- C 29 Speed Sensor (Turbine)
- C 30 Fusible Link Block

- P 1 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment

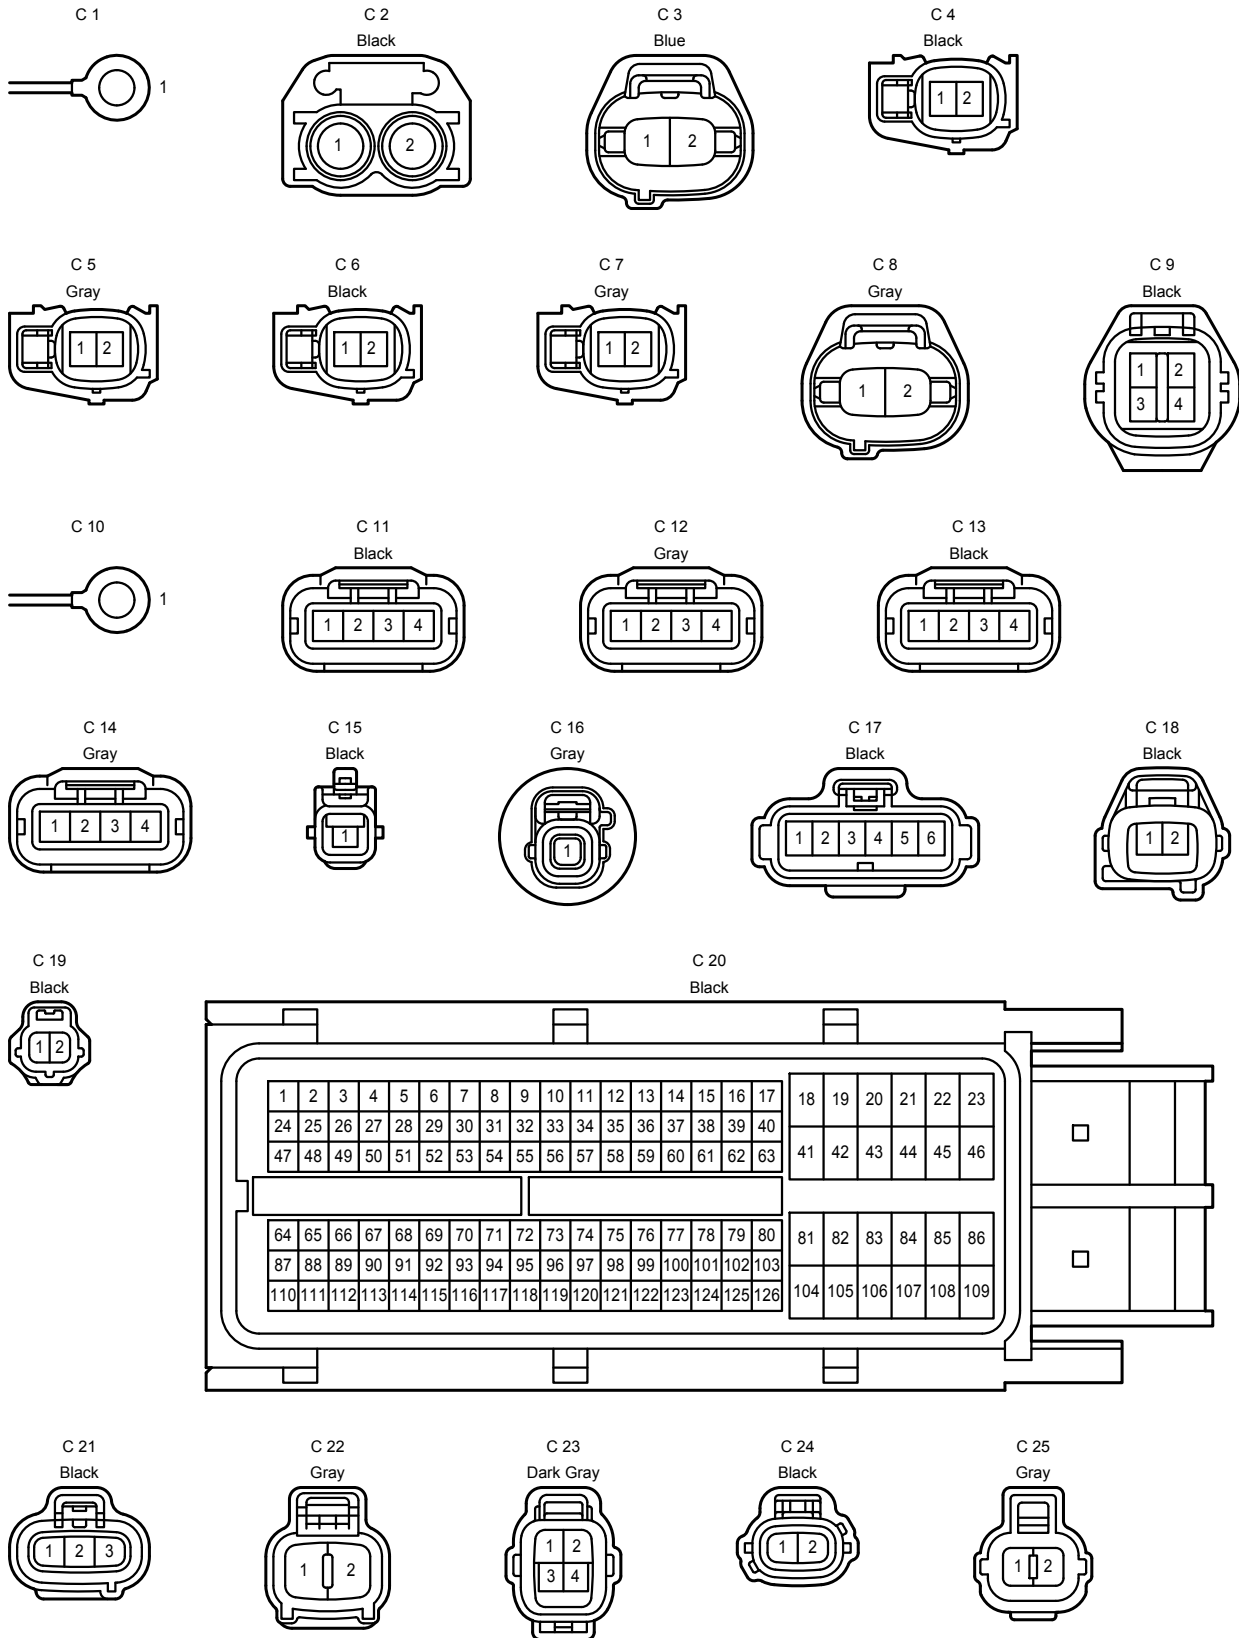

Position of Parts in Engine Compartment

