



- J 1 Door Courtesy SW (Front RH)
- J 2 Door Courtesy SW (Front LH)
- J 3 Rear Combination Lamp (RH)
- J 4 Rear Combination Lamp (LH)
- J 5 Fuel Suction Pump and Gage Assembly
- J 10 Front Seat Inner Belt (Driver's Side)
- J 11 Front Seat Inner Belt Assembly (Front RH)
- J 12 Room Lamp (Luggage)
- J 13 Door Control Receiver
- J 14 Airbag Sensor (Rear RH)
- J 15 Airbag Sensor (Rear LH)
- J 16 Side Airbag Sensor (RH)
- J 17 Side Airbag Sensor (LH)
- J 20 Pretensioner (RH)
- J 21 Pretensioner (LH)
- J 22 Curtain Shield Airbag Squib (RH)
- J 23 Curtain Shield Airbag Squib (LH)
- J 24 Occupant Classification ECU
- J 25 Canister Pump Module
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Diode (Room Lamp)
- J 31 Noise Filter
- J 32 Door Courtesy SW (Rear RH)
- J 33 Door Courtesy SW (Rear LH)

Position of Parts in Body <5-Door>

