

## ABBREVIATIONS

The following abbreviations are used in this manual.

|       |   |                                   |
|-------|---|-----------------------------------|
| A/C   | = | Air Conditioner                   |
| ABS   | = | Anti-Lock Brake System            |
| BEAN  | = | Body Electronics Area Network     |
| CAN   | = | Controller Area Network           |
| DLC3  | = | Data Link Connector 3             |
| EC    | = | Electrochromic                    |
| ECU   | = | Electronic Control Unit           |
| EDU   | = | Electronic Driving Unit           |
| EFI   | = | Electronic Fuel Injection         |
| EGR   | = | Exhaust Gas Recirculation         |
| ESA   | = | Electronic Spark Advance          |
| EVAP  | = | Evaporative Emission              |
| J/B   | = | Junction Block                    |
| LH    | = | Left-Hand                         |
| LHD   | = | Left-Hand Drive                   |
| M/T   | = | Manual Transaxle                  |
| PTC   | = | Positive Temperature Coefficient  |
| R/B   | = | Relay Block                       |
| RH    | = | Right-Hand                        |
| RHD   | = | Right-Hand Drive                  |
| SPEC. | = | Specification                     |
| SRS   | = | Supplemental Restraint System     |
| SW    | = | Switch                            |
| TEMP. | = | Temperature                       |
| TRC   | = | Traction Control                  |
| TVSS  | = | TOYOTA Vehicle Security System    |
| VRV   | = | Vacuum Regulating Valve           |
| VSC   | = | Vehicle Stability Control         |
| VSV   | = | Vacuum Switching Valve            |
| VVT-i | = | Variable Valve Timing-intelligent |
| w/    | = | With                              |
| w/o   | = | Without                           |

\* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.