

F RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Left (See Page 20)
○ : Engine Room J/B No.1	

(1ZZ-FE, 3ZZ-FE)

