


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1ZZ-FE, 3ZZ-FE]

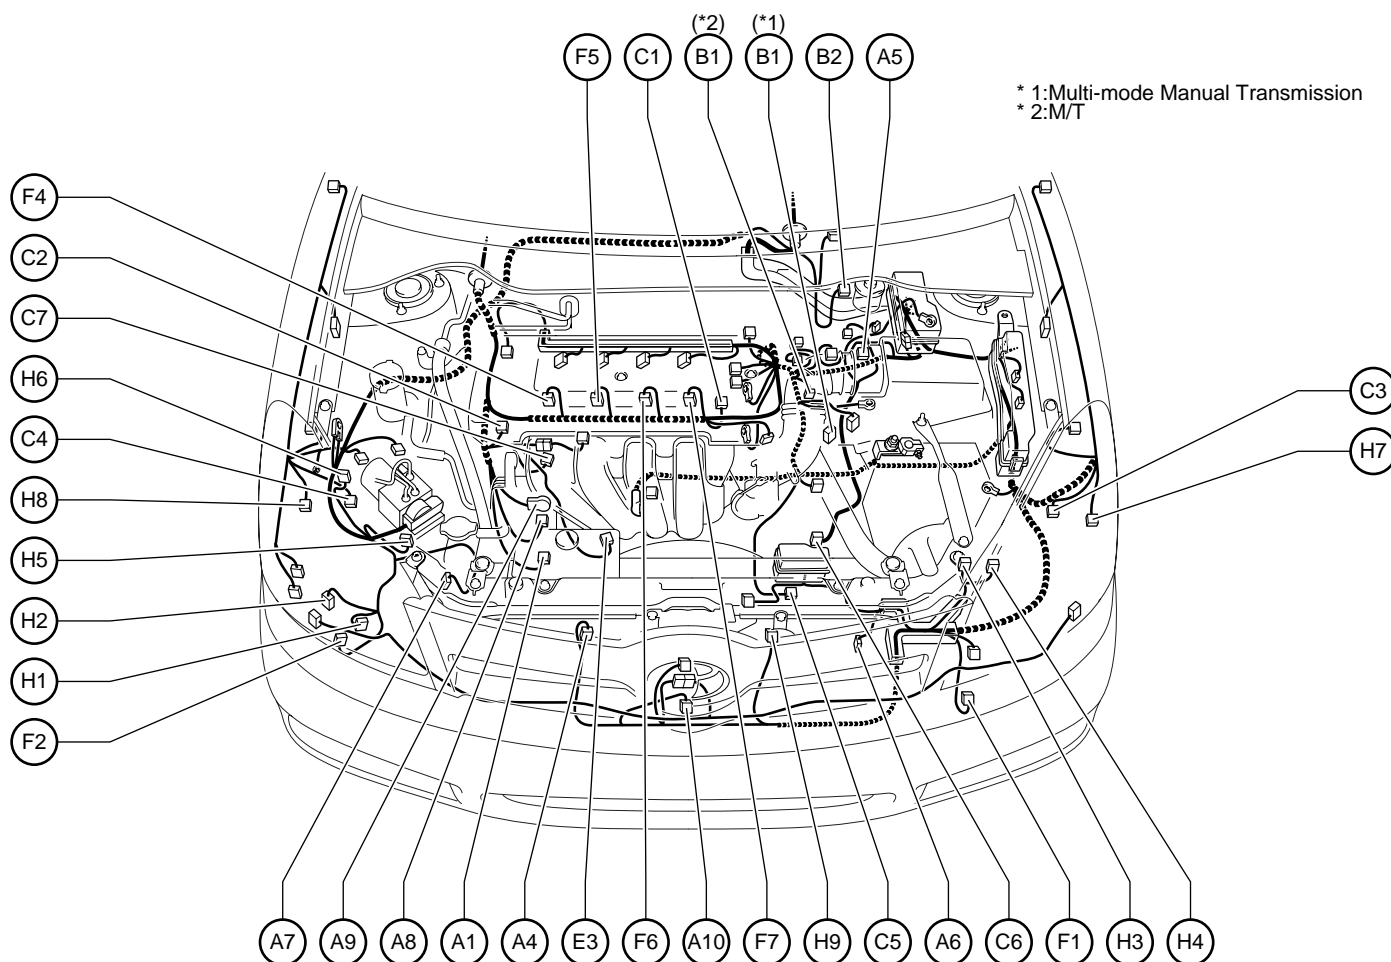

A 1 A/C Compressor
A 4 A/C Pressure Sensor
A 5 Air Flow Meter
A 6 Airbag Sensor (Front LH)
A 7 Airbag Sensor (Front RH)
A 8 Alternator
A 9 Alternator
A 10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 5 Clutch Actuator
C 6 Clutch Stroke Sensor
C 7 Crankshaft Position Sensor

E 3 Engine Oil Pressure SW

F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)

H 1 Headlamp Cleaner Control Relay
H 2 Headlamp Cleaner Motor
H 3 Headlamp (LH High)
H 4 Headlamp (LH Low)
H 5 Headlamp (RH High)
H 6 Headlamp (RH Low)
H 7 Headlamp Leveling Motor (LH)
H 8 Headlamp Leveling Motor (RH)
H 9 Horn