


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

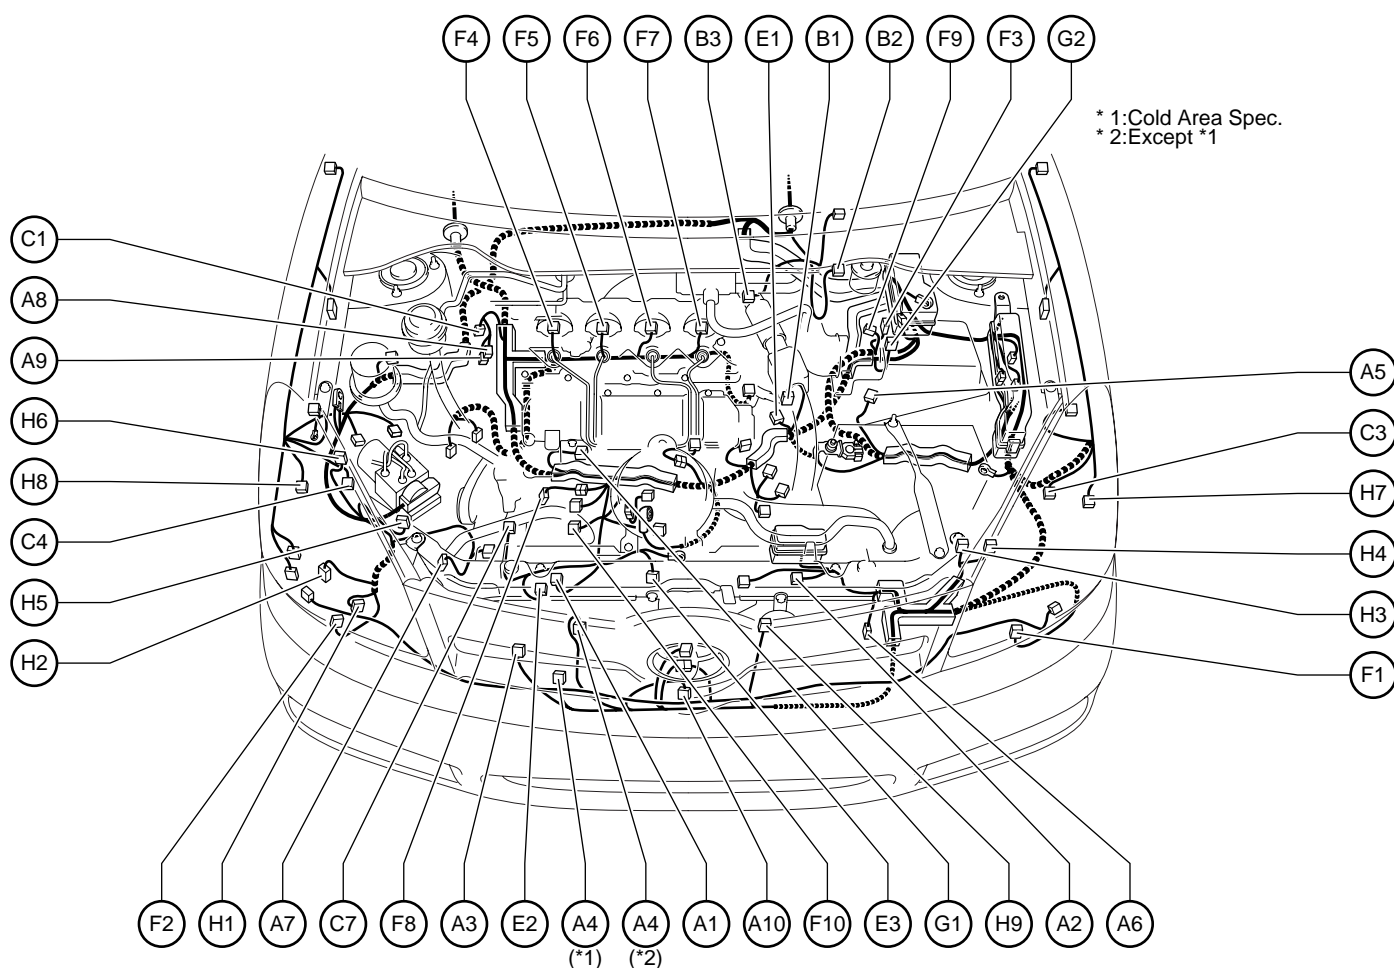

A 1 A/C Compressor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Valve
A 4 A/C Pressure Sensor
A 5 Air Flow Meter
A 6 Airbag Sensor (Front LH)
A 7 Airbag Sensor (Front RH)
A 8 Alternator
A 9 Alternator
A 10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 7 Crankshaft Position Sensor

E 1 EGR Valve Control Motor
E 2 Engine Oil Level Sensor
E 3 Engine Oil Pressure SW

F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 3 Fuel Heater
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)
F 8 Fuel Pressure Sensor
F 9 Fuel Sedimentary Level Warning SW
F 10 Fuel Temp. Sensor

G 1 Glow Plug
G 2 Glow Plug Relay

H 1 Headlamp Cleaner Control Relay
H 2 Headlamp Cleaner Motor
H 3 Headlamp (LH High)
H 4 Headlamp (LH Low)
H 5 Headlamp (RH High)
H 6 Headlamp (RH Low)
H 7 Headlamp Leveling Motor (LH)
H 8 Headlamp Leveling Motor (RH)
H 9 Horn