


Position of Parts in Instrument Panel

[LHD]

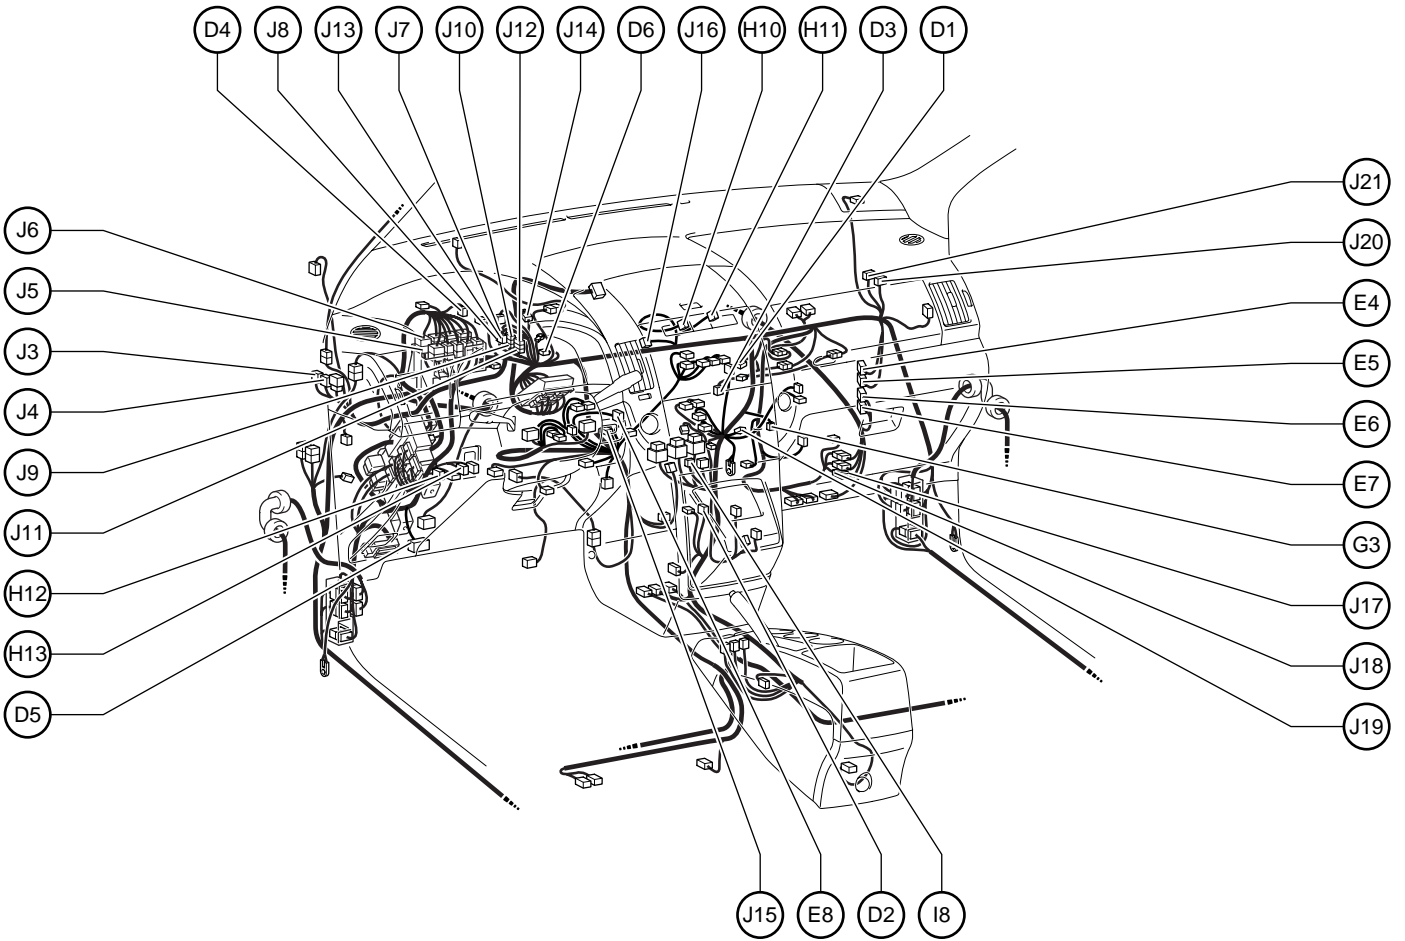

D 1 Damper Servo Motor (Air Inlet)
 D 2 Damper Servo Motor (Air Mix)
 D 3 Damper Servo Motor (Air Vent Mode)
 D 4 Diode (Fan)
 D 5 DLC3
 D 6 Door Control Receiver

E 4 Engine ECU
 E 5 Engine ECU
 E 6 Engine ECU
 E 7 Engine ECU
 E 8 Engine Start/Stop SW

G 3 Glove Box Lamp

H10 Hazard Warning Signal SW Assembly
 H11 Hazard Warning Signal SW Assembly
 H12 Headlamp Cleaner SW
 H13 Headlamp Leveling SW

I 8 Ignition Control ECU

J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 9 Junction Connector
 J 10 Junction Connector
 J 11 Junction Connector
 J 12 Junction Connector
 J 13 Junction Connector
 J 14 Junction Connector
 J 15 Junction Connector
 J 16 Junction Connector
 J 17 Junction Connector
 J 18 Junction Connector
 J 19 Junction Connector
 J 20 Junction Connector
 J 21 Junction Connector