


Position of Parts in Instrument Panel

[LHD]

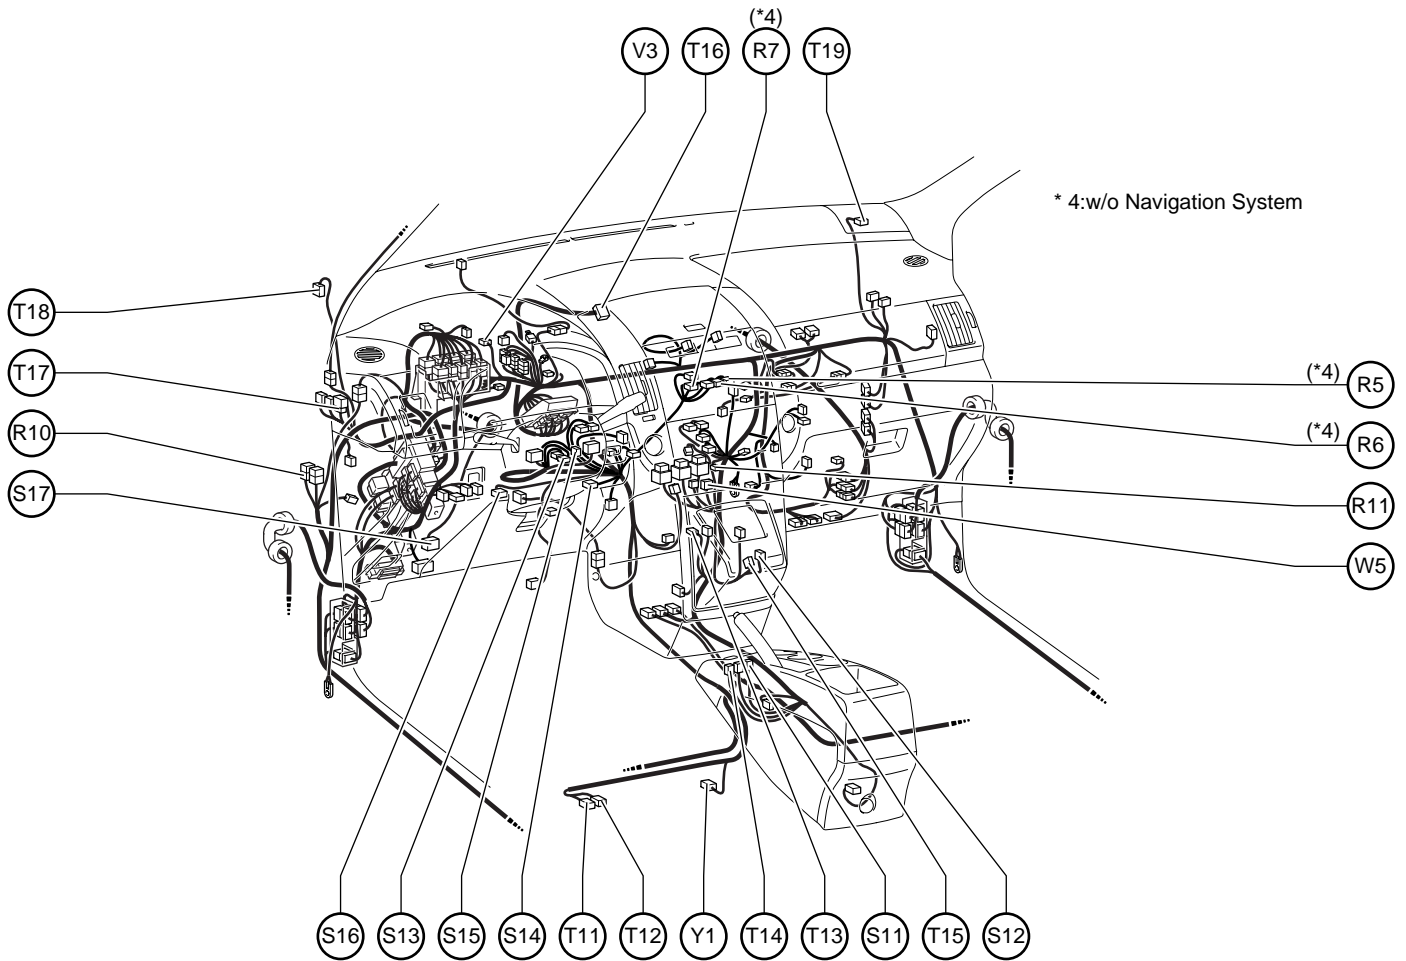

R 5 Radio Receiver Assembly
 R 6 Radio Receiver Assembly
 R 7 Radio Receiver Assembly
 R10 Rear Window Defogger Relay
 R11 Rear Window Defogger SW

S11 Seat Heater SW
 S12 Shift Lever Position Sensor
 S13 Spiral Cable
 S14 Steering Lock Actuator
 S15 Steering Sensor (Back Guide Monitor)
 S16 Steering Sensor (VSC)
 S17 Stop Lamp SW

T11 Television Camera Controller
 T12 Television Camera Controller
 T13 Temp. Control SW (Max Hot)
 T14 Traction Control SW
 T15 Transmission Shift Main SW
 T16 Transponder Key ECU
 T17 Turn Signal Flasher
 T18 Tweeter (LH)
 T19 Tweeter (RH)

V 3 VSC Warning Buzzer

W 5 Windshield Wiper Relay

Y 1 Yaw Rate Sensor