


## G ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[RHD : 1ZZ-FE, 3ZZ-FE]

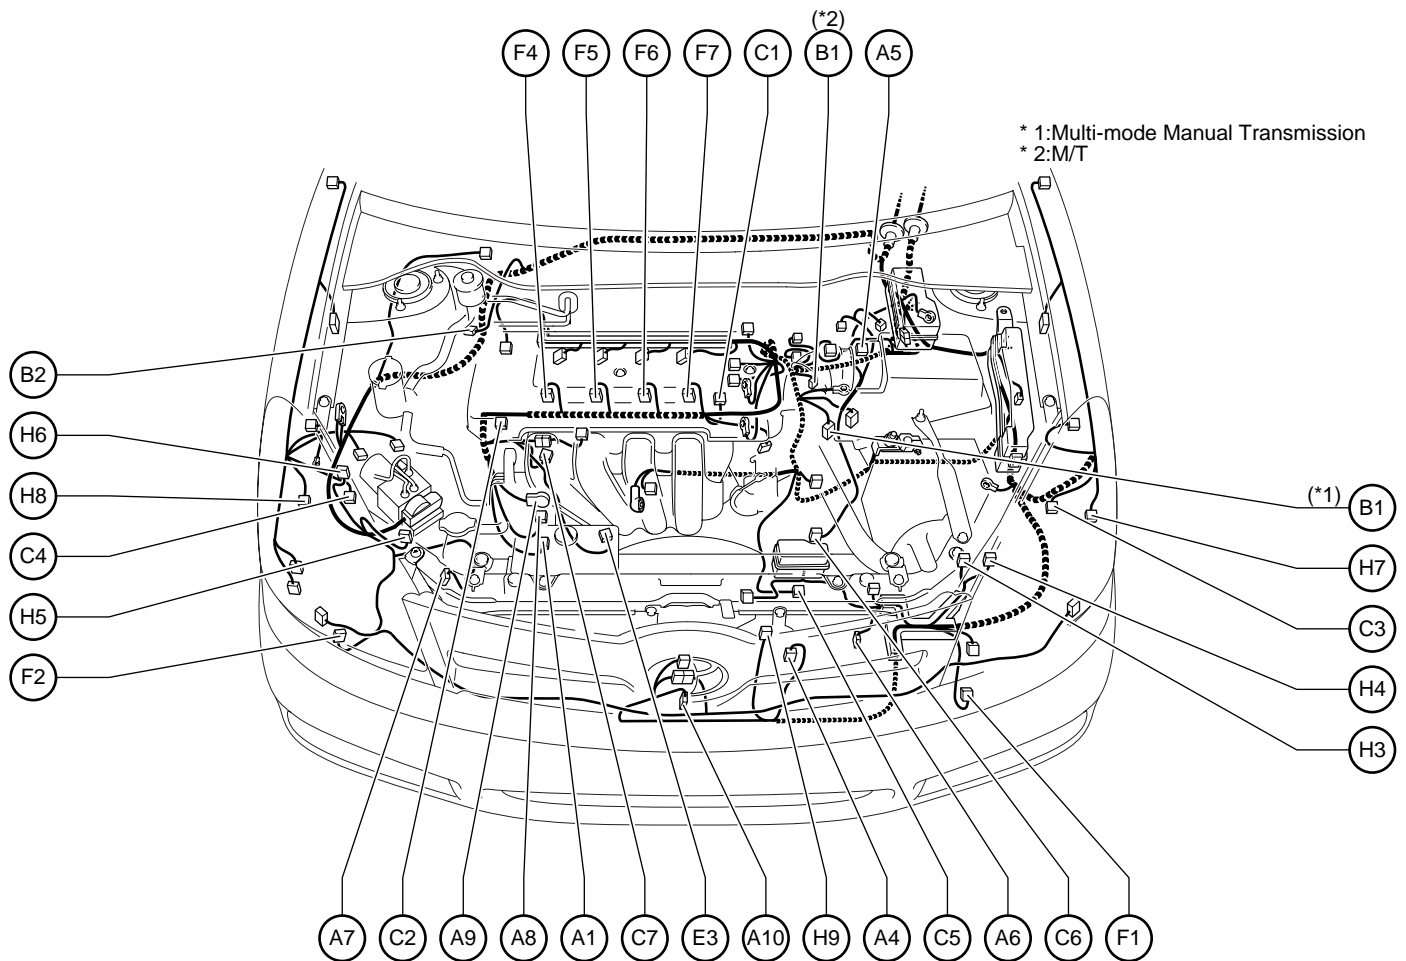

A 1 A/C Compressor  
A 4 A/C Pressure Sensor  
A 5 Air Flow Meter  
A 6 Airbag Sensor (Front LH)  
A 7 Airbag Sensor (Front RH)  
A 8 Alternator  
A 9 Alternator  
A 10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW  
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor  
C 2 Camshaft Timing Oil Control Valve  
C 3 Clearance Lamp (Front LH)  
C 4 Clearance Lamp (Front RH)  
C 5 Clutch Actuator  
C 6 Clutch Stroke Sensor  
C 7 Crankshaft Position Sensor

E 3 Engine Oil Pressure SW

F 1 Fog Lamp (Front LH)  
F 2 Fog Lamp (Front RH)  
F 4 Fuel Injector (No.1)  
F 5 Fuel Injector (No.2)  
F 6 Fuel Injector (No.3)  
F 7 Fuel Injector (No.4)

H 3 Headlamp (LH High)  
H 4 Headlamp (LH Low)  
H 5 Headlamp (RH High)  
H 6 Headlamp (RH Low)  
H 7 Headlamp Leveling Motor (LH)  
H 8 Headlamp Leveling Motor (RH)  
H 9 Horn