


## Position of Parts in Engine Compartment

[RHD : 1ZZ-FE, 3ZZ-FE]

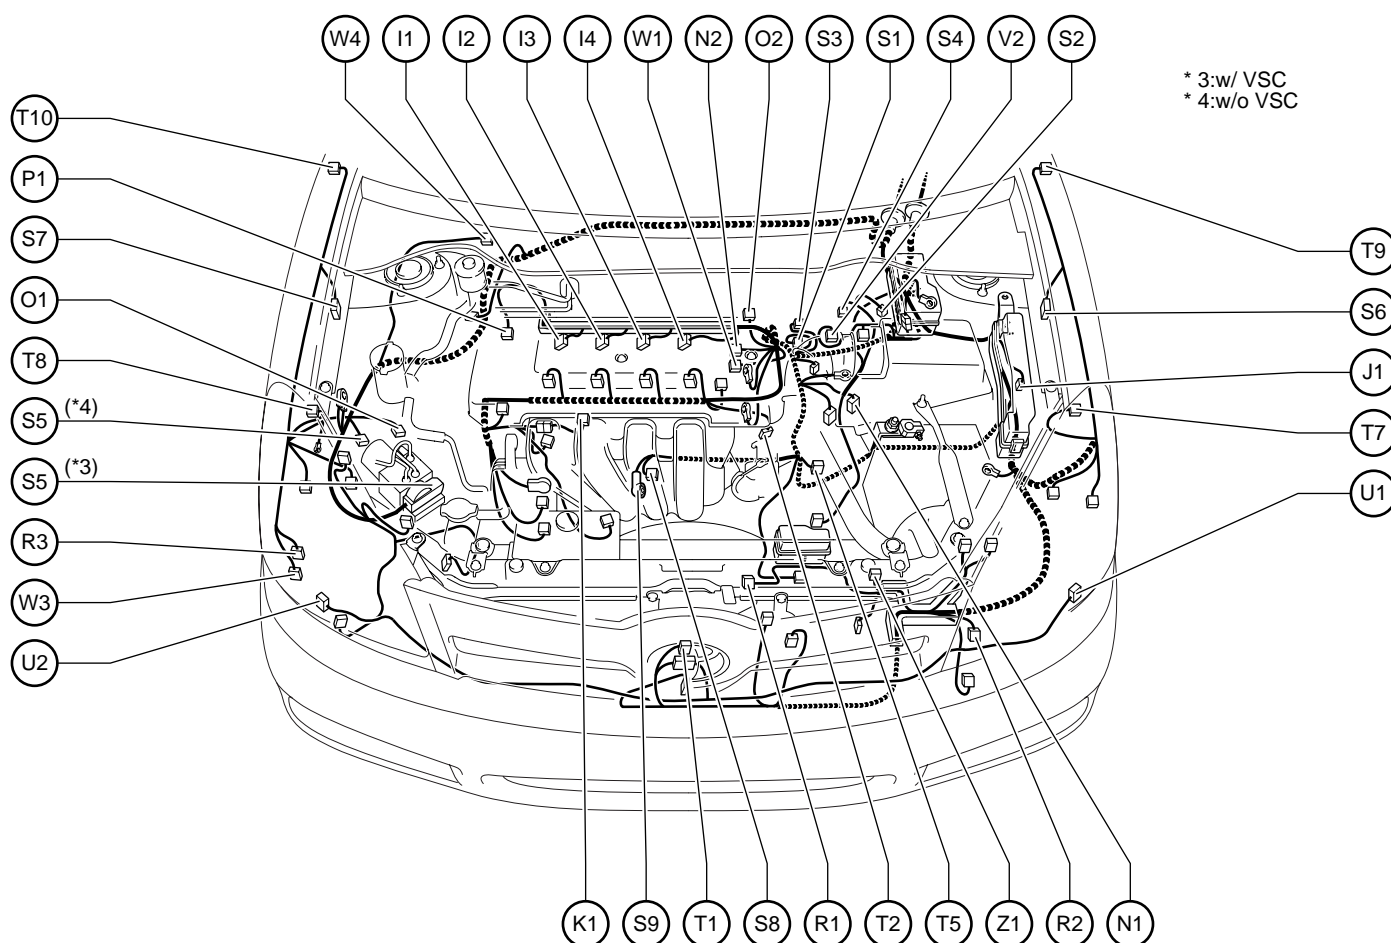

I 1 Ignition Coil (No.1)  
I 2 Ignition Coil (No.2)  
I 3 Ignition Coil (No.3)  
I 4 Ignition Coil (No.4)

J 1 Junction Connector

K 1 Knock Control Sensor

N 1 Neutral Start SW  
N 2 Noise Filter (Ignition)

O 1 Oil Pressure Sensor  
O 2 Oxygen Sensor (Bank 1 Sensor 1)

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor  
R 2 Radiator Fan Resistor  
R 3 Rear Washer Motor

S 1 Select Actuator  
S 2 Select Stroke Sensor  
S 3 Shift Actuator  
S 4 Shift Stroke Sensor

S 5 Skid Control ECU with Actuator  
S 6 Speed Sensor (Front LH)  
S 7 Speed Sensor (Front RH)  
S 8 Starter  
S 9 Starter

T 1 Television Camera (Front)  
T 2 Throttle Body Assembly  
T 5 Transmission Revolution Sensor  
T 7 Turn Signal Lamp (Front LH)  
T 8 Turn Signal Lamp (Front RH)  
T 9 Turn Signal Lamp (Front Side LH)  
T 10 Turn Signal Lamp (Front Side RH)

U 1 Ultrasonic Sensor No.1 (Front LH)  
U 2 Ultrasonic Sensor No.1 (Front RH)

V 2 VSV (EVAP)

W 1 Water Temp. Sensor  
W 3 Windshield Washer Motor  
W 4 Windshield Wiper Motor

Z 1 Option Connector (Engine Hood Courtesy SW)