


Position of Parts in Engine Compartment

[RHD : 1CD–FTV]

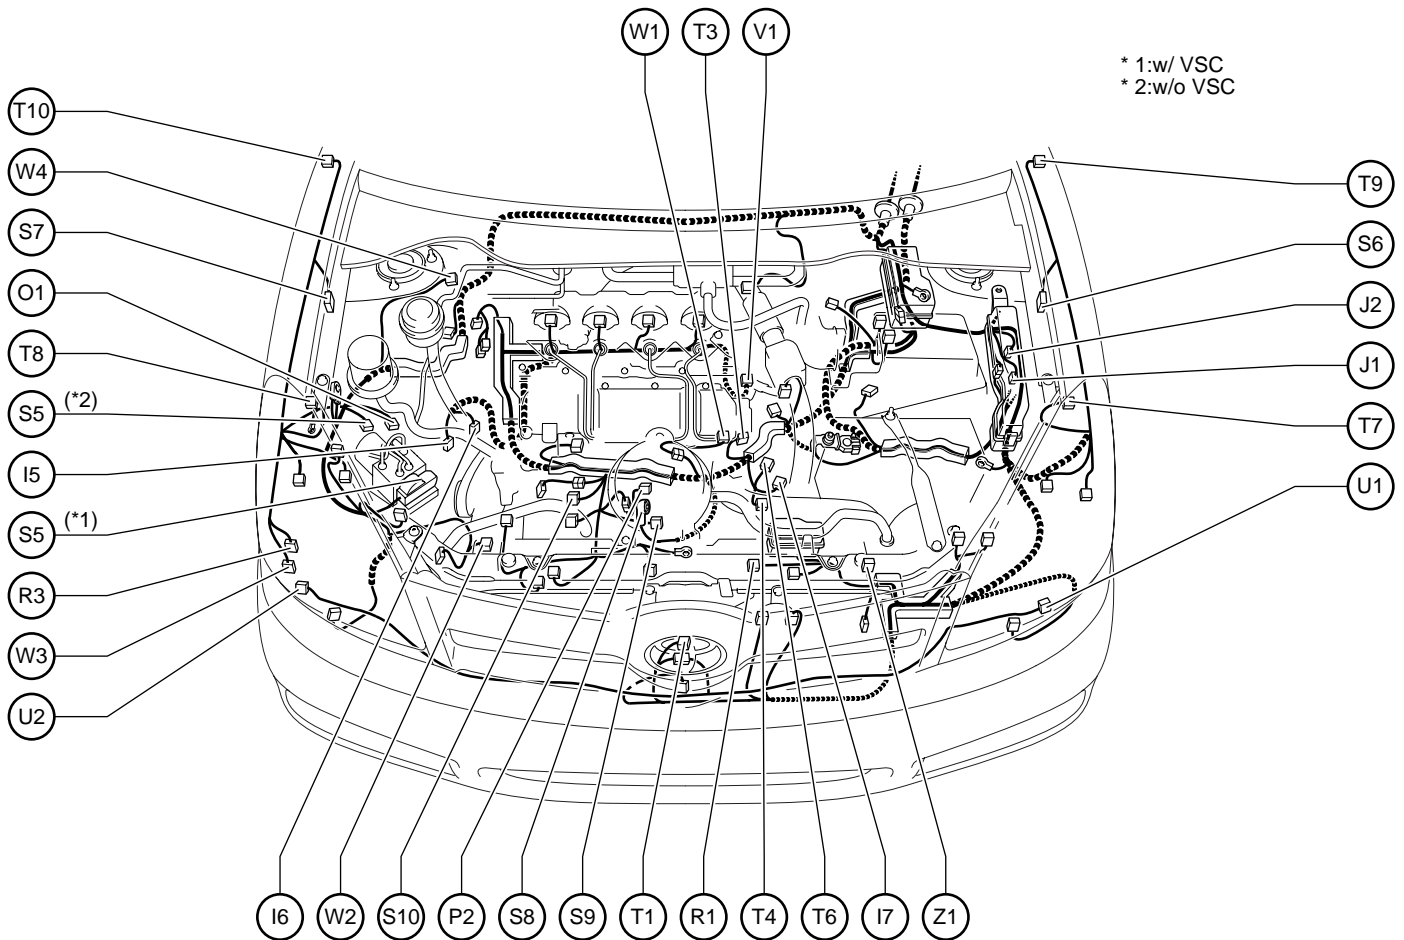

I 5 Injector Driver (EDU)
I 6 Injector Driver (EDU)
I 7 Inlet Air Temp. Sensor

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure Sensor

P 2 Pressure Discharge Valve

R 1 Radiator Fan Motor
R 3 Rear Washer Motor

S 5 Skid Control ECU with Actuator
S 6 Speed Sensor (Front LH)
S 7 Speed Sensor (Front RH)
S 8 Starter
S 9 Starter
S10 Suction Control Valve

T 1 Television Camera (Front)
T 3 Throttle Control Motor
T 4 Throttle Position SW
T 6 Turbo Pressure Sensor
T 7 Turn Signal Lamp (Front LH)
T 8 Turn Signal Lamp (Front RH)
T 9 Turn Signal Lamp (Front Side LH)
T10 Turn Signal Lamp (Front Side RH)

U 1 Ultrasonic Sensor No.1 (Front LH)
U 2 Ultrasonic Sensor No.1 (Front RH)

V 1 VRV (EGR)

W 1 Water Temp. Sensor
W 2 Water Temp. SW
W 3 Windshield Washer Motor
W 4 Windshield Wiper Motor

Z 1 Option Connector (Engine Hood Courtesy SW)