


Connector Joining Wire Harness and Wire Harness

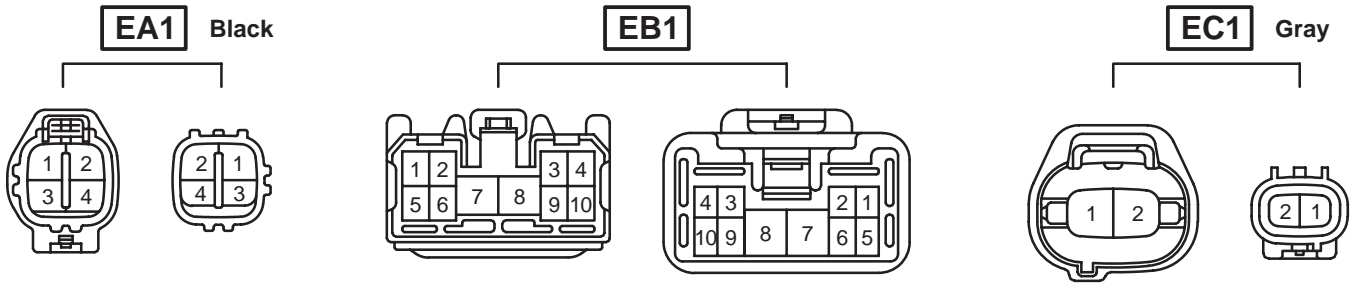

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room Main No.4 Wire (Near the Radiator Fan)
EB1	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
EC1	Engine Wire and Engine No.4 Wire (Near the Alternator)