


Connector Joining Wire Harness and Wire Harness

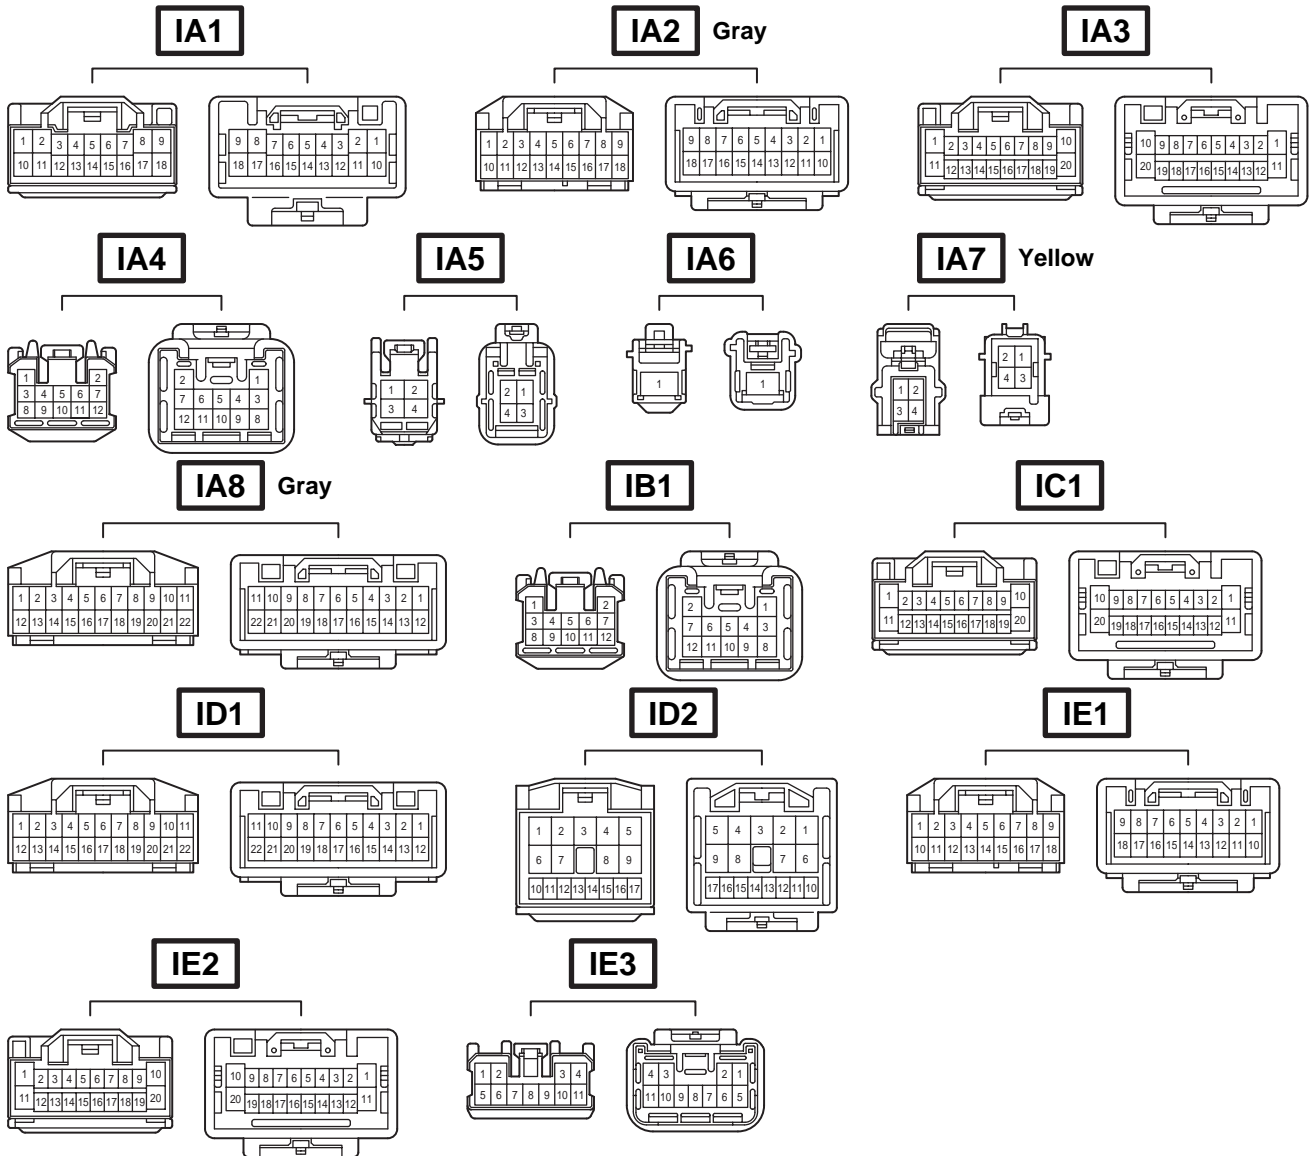

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IA2	
IA3	
IA4	
IA5	
IA6	
IA7	
IA8	
IB1	Engine Room Main Wire and Floor Wire (Left Side of the Instrument Panel)
IC1	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
ID1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2	
IE1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2	
IE3	