


Connector Joining Wire Harness and Wire Harness

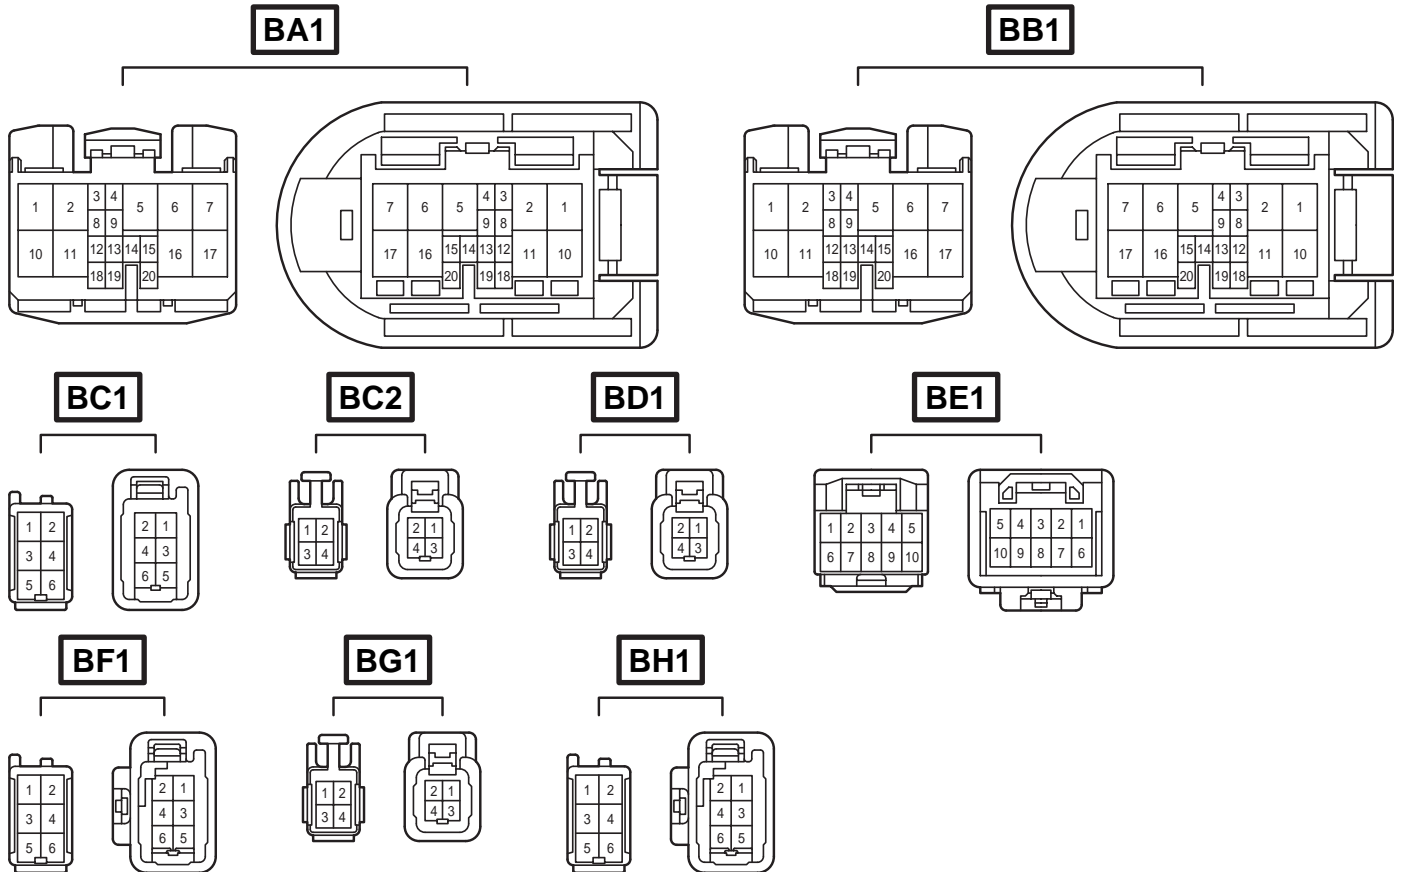

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| BA1 | Rear Door No.2 Wire and Floor Wire (Left Center Pillar) |
| BB1 | Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar) |
| BC1 | Back Door No.1 Wire and Floor Wire (Left Quarter Panel) |
| BC2 | |
| BD1 | Back Door No.3 Wire and Floor No.2 Wire (Right Quarter Panel) |
| BE1 | Floor No.3 Wire and Floor No.2 Wire (Right Quarter Panel) |
| BF1 | Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left) |
| BG1 | Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left) |
| BH1 | Roof Wire and Roof No.2 Wire (Front Side of the Roof) |