


Connector Joining Wire Harness and Wire Harness

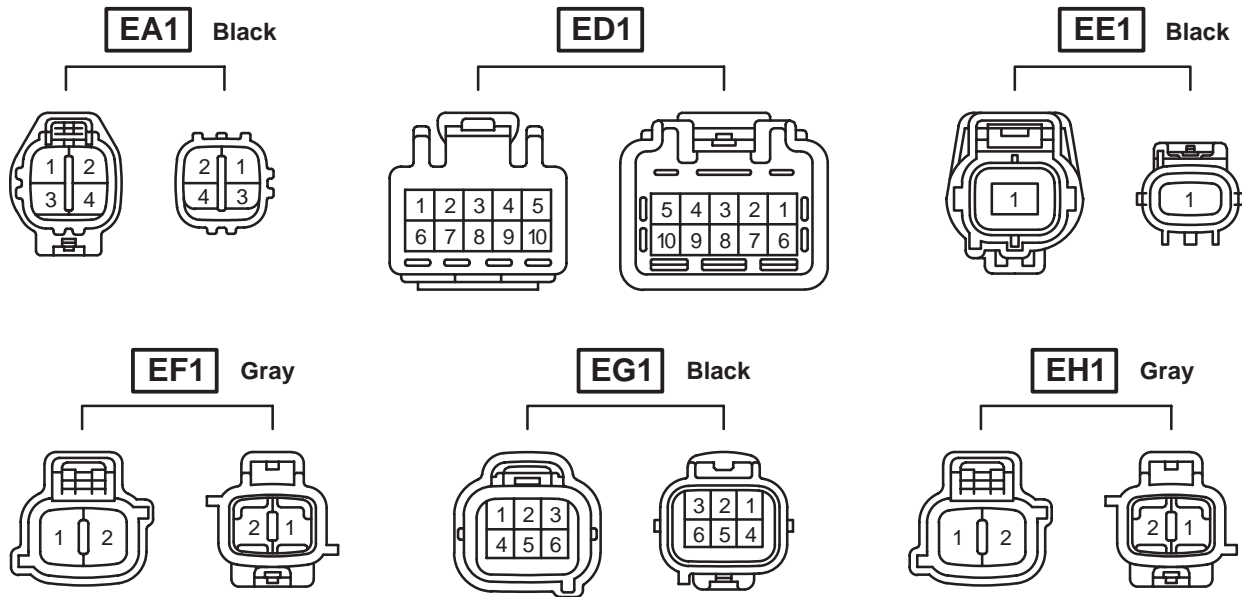

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room Main No.4 Wire (Near the Radiator Fan)
ED1	Engine Wire and Engine Room Main Wire (Engine Compartment Left)
EE1	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
EF1	Engine Wire and Engine No.5 Wire (Near the Starter)
EG1	Engine Wire and Engine No.6 Wire (Near the Starter)
EH1	Engine Wire and Engine No.4 Wire (Near the Starter)