


Connector Joining Wire Harness and Wire Harness

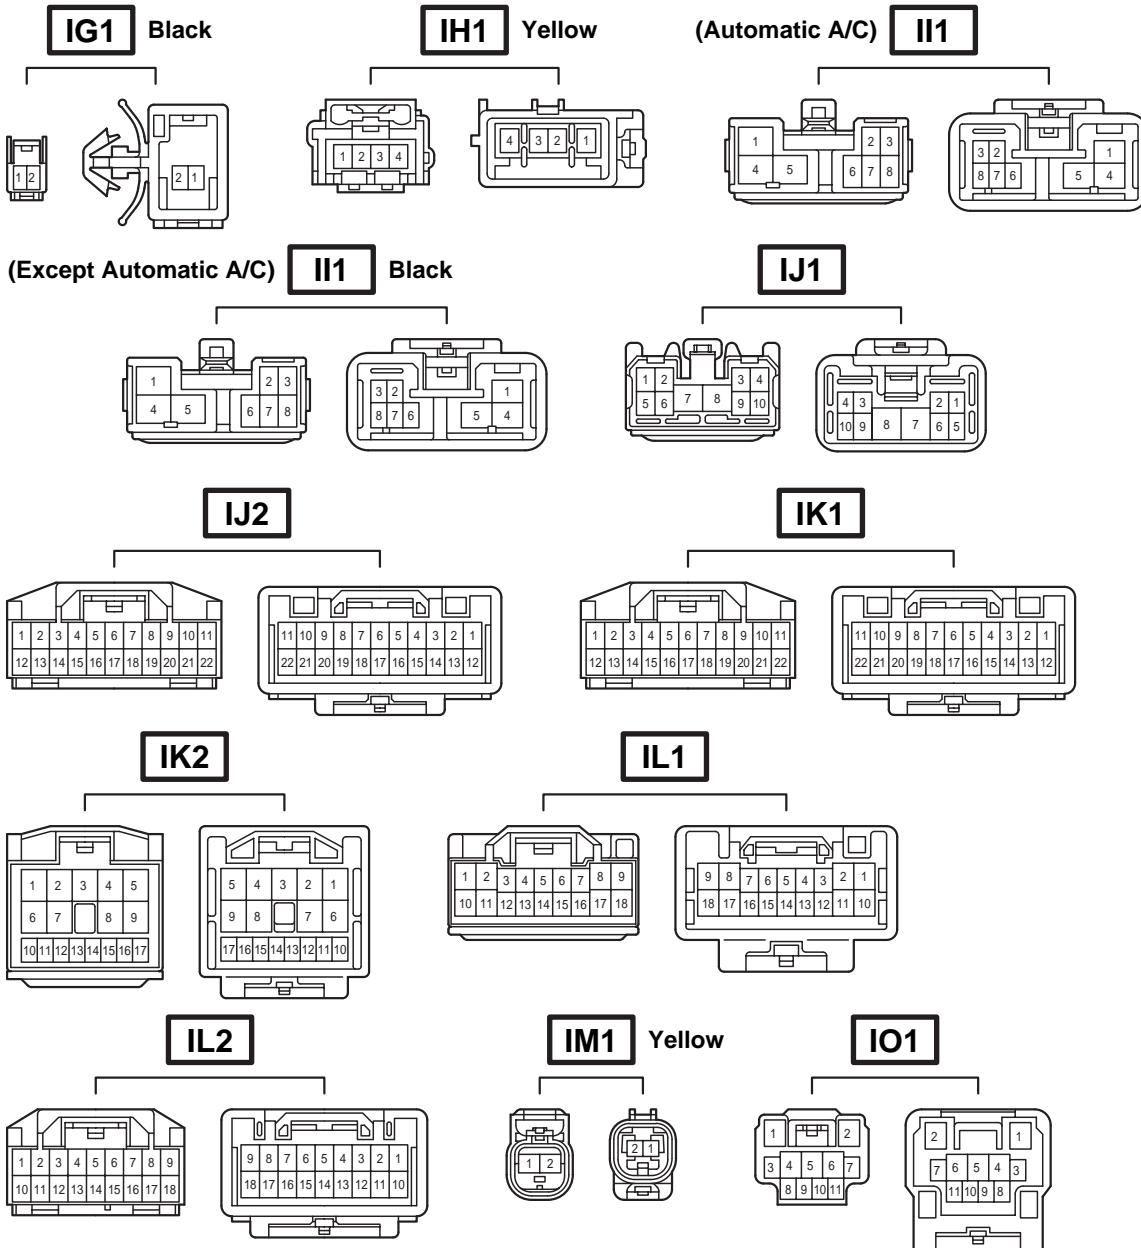

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and A/C No.1 Wire (Behind the Combination Meter)
IH1	Instrument Panel Wire and Instrument Panel No.3 Wire (Near the Front Passenger's Airbag Assembly)
II1	Instrument Panel Wire and A/C No.1 Wire (Near the A/C Unit)
IJ1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ2	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IL2	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM1	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IO1	Instrument Panel Wire and Switch Wire (Right Side of the Instrument Panel)