


## Connector Joining Wire Harness and Wire Harness

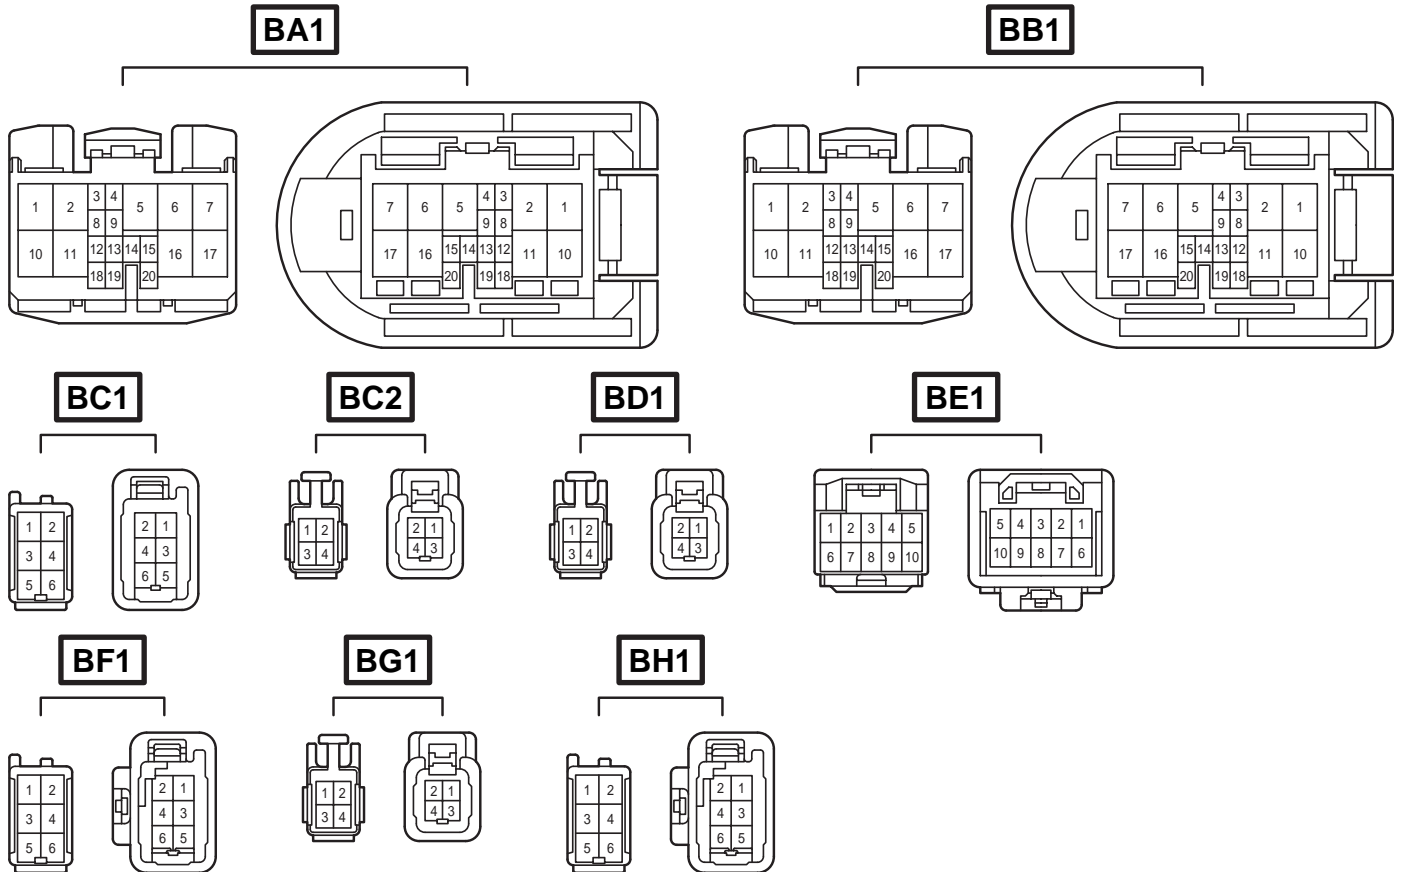

| Code | Joining Wire Harness and Wire Harness (Connector Location)    |
|------|---|
| BA1  | Rear Door No.2 Wire and Floor Wire (Left Center Pillar)       |
| BB1  | Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar) |
| BC1  | Back Door No.1 Wire and Floor Wire (Left Quarter Panel)       |
| BC2  |   |
| BD1  | Back Door No.3 Wire and Floor No.2 Wire (Right Quarter Panel) |
| BE1  | Floor No.3 Wire and Floor No.2 Wire (Right Quarter Panel)     |
| BF1  | Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left)  |
| BG1  | Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)  |
| BH1  | Roof Wire and Roof No.2 Wire (Front Side of the Roof)         |