



Engine Control (1ZZ-FE, 3ZZ-FE)

From Power Source System (See Page 82)

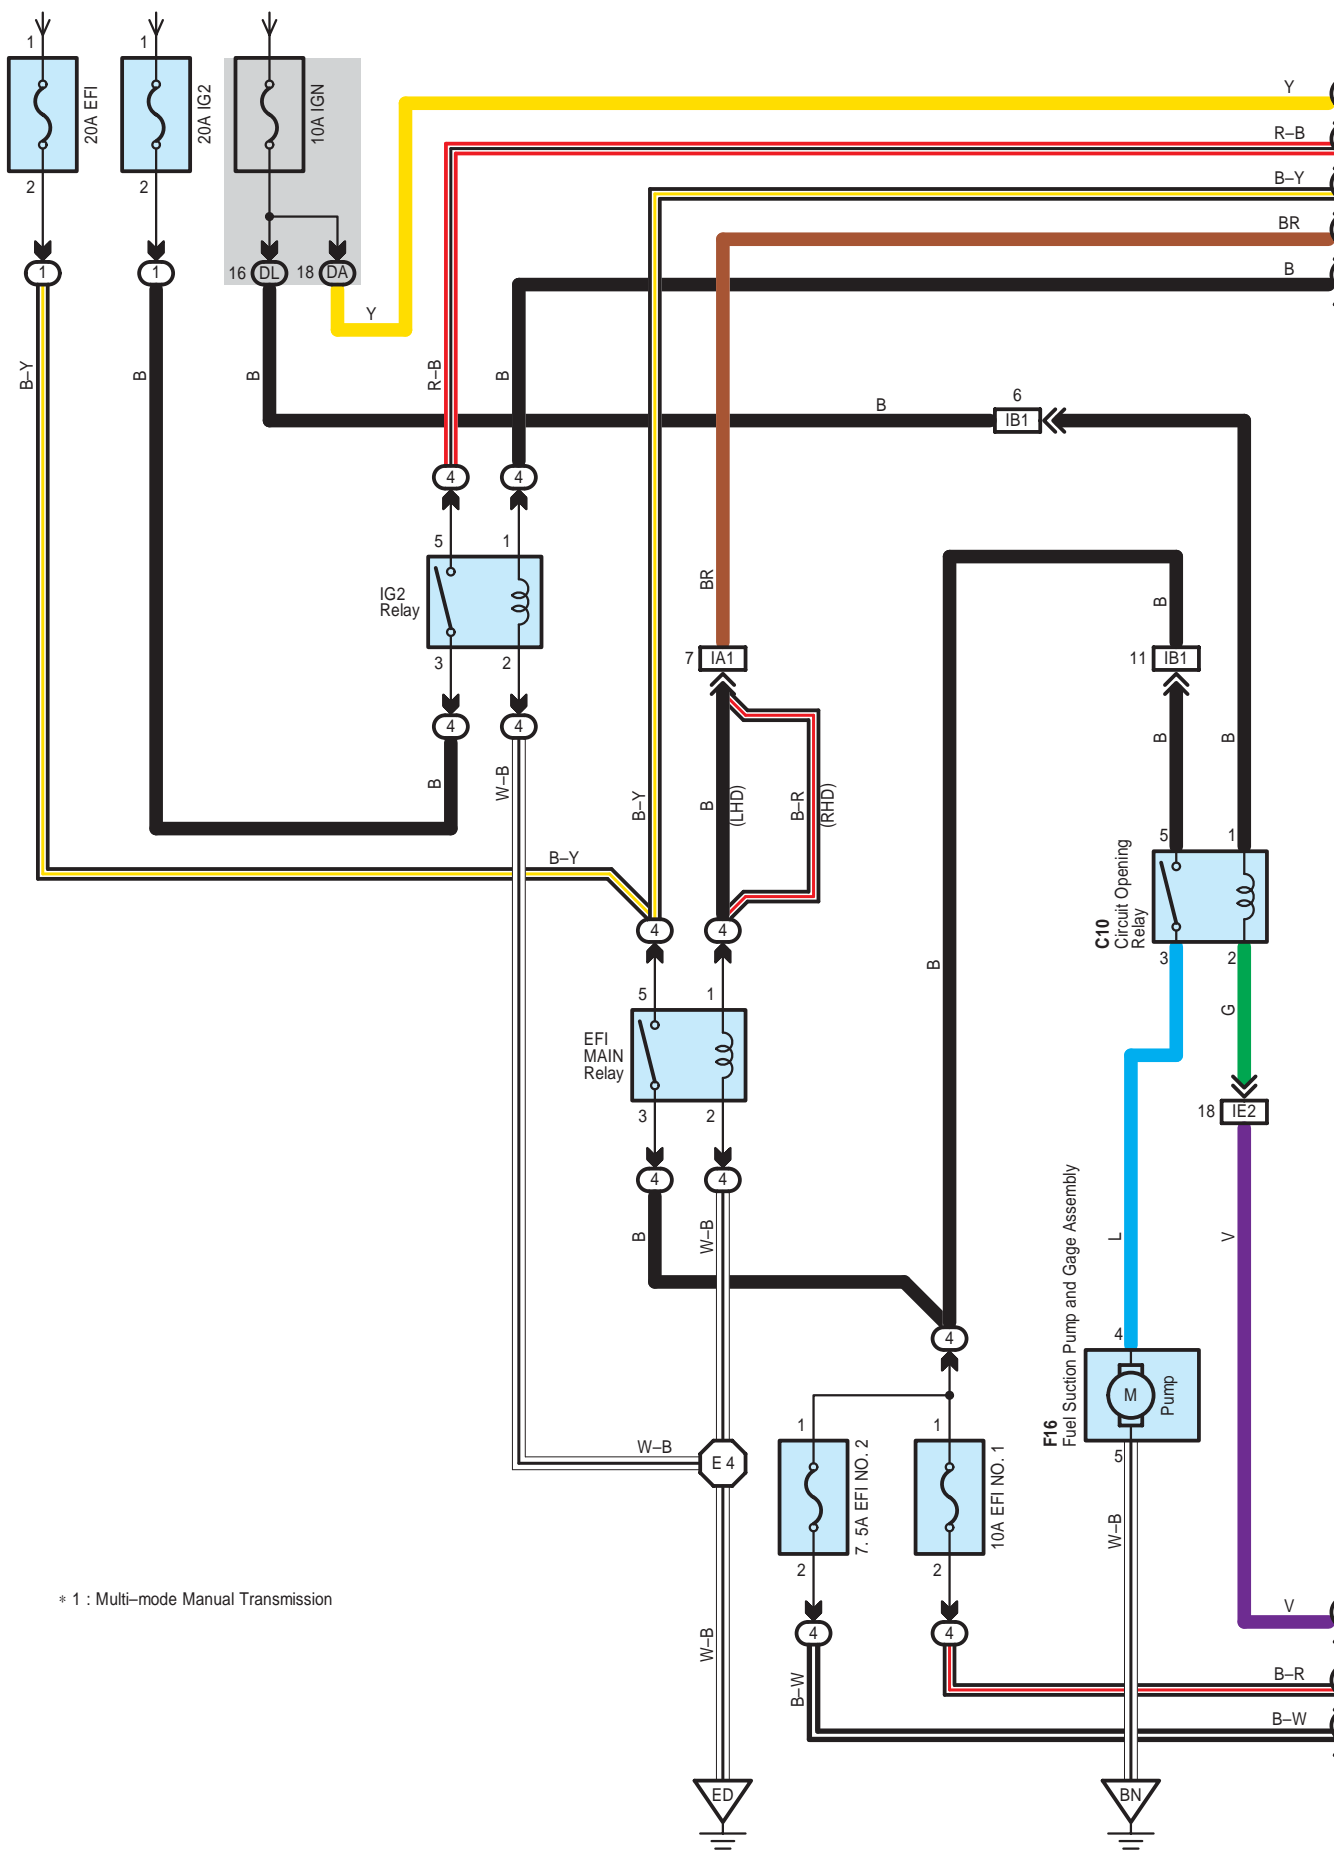


* 1 : Multi-mode Manual Transmission


Engine Control (1ZZ-FE, 3ZZ-FE)

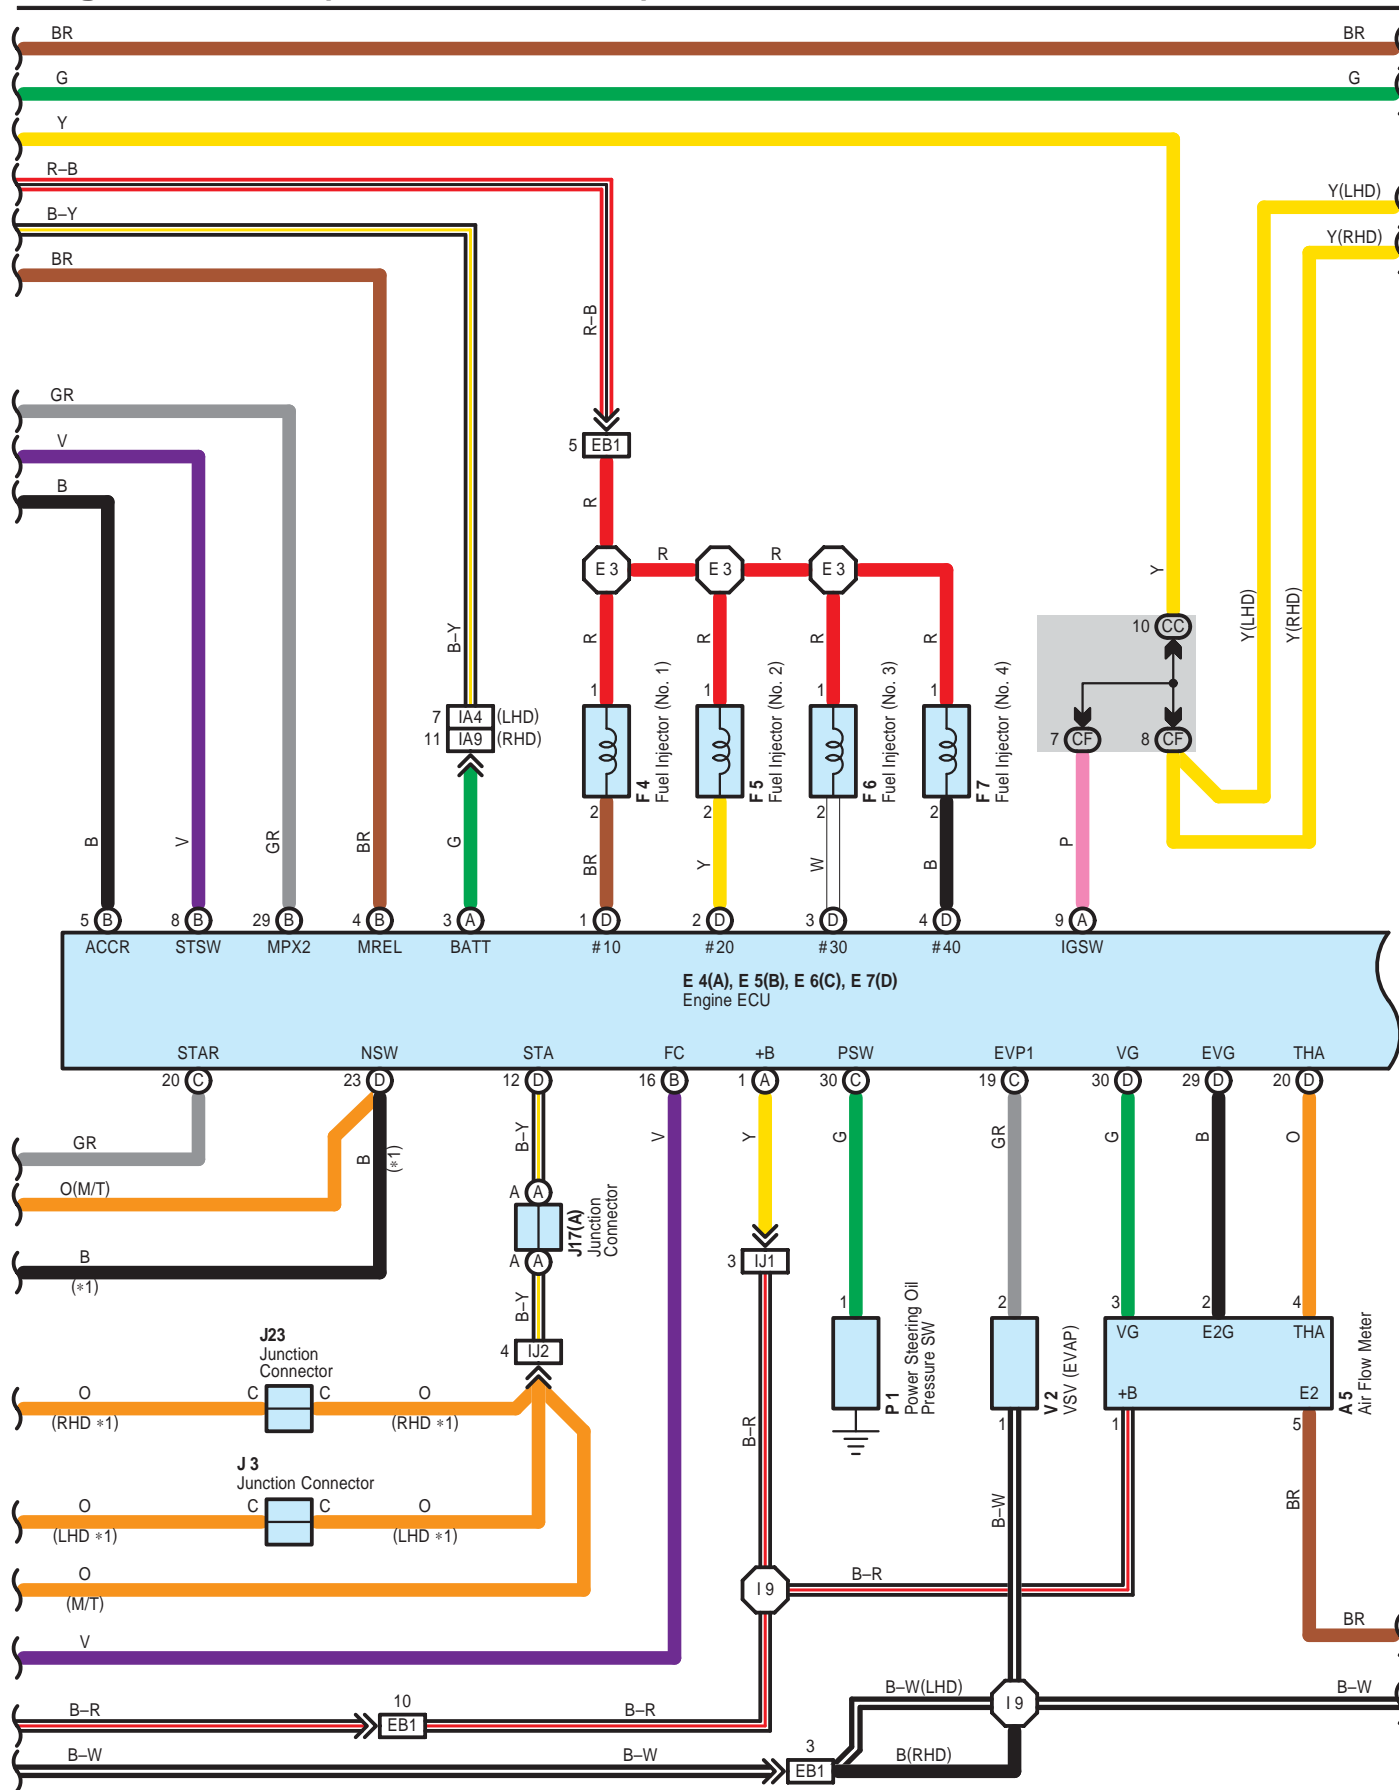





Engine Control (1ZZ-FE, 3ZZ-FE)

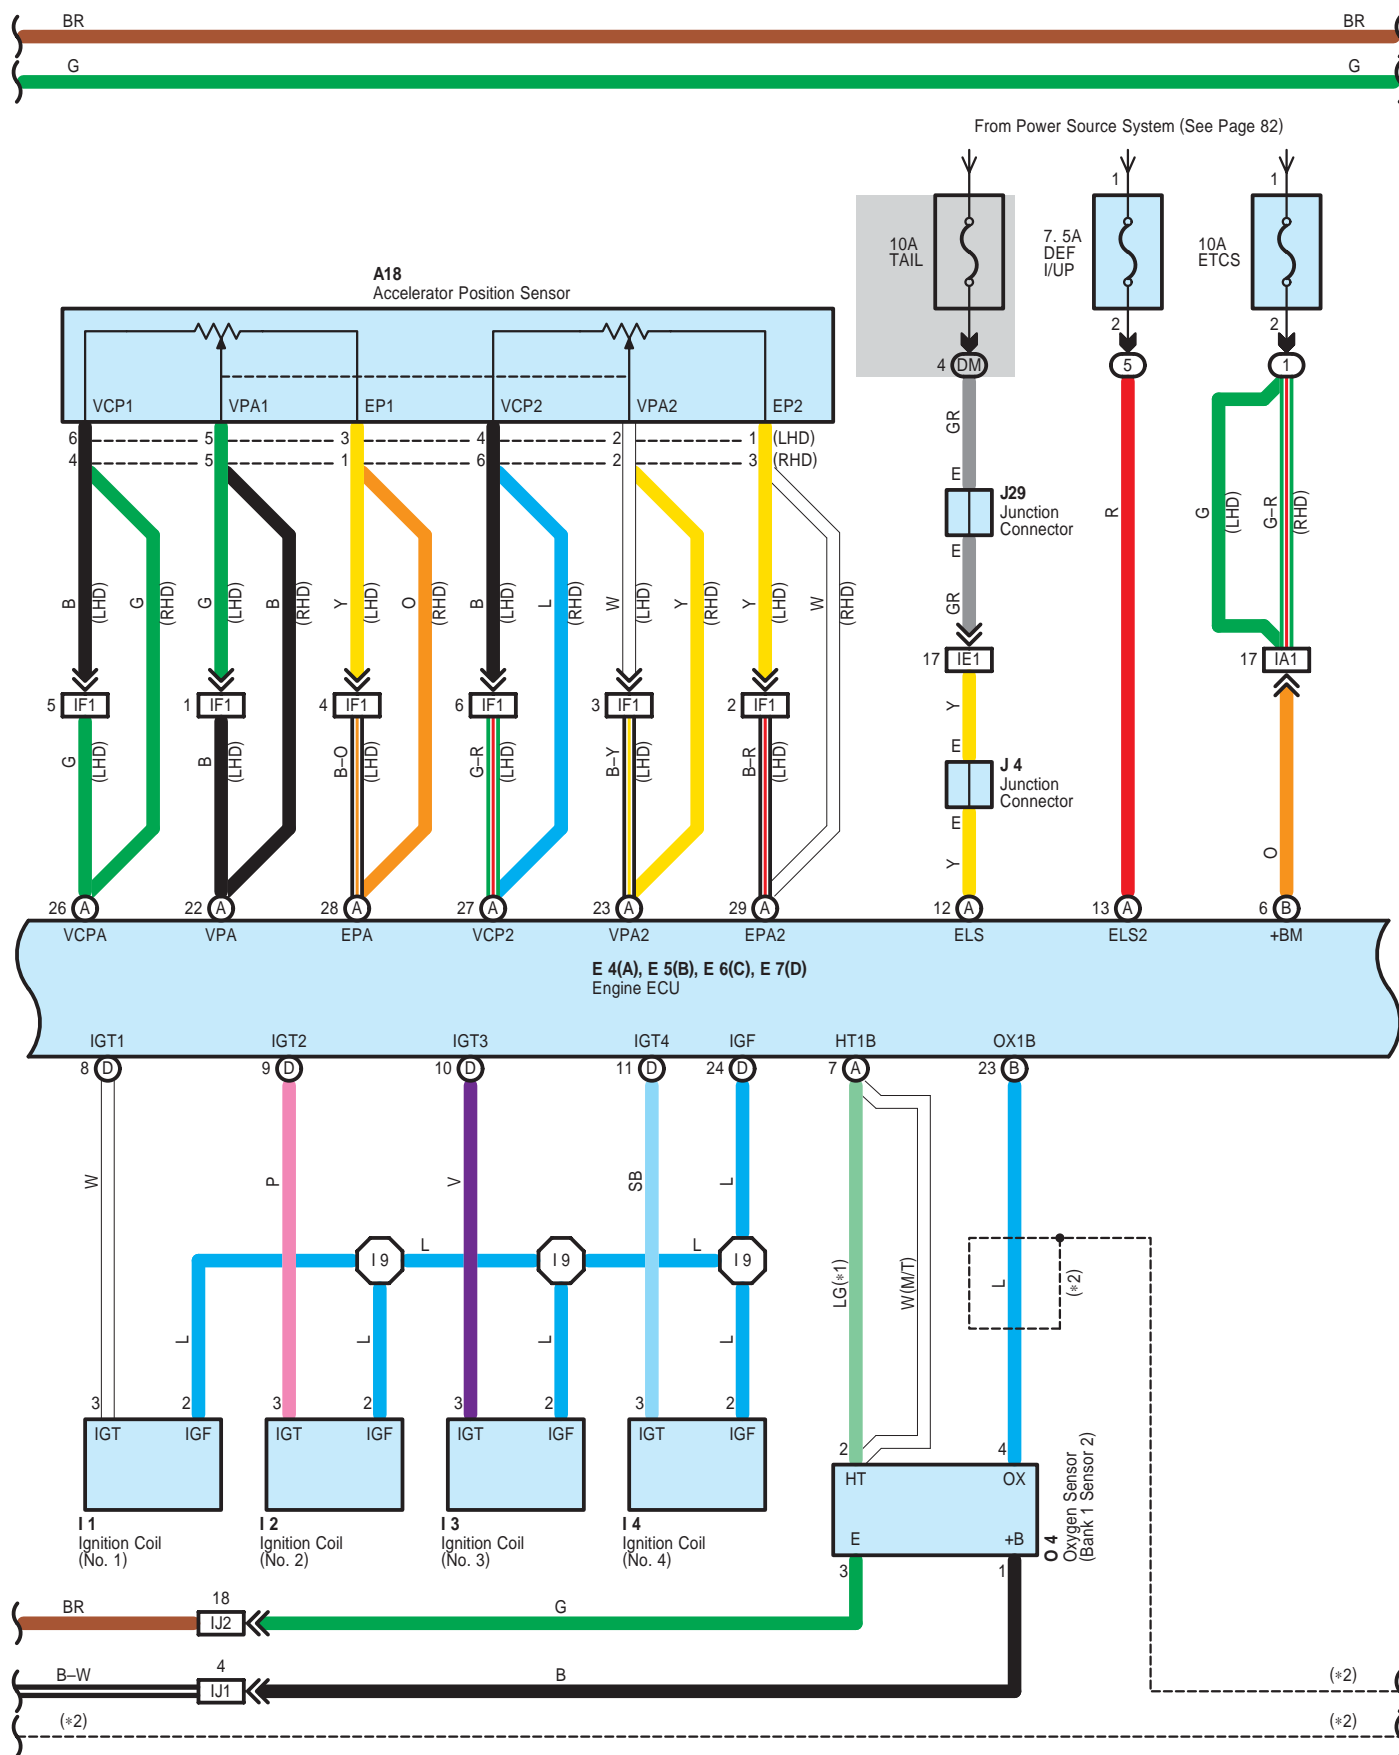

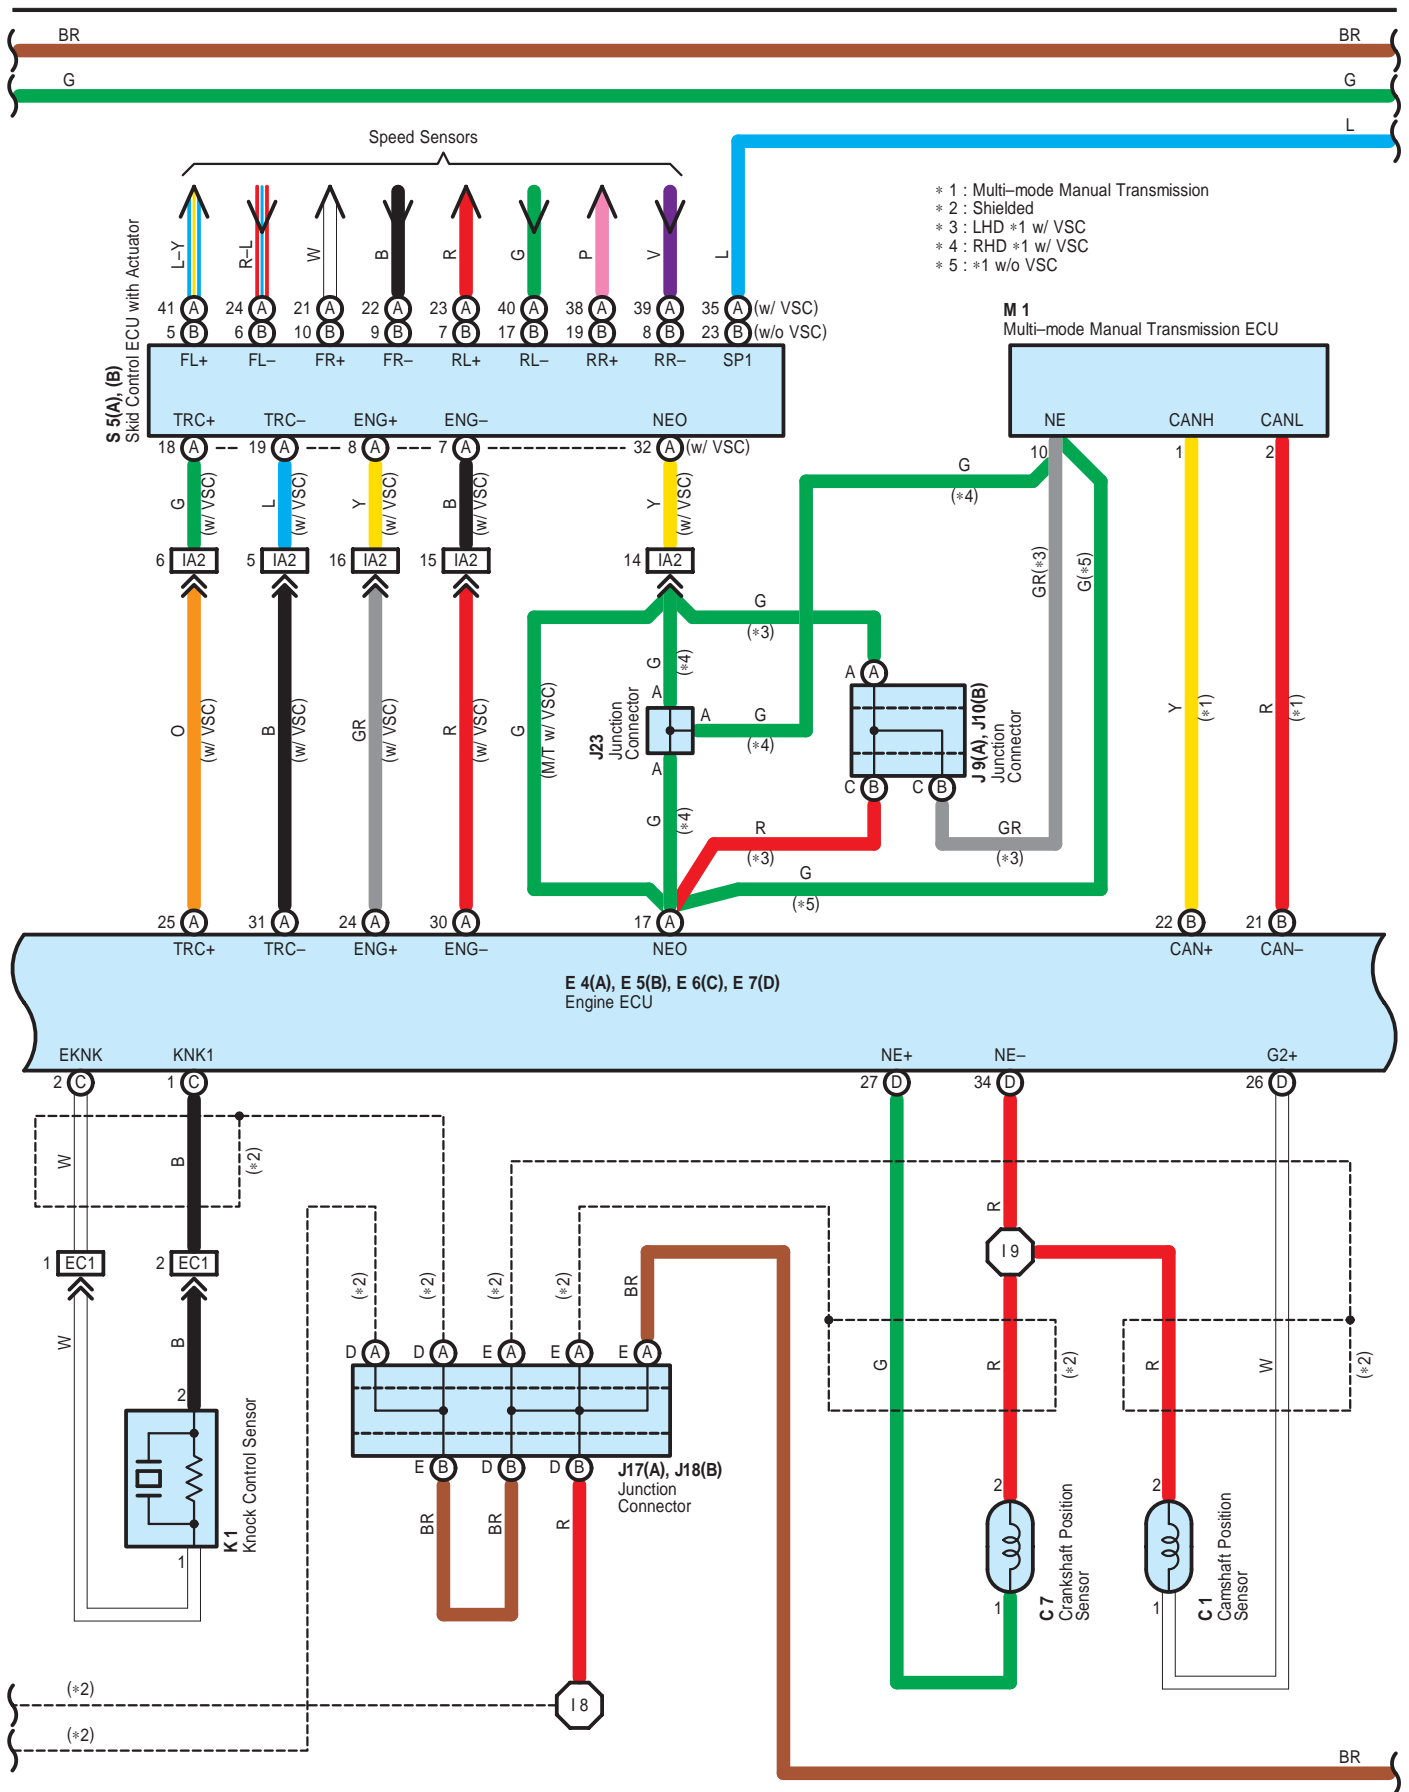

Engine Control (1ZZ-FE, 3ZZ-FE)

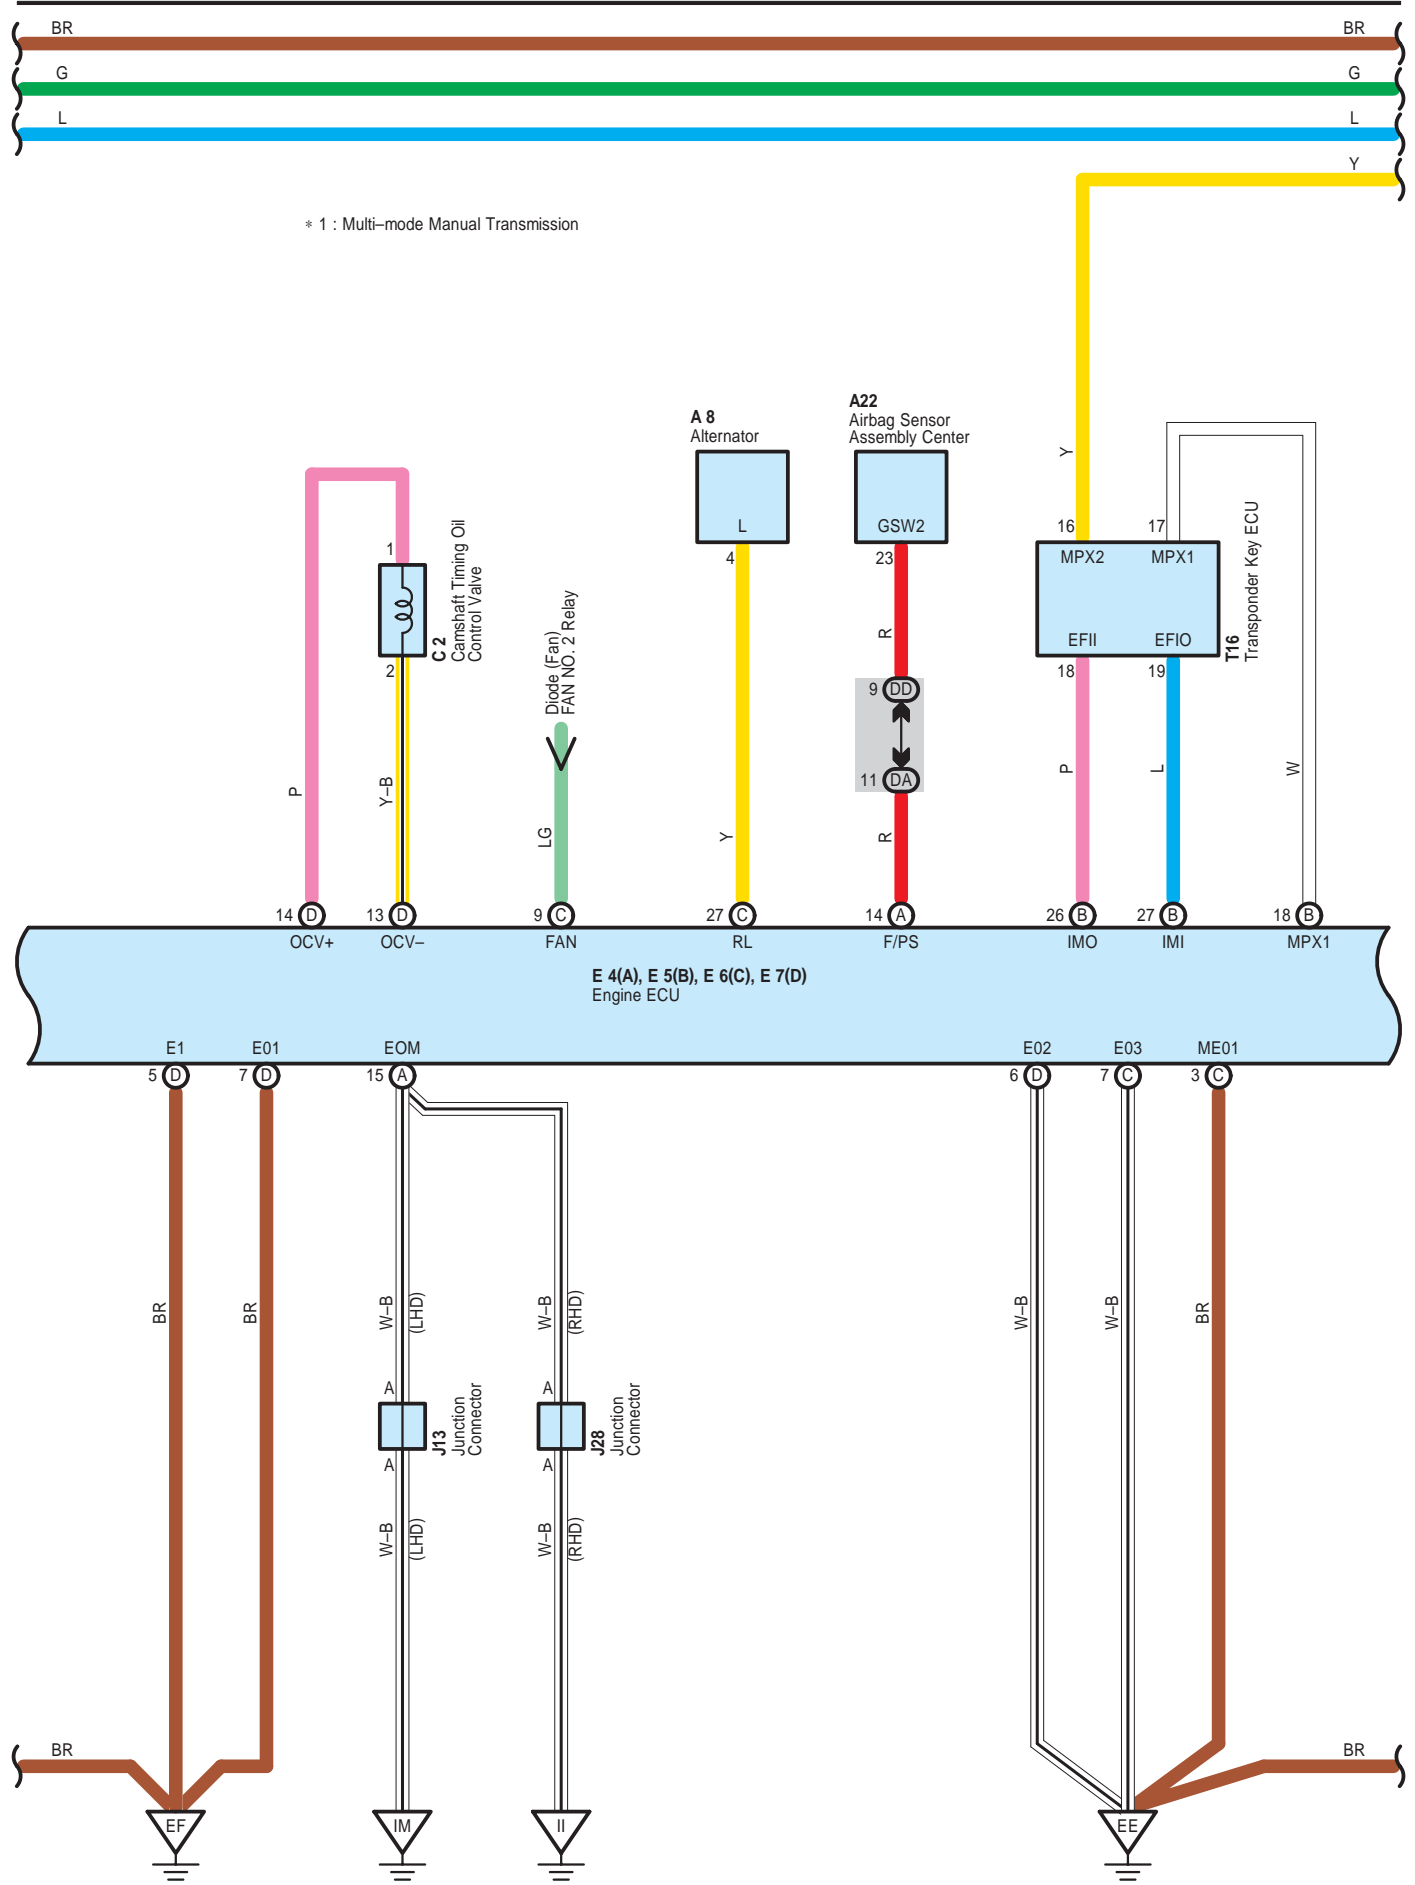

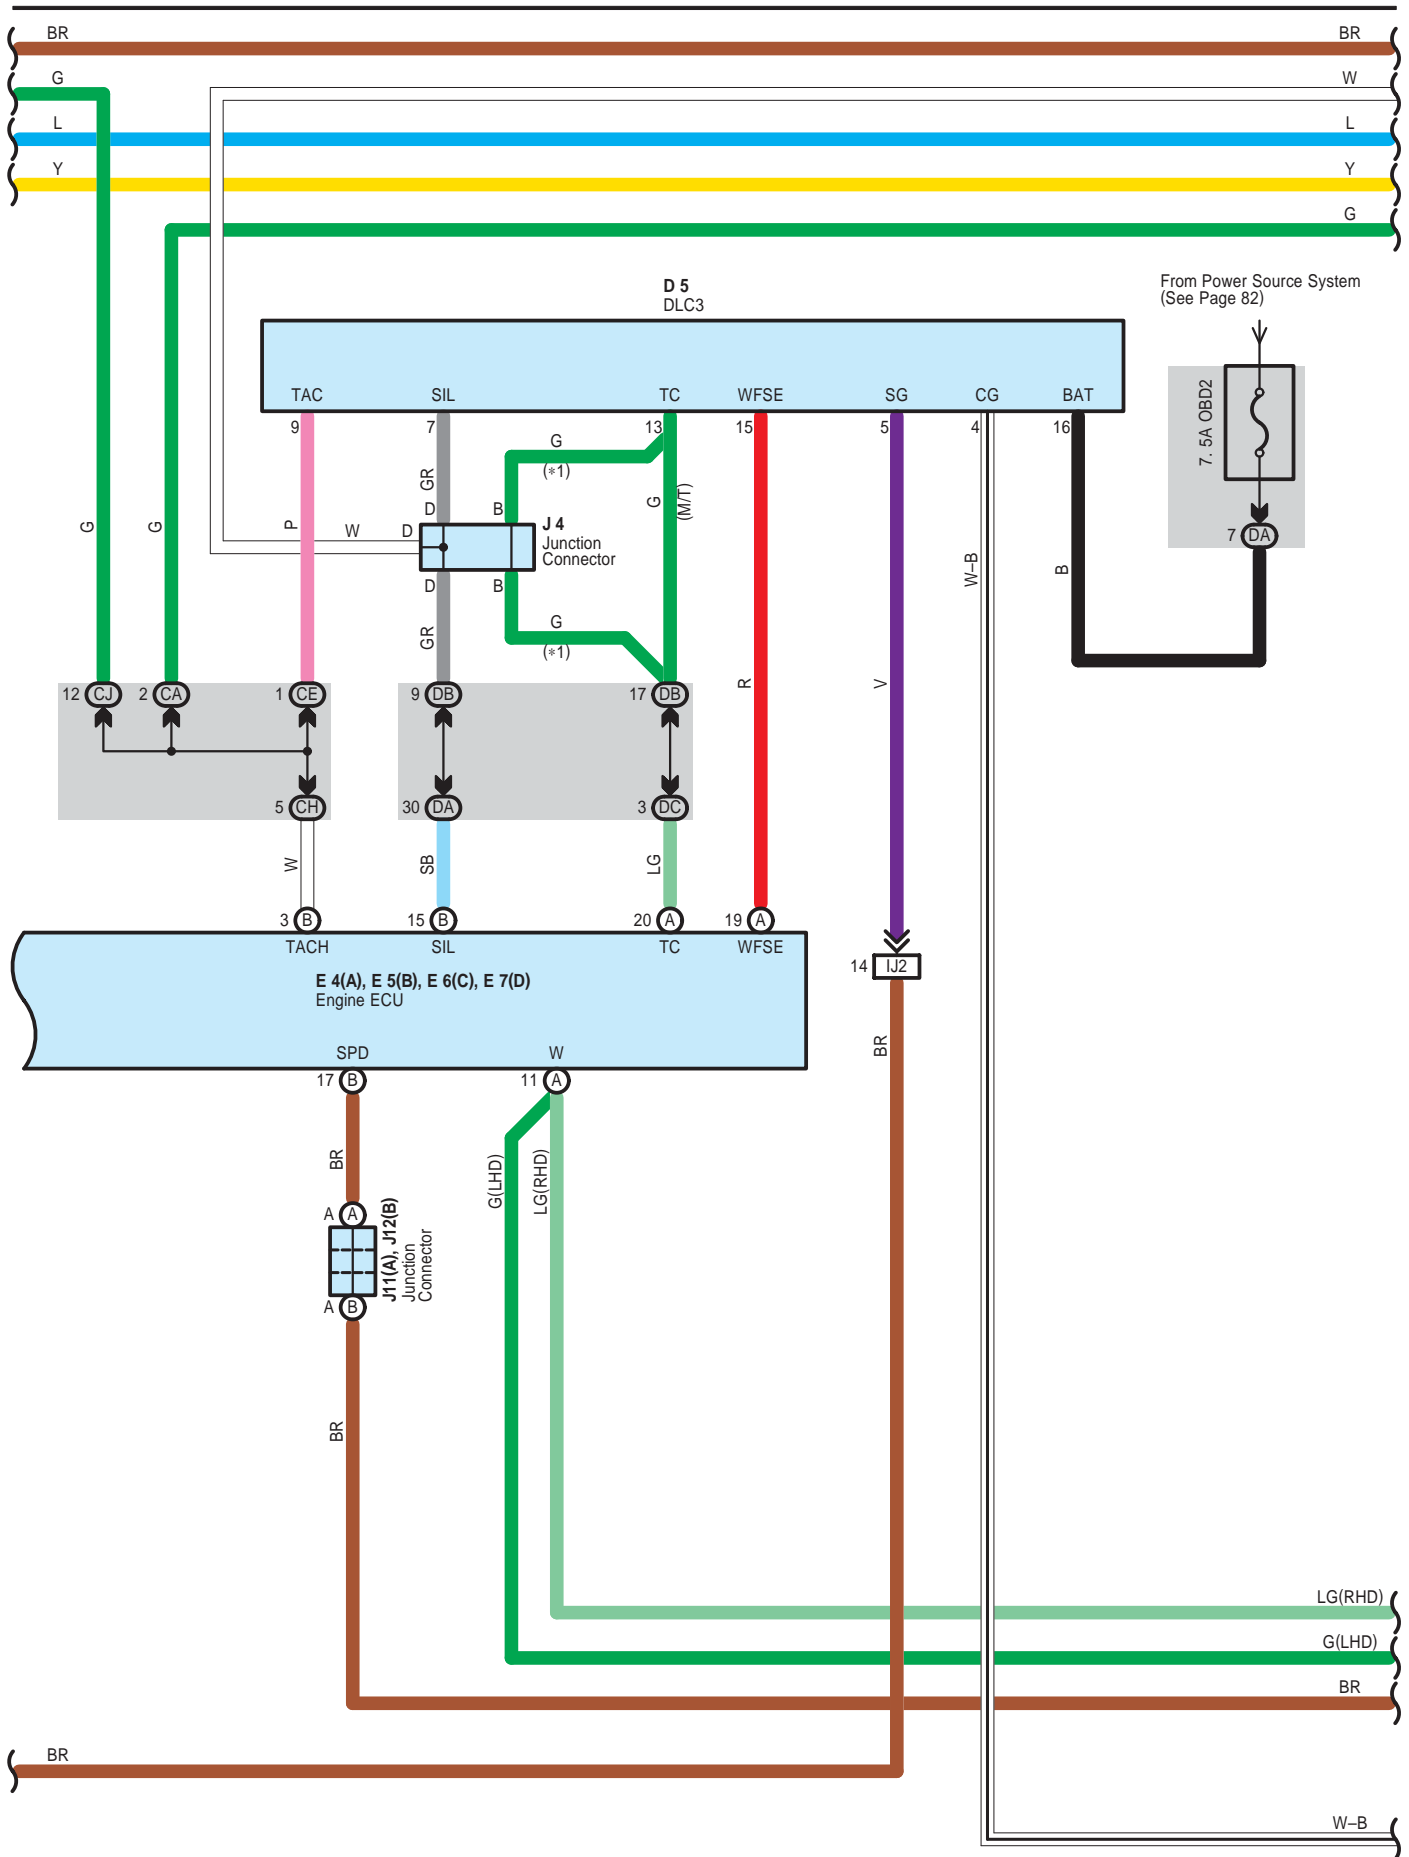

Engine Control (1ZZ-FE, 3ZZ-FE)

