

Service Hints

I9 Inner Rear View Mirror

7—Ground : Approx. 12 volts with the engine start/stop SW at IG ON position

6—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
I9	48 (LHD)	J16	45 (LHD)		
	58 (RHD)	J28	55 (RHD)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CG	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DB	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	64 (LHD)	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
	74 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	