

# Audio System without Navigation (Map Type)

## Service Hints

### R5 (A) Radio Receiver Assembly

- (A) 4-Ground : Always approx. 12 volts
- (A) 3-Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position
- (A) 7-Ground : Always continuity

## ○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A27		44 (LHD)		R7	C	47 (LHD)		S30		59 (RHD)	
		54 (RHD)				57 (RHD)		S31		49 (LHD)	
J3	A	45 (LHD)		S13		47 (LHD)				T18	
J23	B	55 (RHD)				57 (RHD)		47 (LHD)			
N3		56 (RHD)		S28		49 (LHD)		T19		57 (RHD)	
		47 (LHD)				59 (RHD)				47 (LHD)	
R5	A	57 (RHD)		S29		49 (LHD)				57 (RHD)	
						59 (RHD)					
R6	B	47 (LHD)		S30		49 (LHD)					
		57 (RHD)									

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DB	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	64 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	74 (RHD)	
IE3	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	
IK2	66 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	76 (RHD)	
IL1	66 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
	76 (RHD)	
BA1	68 (LHD)	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
	78 (RHD)	
BB1	68 (LHD)	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
	78 (RHD)	

## ▽ : Ground Points

Code	See Page	Ground Points Location
IL	64 (LHD)	Instrument Panel Brace RH
	74 (RHD)	

