

Back Door Opener

Service Hints

Body ECU

- 1, 23–Ground : Always approx. 12 volts
- 22–Ground : Approx. 12 volts with the engine start/stop SW at IG ON position
- 25–Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B8	A	44 (LHD)	B10		48 (LHD)	J32	B	48 (LHD)
		54 (RHD)			58 (RHD)			58 (RHD)
B9		48 (LHD)	J31	A	48 (LHD)			
		58 (RHD)			58 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DJ		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	68 (LHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
	78 (RHD)	
BG1	68 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)
	78 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
BR	68 (LHD)	Right Side of the Back Door
	78 (RHD)	

