

## Service Hints

### B1 Back-Up Lamp SW

2-1 : Closed with the shift lever in R position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B1	40 (*1)	J17	A	45 (LHD)	J30 B 48 (LHD)
	42 (*2)			55 (RHD)	58 (RHD)
	50 (*3)	J18	B	45 (LHD)	R13 59 (RHD)
	52 (*4)			55 (RHD)	R14 49 (LHD)
J11	45 (LHD)	J29	A	48 (LHD)	
	55 (RHD)			58 (RHD)	

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE3	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	
IJ1	66 (LHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
	76 (RHD)	

## ▽ : Ground Points

Code	See Page	Ground Points Location
BO	68 (LHD)	Lower Back Panel Left
	78 (RHD)	

\* 1 : LHD 1ZZ-FE, 3ZZ-FE    \* 2 : LHD 1CD-FTV    \* 3 : RHD 1ZZ-FE, 3ZZ-FE    \* 4 : RHD 1CD-FTV    \* 5 : 1ZZ-FE, 3ZZ-FE    \* 6 : 1CD-FTV