

## Service Hints

### C8 Cigarette Lighter

2—Ground : Approx. 12 volts with the engine start/stop SW at ACC ON or IG ON position

1—Ground : Always continuity

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	44 (LHD)	C8	54 (RHD)		

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CG	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DB	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

### : Ground Points

Code	See Page	Ground Points Location
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	