

Double Locking

Service Hints

Body ECU

- 1, 23—Ground : Always approx. 12 volts
- 25—Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A11	B	54 (RHD)	D10	58 (RHD)		J25	A	55 (RHD)
A12	A	54 (RHD)	D11	58 (RHD)		J26	B	55 (RHD)
B8	A	54 (RHD)	D12	58 (RHD)		J28		55 (RHD)
B9		58 (RHD)	D13	58 (RHD)		J32		58 (RHD)
C14		54 (RHD)	D14	58 (RHD)		K2		56 (RHD)
D6		55 (RHD)	E4	A	55 (RHD)	P9		59 (RHD)
D7		58 (RHD)	E5	B	55 (RHD)	T16		57 (RHD)
D8		58 (RHD)	I8		55 (RHD)	T17		57 (RHD)
D9		58 (RHD)	J23		55 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CB		
CE		
CF		
CH	37 (RHD)	
CJ		
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DC		
DJ		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	74 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2		
IE1	74 (RHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2		
IE3		
IK1	76 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2		
IL1	76 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IL2		
BA1	78 (RHD)	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BB1	78 (RHD)	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BC1	78 (RHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BG1	78 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

**: Ground Points**

Code	See Page	Ground Points Location
II	74 (RHD)	Left Kick Panel
IJ	74 (RHD)	Behind the Combination Meter
IM	74 (RHD)	Right Kick Panel
BN	78 (RHD)	Left Center Pillar
BQ	78 (RHD)	Right Center Pillar
BR	78 (RHD)	Right Side of the Back Door

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	78 (RHD)	Front Door LH Wire	B9	78 (RHD)	Rear Door No.1 Wire
B4	78 (RHD)	Front Door RH Wire	B12	78 (RHD)	Floor Wire
B6	78 (RHD)	Rear Door No.2 Wire			