

Door Lock Control (LHD)

System Outline

Manual Lock Operation

All the doors are locked when the door lock control SW or the driver's side door key linked SW is operated to lock.

Manual Unlock Operation

All the doors are unlocked when the door lock control SW or the driver's side door key linked SW is operated to unlock.

Service Hints

Body ECU

1, 23—Ground : Always approx. 12 volts

25—Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B8	A	44 (LHD)	D11		48 (LHD)	J16		45 (LHD)
B9		48 (LHD)	D12		48 (LHD)	J20		45 (LHD)
B10		48 (LHD)	D13		48 (LHD)	J31	A	48 (LHD)
C14		44 (LHD)	D14		48 (LHD)	J32	B	48 (LHD)
D7		48 (LHD)	E4	A	45 (LHD)	K2		46 (LHD)
D8		48 (LHD)	E5	B	45 (LHD)	P9		49 (LHD)
D9		48 (LHD)	I8		45 (LHD)	T16		47 (LHD)
D10		48 (LHD)	J3		45 (LHD)	T17		47 (LHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
CH	37 (LHD)	
CJ		
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DC		
DJ		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	64 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2		
IE1	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2		
IK2	66 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	66 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IL2		
BA1	68 (LHD)	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BB1	68 (LHD)	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BC1	68 (LHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BG1	68 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

**: Ground Points**

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
IJ	64 (LHD)	Behind the Combination Meter
IM	64 (LHD)	Right Kick Panel
BR	68 (LHD)	Right Side of the Back Door

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	68 (LHD)	Front Door LH Wire	B7	68 (LHD)	Floor No.2 Wire