

Door Lock Control (RHD)

System Outline

Manual Lock Operation

All the doors are locked when the door lock control SW or the driver's side door key linked SW is operated to lock.

Manual Unlock Operation

All the doors are unlocked when the door lock control SW or the driver's side door key linked SW is operated to unlock.

Service Hints

Body ECU

1, 23—Ground : Always approx. 12 volts

25—Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B8	A	54 (RHD)	D11	B	58 (RHD)	I8		55 (RHD)
B9		58 (RHD)	D12	A	58 (RHD)	J20		55 (RHD)
B10		58 (RHD)		B	58 (RHD)	J23		55 (RHD)
C14		54 (RHD)	D13	A	58 (RHD)	J31	A	58 (RHD)
D7		58 (RHD)		B	58 (RHD)	J32	B	58 (RHD)
D8		58 (RHD)	D14	A	58 (RHD)	K2		56 (RHD)
D9		58 (RHD)		B	58 (RHD)	P9		59 (RHD)
D10		58 (RHD)	E4	A	55 (RHD)	T16		57 (RHD)
D11	A	58 (RHD)	E5	B	55 (RHD)	T17		57 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CH	37 (RHD)	
CJ		
DA	32	
DB		
DC		
DJ		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	74 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE1	74 (RHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2		
IK1	76 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2		
IL1	76 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IL2		
BA1	78 (RHD)	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BB1	78 (RHD)	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BC1	78 (RHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BG1	78 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

**: Ground Points**

Code	See Page	Ground Points Location
II	74 (RHD)	Left Kick Panel
IJ	74 (RHD)	Behind the Combination Meter
IM	74 (RHD)	Right Kick Panel
BR	78 (RHD)	Right Side of the Back Door

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	78 (RHD)	Front Door RH Wire	B12	78 (RHD)	Floor Wire