

Headlight Beam Level Control

Service Hints

H7, H8 Headlamp Leveling Motor (LH, RH)

- 1—Ground : Approx. 12 volts with the light control SW at TAIL or HEAD position
- 3—Ground : Always continuity

H13 Headlamp Leveling SW

- 1—Ground : Approx. 12 volts with the light control SW at TAIL or HEAD position
- 5—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code		See Page
C15	44 (LHD)	H8	50 (*3)	J4		45 (LHD)
	54 (RHD)		52 (*4)			55 (RHD)
H7	40 (*1)	H13	45 (LHD)	J5	A	45 (LHD)
	42 (*2)		55 (RHD)			55 (RHD)
	50 (*3)	J1	41 (*1)	J6	B	45 (LHD)
	52 (*4)		43 (*2)			55 (RHD)
H8	40 (*1)		51 (*3)	J29		48 (LHD)
	42 (*2)		53 (*4)			58 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4D		
CD	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DL	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	72 (*4)	
IA1	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IE1	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV



: **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	66 (LHD)	Instrument Panel Wire	I4	76 (RHD)	Instrument Panel Wire