

Service Hints

H1 Headlamp Cleaner Control Relay

5—Ground : Always approx. 12 volts

1—Ground : Approx. 12 volts with the engine start/stop SW at IG ON position

3—Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B8	A	44 (LHD)	H2	40 (*1)	J2		43 (*2)
C15		44 (LHD)		42 (*2)	J5	A	45 (LHD)
H1		40 (*1)	H12	45 (LHD)	J6	B	45 (LHD)
		42 (*2)	J2	41 (*1)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5) 25 (*6)	Engine Room R/B No.1 (Engine Compartment Left)
2	26	Engine Room R/B No.2 (Near the Radiator Fan)
4	27	Engine Room R/B No.4 (Left Side of the Suspension Tower)
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
CJ	37 (LHD)	
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DL	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IE2	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	60 (*1) 62 (*2)	Engine Compartment Right
II	64 (LHD)	Left Kick Panel
IJ	64 (LHD)	Behind the Combination Meter

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	60 (*1)	Engine Room Main Wire	E1	62 (*2)	Engine Room Main Wire

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV