

Service Hints

B7 Blower SW

3—Ground : Approx. 12 volts with the engine start/stop SW at IG ON position

7—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
A19	44 (LHD)	B7	54 (RHD)	J8	B	45 (LHD)
	54 (RHD)	D1	45 (LHD)			55 (RHD)
B4	44 (LHD)		E5	55 (RHD)	J14	45 (LHD)
	54 (RHD)	45 (LHD)		55 (RHD)		
B6	44 (LHD)	J7	A	J19	45 (LHD)	
	54 (RHD)				45 (LHD)	55 (RHD)
B7	44 (LHD)					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	
5	28	Fuse Block (Lower Finish Panel)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CK	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DC		
DF		
DP	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II1	66 (LHD)	Instrument Panel Wire and A/C No.1 Wire (Near the A/C Unit)
	76 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IK	64 (LHD)	Behind the Combination Meter
	74 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV