

## System Outline

When the engine start/stop SW is IG ON and a signal is input from the alternator, if the light control SW is OFF, the daytime running light system operates.

When any of the following conditions are met, the daytime running light is canceled.

- \* Engine start/stop SW is turned OFF from IG ON.
- \* Light control SW is turned to TAIL or HEAD position

## Service Hints

### C15 Combination SW

13-16 : Closed with the light control SW at HEAD position

7-16 : Closed with the dimmer SW at HIGH or FLASH position

8-16 : Closed with the dimmer SW at FLASH position

## ○ : Parts Location

Code		See Page	Code		See Page	Code	See Page	
A8		40 (*1)	E6	C	45 (LHD)	H6	40 (*1)	
		42 (*2)	H3		40 (*1)		42 (*2)	
B8	A	44 (LHD)					42 (*2)	I8
C14		44 (LHD)	H4		40 (*1)	J5	A	45 (LHD)
C15		44 (LHD)					42 (*2)	J6
E4	A	45 (LHD)	H5		40 (*1)	T16		47 (LHD)
E5	B	45 (LHD)					42 (*2)	

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	
2	26	Engine Room R/B No.2 (Near the Radiator Fan)
5	28	Fuse Block (Lower Finish Panel)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
CH	37 (LHD)	
CJ		
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	64 (LHD)	Engine Room Main Wire and Floor Wire (Left Side of the Instrument Panel)
IE2	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)

\* 1 : LHD 1ZZ-FE, 3ZZ-FE   \* 2 : LHD 1CD-FTV   \* 3 : RHD 1ZZ-FE, 3ZZ-FE   \* 4 : RHD 1CD-FTV   \* 5 : 1ZZ-FE, 3ZZ-FE   \* 6 : 1CD-FTV

## Headlight with Daytime Running Light



### : Ground Points

Code	See Page	Ground Points Location
EB	60 (*1)	Engine Compartment Right
	62 (*2)	
EC	60 (*1)	Left Side of the Suspension Tower
	62 (*2)	
ED	60 (*1)	Engine Compartment Left
	62 (*2)	
II	64 (LHD)	Left Kick Panel
IJ	64 (LHD)	Behind the Combination Meter
IM	64 (LHD)	Right Kick Panel



### : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	60 (*1)	Engine Room Main Wire	E1	62 (*2)	Engine Room Main Wire

\* 1 : LHD 1ZZ-FE, 3ZZ-FE    \* 2 : LHD 1CD-FTV    \* 3 : RHD 1ZZ-FE, 3ZZ-FE    \* 4 : RHD 1CD-FTV    \* 5 : 1ZZ-FE, 3ZZ-FE    \* 6 : 1CD-FTV

