

Headlight without Daytime Running Light

Service Hints

C15 Combination SW

- 13-16 : Closed with the light control SW at HEAD position
- 8-16 : Closed with the dimmer SW at FLASH position
- 7-16 : Closed with the dimmer SW at HIGH or FLASH position

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
A11	B	44 (LHD)	H3	50 (*3)	H6		40 (*1)
		54 (RHD)		52 (*4)			42 (*2)
A12	A	44 (LHD)	H4	40 (*1)			50 (*3)
		54 (RHD)		42 (*2)			52 (*4)
C14		44 (LHD)		50 (*3)	J5	A	45 (LHD)
		54 (RHD)		52 (*4)			55 (RHD)
C15		44 (LHD)	H5	40 (*1)	J6	B	45 (LHD)
		54 (RHD)		42 (*2)			55 (RHD)
H3		40 (*1)		50 (*3)			
		42 (*2)		52 (*4)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	
2	26	Engine Room R/B No.2 (Near the Radiator Fan)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	60 (*1)	Engine Compartment Right
	62 (*2)	
	70 (*3)	
	72 (*4)	
EC	60 (*1)	Left Side of the Suspension Tower
	62 (*2)	
	70 (*3)	
	72 (*4)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV

