

## Service Hints

### HORN Relay

5-3 : Closed with the horn SW at on

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
H9	40 (*1)	H9	52 (*4)	S13	57 (RHD)
	42 (*2)	J27	55 (RHD)		
	50 (*3)	S13	47 (LHD)		

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	
2	26	Engine Room R/B No.2 (Near the Radiator Fan)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)

\* 1 : LHD 1ZZ-FE, 3ZZ-FE    \* 2 : LHD 1CD-FTV    \* 3 : RHD 1ZZ-FE, 3ZZ-FE    \* 4 : RHD 1CD-FTV    \* 5 : 1ZZ-FE, 3ZZ-FE    \* 6 : 1CD-FTV