

I GROUND POINT

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
J13		45 (LHD)		J18	B	55 (RHD)		J30	B	48 (LHD)	
J14	45 (LHD)		J21		45 (LHD)		58 (RHD)				
	55 (RHD)		J22		55 (RHD)		J31	A	48 (LHD)		
J16		45 (LHD)		J24		55 (RHD)			58 (RHD)		
J17	A	45 (LHD)		J28		55 (RHD)		J32	B	48 (LHD)	
		55 (RHD)		J29	A	48 (LHD)				58 (RHD)	
J18	B	45 (LHD)						58 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
	25 (*6)	
2	26	Engine Room R/B No.2 (Near the Radiator Fan)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)
4	27	Engine Room R/B No.4 (Left Side of the Suspension Tower)
6	29	R/B No.6 (Instrument Panel Center)
7	30	R/B No.7 (Instrument Panel Center)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CD	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CE	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CG	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CH	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CI	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CK	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DD		
DF		
DJ		
DP	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IC1	64 (LHD)	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
	74 (RHD)	
ID2	64 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	74 (RHD)	
IF1	66 (LHD)	Instrument Panel Wire and Switch Wire (Instrument Panel Brace LH)
II1	66 (LHD)	Instrument Panel Wire and A/C No.1 Wire (Near the A/C Unit)
	76 (RHD)	
IJ2	66 (LHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
	76 (RHD)	
IK2	66 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	76 (RHD)	
BA1	68 (LHD)	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
	78 (RHD)	
BB1	68 (LHD)	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
	78 (RHD)	
BC2	68 (LHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
	78 (RHD)	
BF1	68 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left)
	78 (RHD)	
BH1	68 (LHD)	Roof Wire and Roof No.2 Wire (Front Side of the Roof)
	78 (RHD)	

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
EA	60 (*1)	Engine Compartment Right
	62 (*2)	
	70 (*3)	
	72 (*4)	
EB	60 (*1)	
	62 (*2)	
	70 (*3)	
	72 (*4)	
EC	60 (*1)	Left Side of the Suspension Tower
	62 (*2)	
	70 (*3)	
	72 (*4)	
ED	60 (*1)	Engine Compartment Left
	62 (*2)	
	70 (*3)	
	72 (*4)	
EE	60 (*1)	Left Side of the Cylinder Head
	70 (*3)	
EF	60 (*1)	
	70 (*3)	
EG	60 (*1)	On the Transmission
	70 (*3)	
EH	62 (*2)	Near the Starter
	72 (*4)	
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IK	64 (LHD)	
	74 (RHD)	
IL	64 (LHD)	Instrument Panel Brace RH
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	
BN	68 (LHD)	Left Center Pillar
	78 (RHD)	
BO	68 (LHD)	Lower Back Panel Left
	78 (RHD)	
BP	68 (LHD)	Right Center Pillar
	78 (RHD)	
BQ	68 (LHD)	
	78 (RHD)	
BR	68 (LHD)	Right Side of the Back Door
	78 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	60 (*1)	Engine Room Main Wire	I9	76 (RHD)	Engine Wire
	62 (*2)		B1	68 (LHD)	Roof Wire
	70 (*3)			78 (RHD)	
	72 (*4)		B2	68 (LHD)	Front Door LH Wire
E4	60 (*1)			78 (RHD)	
	62 (*2)		B4	68 (LHD)	Front Door RH Wire
	70 (*3)			78 (RHD)	
	72 (*4)		B6	68 (LHD)	Rear Door No.2 Wire
I4	66 (LHD)	Instrument Panel Wire		78 (RHD)	
	76 (RHD)	B9	68 (LHD)	Rear Door No.1 Wire	
I9	66 (LHD)		Engine Wire		78 (RHD)

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV