

System Outline

Illuminated Entry System

1. Light on Condition

The light comes on when either of the following conditions is met:

- * When any of the doors is open.
- * When all doors are closed and the engine start/stop SW is set to OFF.

2. Light off Condition

The light gradually goes off when any of the following conditions is met (The dome light must be turned on):

- * When the engine start/stop SW is kept in the IG ON position for more than approximately 12 to 18 seconds after all doors are closed.
- * When all doors are closed and the driver's, front passenger's and rear doors are locked.
- * When all doors are closed and the engine start/stop SW is set to ACC ON or IG ON.

Service Hints

D7, D8, D9, D10 Door Courtesy SW (Driver's Side, Front Passenger's Side, Rear LH, RH)

1-Ground : Continuity with the door open

Body ECU

- 1, 23-Ground : Always approx. 12 volts
- 22-Ground : Approx. 12 volts with the engine start/stop SW at IG ON position
- 25-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B8	A	D9	44 (LHD)	M4	48 (LHD)
			54 (RHD)		58 (RHD)
B9		D10	48 (LHD)	R17	49 (LHD)
			58 (RHD)		59 (RHD)
C14		J4	45 (LHD)	R18	49 (LHD)
			55 (RHD)		59 (RHD)
D6		J16	A	V4	49 (LHD)
		J28	B		59 (RHD)
D7		J32	48 (LHD)	V5	49 (LHD)
			58 (RHD)		59 (RHD)
D8		K3	46 (LHD)		
			56 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	28	Fuse Block (Lower Finish Panel)

Interior Light



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CE	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CH	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CI	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DC		
DJ		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	64 (LHD)	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
	74 (RHD)	
IE1	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	
IL2	66 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
	76 (RHD)	
BC1	68 (LHD)	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
	78 (RHD)	
BG1	68 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)
	78 (RHD)	



: Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	
BR	68 (LHD)	Right Side of the Back Door
	78 (RHD)	



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	68 (LHD)	Roof Wire	B7	68 (LHD)	Floor No.2 Wire
	78 (RHD)		B12	78 (RHD)	Floor Wire

