

Service Hints

C15 Combination SW

14–16 : Closed with the light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
A13	44 (LHD)	G3		45 (LHD)	N7	C	46 (LHD)
	54 (RHD)			55 (RHD)			56 (RHD)
A16	44 (LHD)	H10		45 (LHD)	P5		46 (LHD)
	54 (RHD)			55 (RHD)			56 (RHD)
A19	44 (LHD)	H12		45 (LHD)	P6		46 (LHD)
	54 (RHD)	H13		45 (LHD)	R5	A	47 (LHD)
B7	44 (LHD)			55 (RHD)			57 (RHD)
C9	54 (RHD)	I8		45 (LHD)	R7	C	47 (LHD)
	44 (LHD)			55 (RHD)			57 (RHD)
C12	44 (LHD)	J9	A	45 (LHD)	R11		47 (LHD)
	54 (RHD)	J10	B	45 (LHD)			57 (RHD)
		54 (RHD)	J13		45 (LHD)	S11	47 (LHD)
C14	44 (LHD)	J16		45 (LHD)	S13		47 (LHD)
	54 (RHD)	J19		45 (LHD)			57 (RHD)
C15	44 (LHD)					55 (RHD)	T14
	54 (RHD)	J21		45 (LHD)	57 (RHD)		
C17	44 (LHD)	J22		55 (RHD)	T15		47 (LHD)
	54 (RHD)	J24		55 (RHD)			57 (RHD)
E8	45 (LHD)	N5	A	46 (LHD)			
	55 (RHD)			56 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)
5	28	Fuse Block (Lower Finish Panel)

Illumination



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4D	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CD	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CE	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CG	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CH	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CI	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CK	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DJ		
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	72 (*4)	



: Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IL	64 (LHD)	Instrument Panel Brace RH
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	

* 1 : LHD 1ZZ-FE, 3ZZ-FE * 2 : LHD 1CD-FTV * 3 : RHD 1ZZ-FE, 3ZZ-FE * 4 : RHD 1CD-FTV * 5 : 1ZZ-FE, 3ZZ-FE * 6 : 1CD-FTV

