

# Ignition

## Service Hints

### I1, I2, I3, I4 Ignition Coil (No.1, No.2, No.3, No.4)

1-Ground : Approx. 12 volts with the engine start/stop SW at IG ON position

4-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
E7	45 (LHD)	I2	51 (*3)	J16	45 (LHD)
	55 (RHD)	I3	41 (*1)	J19	45 (LHD)
E8	45 (LHD)		51 (*3)		55 (RHD)
	55 (RHD)	I4	41 (*1)	J22	55 (RHD)
I1	41 (*1)		51 (*3)	N2	41 (*1)
	51 (*3)	I8	45 (LHD)		51 (*3)
I2	41 (*1)		55 (RHD)		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24 (*5)	Engine Room R/B No.1 (Engine Compartment Left)
4	27	Engine Room R/B No.4 (Left Side of the Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24 (*5)	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Left)
4A	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4B		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	60 (*1)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	70 (*3)	
IA2	64 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
	74 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
ED	60 (*1)	Engine Compartment Left
	70 (*3)	
EF	60 (*1)	Left Side of the Cylinder Head
	70 (*3)	
II	64 (LHD)	Left Kick Panel
IM	74 (RHD)	Right Kick Panel

## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	60 (*1)	Engine Wire	I9	66 (LHD)	Engine Wire
	70 (*3)			76 (RHD)	

\* 1 : LHD 1ZZ-FE, 3ZZ-FE    \* 2 : LHD 1CD-FTV    \* 3 : RHD 1ZZ-FE, 3ZZ-FE    \* 4 : RHD 1CD-FTV    \* 5 : 1ZZ-FE, 3ZZ-FE    \* 6 : 1CD-FTV

