

## System Outline

### 1. Key Reminder System

Buzzer alarms that the electrical key is still in the key slot when driver's side door is opened with engine start/stop SW at ACC ON or OFF position.

### 2. Light Reminder System

Buzzer alarms that headlights or taillights are still on when driver's side door is opened with engine start/stop SW at ACC ON or OFF position.

## Service Hints

### Body ECU

- 1, 23—Ground : Always approx. 12 volts
- 22—Ground : Approx. 12 volts with the engine start/stop SW at IG ON position
- 17—Ground : Continuity with the driver's door open
- 25—Ground : Always continuity

### C14 Combination Meter

- 1—Ground : Always approx. 12 volts
- 4—Ground : Approx. 12 volts with the engine start/stop SW at IG ON position
- 5—Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B8	A	E4	A	J29	48 (LHD) 58 (RHD)
C14	44 (LHD) 54 (RHD)	E5	B	K2	46 (LHD) 56 (RHD)
C15	44 (LHD) 54 (RHD)	I8	45 (LHD) 55 (RHD)	T16	47 (LHD) 57 (RHD)
D7	48 (LHD) 58 (RHD)	J4	45 (LHD) 55 (RHD)		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	Engine Room R/B No.3 (Left Side of the Suspension Tower)
5	28	Fuse Block (Lower Finish Panel)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	27	Engine Room Main Wire and Engine Room J/B No.4 (Left Side of the Suspension Tower)
4D		
CA	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CB	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CF	36 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	36 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CH	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
CJ	37 (LHD)	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
	37 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
DA	32	Instrument Panel Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DB		
DJ		
DM	33	Floor Wire and Instrument Panel J/B (Left Side of the Instrument Panel)
DN	33	Engine Room Main Wire and Instrument Panel J/B (Left Side of the Instrument Panel)

## Key Reminder and Light Reminder

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	62 (*2)	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
	72 (*4)	
IE1	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	
IE2	64 (LHD)	
	74 (RHD)	
IL2	76 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

### : Ground Points

Code	See Page	Ground Points Location
II	64 (LHD)	Left Kick Panel
	74 (RHD)	
IJ	64 (LHD)	Behind the Combination Meter
	74 (RHD)	
IM	64 (LHD)	Right Kick Panel
	74 (RHD)	

\* 1 : LHD 1ZZ-FE, 3ZZ-FE   \* 2 : LHD 1CD-FTV   \* 3 : RHD 1ZZ-FE, 3ZZ-FE   \* 4 : RHD 1CD-FTV   \* 5 : 1ZZ-FE, 3ZZ-FE   \* 6 : 1CD-FTV

