

## System Outline

The multiplex communication system communicates among the body ECU, A/C control assembly (Automatic A/C), A/C amplifier (Manual A/C), combination meter, transponder key ECU, engine ECU, ignition control ECU and controls the following systems according to the signals from respective sensors or switches.

### Multiplex Communication System Includes Following Systems

- \* Back Door Opener
- \* Door Lock Control
- \* Double Locking
- \* Engine Immobilizer System
- \* Headlight (w/ Daytime Running Light)
- \* Interior Light
- \* Key Reminder
- \* Light Reminder
- \* Push Button Start System
- \* Seat Belt Warning
- \* Steering Lock System
- \* Wireless Door Lock Control

## ○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A11	B	44 (LHD)	C14		44 (LHD)	I8	45 (LHD)
		54 (RHD)			54 (RHD)		55 (RHD)
A12	A	44 (LHD)	E4	A	45 (LHD)	T16	47 (LHD)
		54 (RHD)			55 (RHD)		57 (RHD)
B8		44 (LHD)	E5	B	45 (LHD)	Z2	57 (RHD)
		54 (RHD)			55 (RHD)		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	64 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	74 (RHD)	